



**Hitachi Freedom Storage™
Lightning 9900™ V Series
Windows® 2000 Configuration Guide**

Notice: No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or stored in a database or retrieval system for any purpose without the express written permission of Hitachi Data Systems Corporation.

Hitachi Data Systems reserves the right to make changes to this document at any time without notice and assumes no responsibility for its use. Hitachi Data Systems products and services can only be ordered under the terms and conditions of Hitachi Data Systems' applicable agreements. All of the features described in this document may not be currently available. Refer to the most recent product announcement or contact your local Hitachi Data Systems sales office for information on feature and product availability.

This document contains the most current information available at the time of publication. When new and/or revised information becomes available, this entire document will be updated and distributed to all registered users.

Trademarks

Hitachi Data Systems is a registered trademark and service mark of Hitachi, Ltd., and the Hitachi Data Systems design mark is a trademark and service mark of Hitachi, Ltd.

Hitachi Freedom Storage, Lightning 9900, and RapidXchange are trademarks of Hitachi Data Systems.

LightPulse is a trademark of Emulex Corporation.

ESCON and S/390 are registered trademarks of International Business Machines Corporation.

Intel and Pentium are registered trademarks of Intel Corporation.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

All other brand or product names are or may be trademarks or service marks of and are used to identify products or services of their respective owners.

Notice of Export Controls

Export of technical data contained in this document may require an export license from the United States government and/or the government of Japan. Please contact the Hitachi Data Systems Legal Department for any export compliance questions.

Document Revision Level

Revision	Date	Description
MK-92RD121-P	March 2002	Preliminary Release
MK-92RD121-P1	April 2002	Revision P1, supersedes and replaces MK-92RD121-P
MK-92RD121-0	April 2002	Initial Release
MK-92RD121-1	July 2002	Revision 1, supersedes and replaces MK-92RD121-0
MK-92RD121-2	October 2002	Revision 2, supersedes and replaces MK-92RD121-1
MK-92RD121-3	January 2003	Revision 3, supersedes and replaces MK-92RD121-2
MK-92RD121-4	February 2003	Revision 4, supersedes and replaces MK-92RD121-3
MK-92RD121-5	April 2003	Revision 5, supersedes and replaces MK-92RD121-4
MK-92RD121-6	July 2003	Revision 6, supersedes and replaces MK-92RD121-5
MK-92RD121-7	January 2004	Revision 7, supersedes and replaces MK-92RD121-6
MK-92RD121-8	March 2004	Revision 8, supersedes and replaces MK-92RD121-7
MK-92RD121-09	May 2004	Revision 9, supersedes and replaces MK-92RD121-8

Source Documents for this Revision

- *Hitachi Freedom Storage™ Lightning 9900™ Windows® 2000 Configuration Guide* (MK-90RD025)
- *Hitachi Freedom Storage™ Lightning 9900™ V Series LUN Manager's User's Guide* (MK-92RD105)
- R121-0b
- RD121-0b
- RD121-2a
- RD121-3a
- RD121-3
- RD121_5
- RD121_5a
- HDS review of this document
- RAID400_RAID450_Public_Mode_Rev[1].2c.xls

Changes in this Revision

- Deleted information about the System Option Mode 254 (section 2.3 and former Table 2.1)

Referenced Documents

- ECN DKC46001-M044

Preface

The *Hitachi Freedom Storage™ Lightning 9900™ V Series Windows® 2000 Configuration Guide* describes and provides instructions for configuring the devices on the 9900V Series (9900V) array subsystem for operation with the Microsoft® Windows® 2000 operating system (OS). This configuration guide assumes that:

- The user has a background in data processing and understands peripheral storage device subsystems and their basic functions,
- The user is familiar with the 9900V array subsystems, and
- The user is familiar with the Microsoft® Windows® 2000 Server and/or Windows® 2000 Professional operating systems, the Windows® 2000 server/workstation, and the fibre-channel adapters.
- The user understands the differences between Basic Disk and Dynamic Disk. Please refer to the Microsoft® online help for information regarding these.

Note: The term “9900V” refers to the entire Hitachi Lightning 9900™ V Series subsystem family, unless otherwise noted. Please refer to the *Hitachi Freedom Storage™ Lightning 9900™ V Series User and Reference Guide* (MK-92RD100) for further information on the 9900V disk array subsystems.

For further information on Windows® 2000, please consult the Windows® 2000 online help and/or user documentation, or contact Microsoft® technical support.

Microcode Level

This document revision applies to 9900V microcode versions 21-08-2x and higher.

Comments

Please send us your comments on this document. Make sure to include the document title, number, and revision. Please refer to specific section(s) and paragraph(s) whenever possible.

- **E-mail:** doc.comments@hds.com
- **Fax:** 858-695-1186
- **Mail:**
Technical Writing, M/S 35-50
Hitachi Data Systems
10277 Scripps Ranch Blvd.
San Diego, CA 92131

Thank you! (All comments become the property of Hitachi Data Systems Corporation.)

Contents

Chapter 1	Overview of 9900V Windows® 2000 Configuration	1
1.1	9900V Windows® 2000 Configuration	1
1.2	Hitachi Lightning 9900™ V Series Subsystem	1
1.3	Device Types and Configuration Procedures	2
Chapter 2	Preparing for New Device Configuration.....	7
2.1	Configuration Requirements	7
2.2	Installing the 9900V Subsystem.....	8
2.3	System Option Modes	9
2.4	Preparing to Connect the 9900V Subsystem.....	10
2.4.1	Setting the Host Mode for the 9900V Ports.....	10
2.4.2	Configuring the 9900V Fibre-Channel Ports	11
2.5	Connecting the 9900V Subsystem and Recording the Disk Numbers.....	13
2.6	Configuring the Host Fibre-Channel Adapters.....	16
2.6.1	Configuring the Windows® 2000 Boot Disk on the 9900V Subsystem	18
2.7	Verifying the Disk and Device Parameters.....	19
2.7.1	Verifying the Disk I/O Timeout Value (TOV)	19
2.7.2	Verifying the Device Parameters.....	21
Chapter 3	Configuring the New Devices	27
3.1	Writing the Signatures	28
3.2	Creating and Formatting the Partitions.....	31
3.3	Verifying File System Operations	37
3.4	Verifying Auto-Mount	39
Chapter 4	Failover and SNMP Configuration.....	41
4.1	Host Fail-Over.....	41
4.2	Alternate I/O Path.....	43
4.3	SNMP Remote Subsystem Management.....	43
Chapter 5	Troubleshooting	45
5.1	Troubleshooting.....	45
5.2	Calling the Support Center.....	46
Appendix A	SCSI TID Maps for Fibre-Channel Adapters	47
Appendix B	LP8000/LP9002L Port Driver and Registry Parameters.....	53
Appendix C	Creating an Online LUSE for Windows® 2000	57
Acronyms and Abbreviations.....		73

List of Figures

Figure 2.1	Setting the Host Mode.....	10
Figure 2.2	Setting the Fibre-Channel Port Parameters	12
Figure 2.3	Recording the Disk Numbers for the New Devices	14
Figure 2.4	Verifying/Setting the Disk I/O TOV Using the Registry Editor	20
Figure 2.5	Emulex Configuration Tool Panel.....	23
Figure 2.6	Timer Settings Panel	23
Figure 2.7	LightPulse Utility/NT Panel	24
Figure 2.8	Modify Drive Parameter Panel	24
Figure 2.9	Verifying the Queue Depth (Emulex FC adapter shown).....	25
Figure 3.1	Disk Management Panel Showing New Devices	29
Figure 3.2	Rebooting Your PC After Each New Device Is Added	29
Figure 3.3	Writing the Signatures	30
Figure 3.4	Create Partition Wizard Screen.....	32
Figure 3.5	Specify Partition Size.....	32
Figure 3.6	Assign Drive Letter or Path	33
Figure 3.7	Format Partition Window	33
Figure 3.8	Successful Formatting Confirmation Window.....	34
Figure 3.9	Opening the Format Panel.....	35
Figure 3.10	Formatting the Partition.....	35
Figure 3.11	Verifying the Formatted Partition.....	36
Figure 3.12	Displaying the Connected Devices	37
Figure 3.13	Verifying the New Device Properties	38
Figure 3.14	Verifying the File Copy Operation.....	38
Figure 4.1	Path Failover Configuration with 9900V Clustering.....	42
Figure 4.2	9900V SNMP Environment.....	43
Figure C.1	Storage Navigator Main Panel.....	62

List of Tables

Table 1.1	9900V Device Specifications for Windows® 2000 Operations	4
Table 1.2	Volume Usage for Device Categories	5
Table 2.1	Fibre Topology Settings on the 9900V Remote Console	11
Table 2.2	Available AL-PA Values	12
Table 2.3	Sample SCSI Device Information Worksheet.....	15
Table 2.4	Execution Throttle (Queue Depth) Requirements for the 9900V Devices	16
Table 2.5	Fibre Adapter Configuration Requirements: Boot Disk	18
Table 5.1	Troubleshooting	45
Table A.1	SCSI TID Map for Emulex FC Adapter (ScanDown=0)	48
Table A.2	SCSI TID Map for Emulex FC Adapter (ScanDown=1)	50
Table B.1	LP8000/LP9002L Driver Parameters	54
Table B.2	LP8000/LP9002L Registry Parameters.....	55

Chapter 1 Overview of 9900V Windows® 2000 Configuration

1.1 9900V Windows® 2000 Configuration

This document describes the requirements and procedures for connecting the Lightning 9900™ V Series (9900V) subsystem to a Windows® 2000 server and configuring the new 9900V devices for operation with the Windows® 2000 operating system. The Hitachi Data Systems representative performs the physical installation of the 9900V subsystem. The user prepares for 9900V subsystem installation and configures the new 9900V devices with assistance as needed from the Hitachi Data Systems representative.

Configuration of the 9900V disk devices for Windows® 2000 operations includes:

- Verifying new device recognition (see section 2.5),
- Writing the signatures on the new disks (see section 3.1),
- Creating and formatting disk partitions (see section 3.2),
- Verifying file system operations (see section 3.3), and
- Verifying auto-mount (see section 3.4).

Note on the term “SCSI disk”: The 9900V logical devices are defined to the host as SCSI disk devices, even though the interface is fibre channel.

1.2 Hitachi Lightning 9900™ V Series Subsystem

The Hitachi Lightning 9900™ V Series RAID subsystem supports concurrent attachment to multiple UNIX®-based and PC-server platforms. Please contact your Hitachi Data Systems account team for the latest information on platform support. The 9900V subsystem provides continuous data availability, high-speed response, scalable connectivity, and expandable capacity for PC server and open-system storage. The 9900V subsystem can operate with multihost applications and host clusters, and is designed to handle very large databases as well as data warehousing and data mining applications that store and retrieve terabytes of data.

The Hitachi Lightning 9900™ V subsystem can be configured with fibre-channel, FICON™, and/or Extended Serial Adapter™ (ExSA™) (compatible with ESCON® protocol) ports to provide connectivity with S/390® mainframe hosts as well as open-system hosts. For further information on the 9900V subsystem, please refer to the *Hitachi Freedom Storage™ Lightning 9900™ V Series User and Reference Guide* (MK-92RD100), or contact your Hitachi Data Systems account team.

1.3 Device Types and Configuration Procedures

The 9900V subsystem supports the following types of logical devices (also called volumes). Table 1.1 lists the device specifications for the 9900V devices. Table 1.2 shows the volume usage (i.e., file system or raw device) for the 9900V devices.

OPEN-x Devices. The OPEN-x logical units (LUs) (e.g., OPEN-3, OPEN-9) are disk devices of predefined sizes. The 9900V subsystem currently supports OPEN-3, OPEN-8, OPEN-9, OPEN-E, OPEN-L, and OPEN-V devices. Please contact your Hitachi Data Systems account team for the latest information on supported LU types.

Note on OPEN-V: OPEN-V is a VLL-based volume and has no standard size.

LUSE Devices (OPEN-x*n). The LUSE devices are combined LUs which can be from 2 to 36 times larger than standard OPEN- x LUs. The LUN Expansion (LUSE) feature of the 9900V subsystem enables you to configure these custom-size devices. LUSE devices are designated as OPEN- x *n, where x is the LU type (e.g., OPEN-9*n) and $2 \leq n \leq 36$. For example, a LUSE device created from ten OPEN-3 LUs would be designated as an OPEN-3*10 disk device. This capability enables the server host to combine logical devices and access the data stored on the 9900V subsystem using fewer LU numbers (LUNs) For further information on the LUSE feature, please refer to the *Hitachi Freedom Storage™ Lightning 9900™ V Series LUN Manager User's Guide* (MK-92RD105).

For online LUSE expansion, data migration is necessary in all cases except for OPEN-V. A host reboot is not required for Windows® 2000. Please refer to Appendix C or contact your Hitachi Data Systems representative for further information.

VLL Devices (OPEN-x VLL). The VLL devices are disk devices, which are used exclusively by the 2000 host system. The Virtual LVI/LUN (VLL) feature of the 9900V subsystem (also called Virtual Logical Unit [VirtLUN]) enables you to configure custom-size LUs that are smaller than standard OPEN- x LUs. This capability enables you to “slice up” a single LU into several smaller LUs to best fit the application needs and improve host access to frequently used files. For further information on the VLL feature, please refer to the *Hitachi Freedom Storage™ Lightning 9900™ V Series LUN Expansion (LUSE) Virtual LVI/LUN User's Guide* (MK-92RD104).

Note: The OPEN-L LU type does not support Virtual LVI/LUN.

VLL LUSE Devices (OPEN-x*n VLL). The VLL LUSE devices combine VLL devices (instead of standard OPEN-x LUs) into LUSE devices. The VLL feature is used to create VLL devices, and then the LUSE feature is used to combine (concatenate) these VLL devices. The user can combine from 2 to 36 VLL devices into one VLL LUSE device. For example, an OPEN-3 LUSE volume that was created from ten OPEN-3 VLL volumes would be designated as an OPEN-3*10 VLL device.

Configuration of the 9900V disk devices for Windows® 2000 operations includes:

- Verifying new device recognition (see section 2.5),
- Writing the signatures on the new disks (see section 3.1),
- Creating and formatting disk partitions (see section 3.2),
- Verifying file system operations (see section 3.3), and
- Verifying auto-mount (see section 3.4).

HRX Devices (3390-3A/B/C, OPEN-x-HRXoto). The Hitachi RapidXchange (HRX) feature of the 9900V subsystem enables user data to be shared across S/390®, UNIX®, and PC server platforms using special multiplatform volumes. The VLL feature can also be applied to HRX devices for maximum flexibility in volume size. For further information on HRX, please refer to the *Hitachi RapidXchange User's Guide* (MK-91RD052), or contact your Hitachi Data Systems account team.

The HRX devices are not SCSI disk devices. The HRX devices must be installed and accessed as raw devices. UNIX/PC server hosts must use HRX to access the HRX devices as raw devices (no disk partition, no file system, no mount operation).

Note: The 3390-3B devices are write-protected from UNIX/PC server access. The 9900V subsystem will reject all UNIX/PC server write operations (including fibre-channel adapters) for the 3390-3B and devices.

WARNING: The 3390-3A/C and OPEN-x-HRXoto devices are *not* write-protected for UNIX/PC server access. Do not execute any write operation by the fibre-channel adapters on these devices. Do not create a partition or file system on these devices. This will overwrite any data on the HRX device and also prevent the HRX software from accessing the device. Do not write a signature on the HRX devices, unless the devices will be operated in the Microsoft® Cluster Server (MSCS) environment.

Configuration of the 9900V HRX devices for operation with Windows® 2000 includes:

- Verifying new device recognition (see section 2.5)

For Microsoft® Cluster Server (MSCS) environments only, you must also write signatures (see section 3.1) on the HRX devices. For non-MSCS environments, **DO NOT** write signatures on the HRX devices.

WARNING: After a signature has been written on an HRX device (MSCS environment only), there is no way to distinguish the HRX device from a SCSI disk device. The user must exercise extreme caution not to accidentally partition and format an HRX device. This will overwrite any data on the HRX device and also prevent the HRX software from accessing the device.

Table 1.1 9900V Device Specifications for Windows® 2000 Operations

Device Type (Note 1)	Category (Note 2)	Vendor Name	Product Name	# of Blocks (512-byte blk)	Sector Size (bytes)	# of Data Cylinders	# of Heads	# of Sectors per Track	Capacity MB (Note 3)
OPEN-3	SCSI disk	HITACHI	OPEN-3	4806720	512	3338	15	96	2347
OPEN-8	SCSI disk	HITACHI	OPEN-8	14351040	512	9966	15	96	7007
OPEN-9	SCSI disk	HITACHI	OPEN-9	14423040	512	10016	15	96	7042
OPEN-E	SCSI disk	HITACHI	OPEN-E	28452960	512	19759	15	96	13893
OPEN-L	SCSI disk	HITACHI	OPEN-L	71192160	512	49439	15	96	34761
OPEN-3*n	SCSI disk	HITACHI	OPEN-3*n	4806720*n	512	3338*n	15	96	2347*n
OPEN-8*n	SCSI disk	HITACHI	OPEN-8*n	14351040*n	512	9966*n	15	96	7007*n
OPEN-9*n	SCSI disk	HITACHI	OPEN-9*n	14423040*n	512	10016*n	15	96	7042*n
OPEN-E*n	SCSI disk	HITACHI	OPEN-E*n	28452960*n	512	19759*n	15	96	13893*n
OPEN-L*n	SCSI disk	HITACHI	OPEN-L*n	71192160*n	512	49439*n	15	96	34761*n
OPEN-3 VLL	SCSI disk	HITACHI	OPEN-3-CVS	Note 4	512	Note 5	15	96	Note 6
OPEN-8 VLL	SCSI disk	HITACHI	OPEN-8-CVS	Note 4	512	Note 5	15	96	Note 6
OPEN-9 VLL	SCSI disk	HITACHI	OPEN-9- CVS	Note 4	512	Note 5	15	96	Note 6
OPEN-E VLL	SCSI disk	HITACHI	OPEN-E- CVS	Note 4	512	Note 5	15	96	Note 6
OPEN-V VLL	SCSI disk	HITACHI	OPEN-V	Note 4	512	Note 5	15	128	Note 6
OPEN-3*n VLL	SCSI disk	HITACHI	OPEN-3*n-CVS	Note 4	512	Note 5	15	96	Note 6
OPEN-8*n VLL	SCSI disk	HITACHI	OPEN-8*n- CVS	Note 4	512	Note 5	15	96	Note 6
OPEN-9*n VLL	SCSI disk	HITACHI	OPEN-9*n- CVS	Note 4	512	Note 5	15	96	Note 6
OPEN-E*n VLL	SCSI disk	HITACHI	OPEN-E*n-CVS	Note 4	512	Note 5	15	96	Note 6
OPEN-V*n VLL	SCSI disk	HITACHI	OPEN-V*n-CVS	Note 4	512	Note 5	15	128	Note 6
3390-3A	HRX otm/mto	HITACHI	3390-3A	5825520	512	3348	15	116	2844
3390-3B	HRXmto	HITACHI	3390-3B	5822040	512	3346	15	116	2842
3390-3C	HRXotm	HITACHI	OP-C-3390-3C	5825520	512	3348	15	116	2844
HRX OPEN-3	OPEN-x- HRXoto	HITACHI	OPEN-3	4806720	512	3338	15	96	2347
3390-3A VLL	HRX otm/mto	HITACHI	3390-3A- CVS	Note 4	512	Note 5	15	116	Note 6
3390-3B VLL	HRXmto	HITACHI	3390-3B- CVS	Note 4	512	Note 5	15	116	Note 6
3390-3C VLL	HRXotm	HITACHI	OP-C-3390-3C- CVS	Note 4	512	Note 5	15	116	Note 6
HRX OPEN-3 VLL	OPEN-x- HRXoto	HITACHI	OPEN-3- CVS	Note 4	512	Note 5	15	96	Note 6

Note 1: The availability of a specific 9900V device type depends on the level of microcode installed on the 9900V subsystem.

Note 2: The category of a device (SCSI disk or HRX) determines its volume usage. Table 1.2 shows the volume usage for SCSI disk devices and HRX devices. The SCSI disk devices (OPEN-x, OPEN VLL, LUSE, VLL LUSE) require partitions and file systems for Windows® 2000 operations. The HRX devices (3390-3A/B/C, OPEN-3-HRXoto) must be installed as raw devices and can only be accessed using HRX. Do not create a partition or file system on any device used for HRX operations. Do not write a signature on an HRX device unless used in an MSCS environment.

Note on the term “SCSI disk”: The 9900V logical devices are defined to the host as SCSI disk devices, even though the interface is fibre-channel.

Table 1.2 Volume Usage for Device Categories

Category	Device Type	Volume Usage
SCSI Disk	OPEN-x, OPEN- x VLL, OPEN- x *n LUSE, OPEN-3*n VLL LUSE	File System*
HRX	3390-3A/B/C 3390-3A/B/C VLL OPEN-3 for OPEN- x -HRXoto, OPEN-3 VLL for OPEN- x -HRXoto	Raw Device

***Note:** The SCSI disk devices can also be used as raw devices (e.g., some database applications use raw devices).

Note 3: The device capacity can sometimes be changed by the BIOS or host adapter board. Also, different capacities may be due to variations such as 1 MB = 1000² or 1024² bytes.

Note 4: The number of blocks for a VLL volume is calculated as follows:

of blocks = (# of data cylinders) × (# of heads) × (# of sectors per track)

where # of sectors per track is 128 for OPEN-V and 96 for the others.

Example 1: For an OPEN-3 VLL volume with capacity = 37 MB:

of blocks = (53 cylinders-see **Note 3**) × (15 heads) × (96 sectors per track) = 76320

Example 2: For an OPEN-V VLL volume with capacity = 49 MB:

of blocks = (53 cylinders-see **Note 6**) × (15 heads) × (128 sectors per track) = 101760

Note 5: The number of data cylinders for a VLL volume is calculated as follows:

(↑...↑ means that the value should be rounded up to the next integer)

- **OPEN-3/8/9/E** The number of data cylinders for an OPEN-3/8/9/E VLL volume =

of cylinders = ↑ (capacity (MB)) × 1024/720 ↑

Example: For an OPEN-3 VLL volume with capacity = 37 MB:

of cylinders = ↑37 × 1024/720↑ = ↑52.62↑ (rounded up to next integer) = 53 cylinders

- **OPEN-V:** The number of data cylinders for an OPEN-V VLL volume =

of cylinders = ↑ (capacity (MB) specified by user) × 16/15 ↑

Example: For an OPEN-V VLL volume with capacity = 49 MB:

of cylinders = ↑49 × 16/15↑ = ↑52.26↑ (rounded up to next integer) = 53 cylinders

- **OPEN-3/8/9/E:** The number of data cylinders for an OPEN-3/8/9/E VLL LUSE volume =
of cylinders = $\lceil (\text{capacity (MB)}) \times 1024/720 \rceil \times n$

Example: For an OPEN-3 VLL LUSE volume with capacity = 37 MB and $n = 4$:

$$\text{\# of cylinders} = \lceil 37 \times 1024/720 \rceil \times 4 = \lceil 52.62 \rceil \times 4 = 53 \times 4 = 212$$

- **OPEN-V:** The number of data cylinders for an OPEN-V VLL LUSE volume =
of cylinders = $\lceil (\text{capacity (MB) specified by user}) \times 16/15 \rceil \times n$

Example: For an OPEN-V VLL LUSE volume with capacity = 50 MB and $n = 4$:

$$\text{\# of cylinders} = \lceil 50 \times 16/15 \rceil \times 4 = \lceil 53.33 \rceil \times 4 = 54 \times 4 = 216$$

- The number of data cylinders for a 3390-3A/C VLL volume =
of cylinders = (number of cylinders) + 9
- The number of data cylinders for a 3390-3B VLL volume =
of cylinders = (number of cylinders) + 7

Note 6: The size of an OPEN-3/8/9/E VLL volume is specified by capacity in MB, not number of cylinders. The size of an OPEN-V VLL volume can be specified by capacity in MB or number of cylinders. The user specifies the volume size using the 9900V Virtual LVI/LUN software.

Chapter 2 Preparing for New Device Configuration

2.1 Configuration Requirements

The requirements for 9900V Series (9900V) Windows® 2000 configuration are:

- Hitachi Lightning 9900™ V subsystem, all-open or multiplatform configuration.
 - The 9900V LUN Manager software is used to define the fibre channel ports and configure the fibre-channel (FC) ports. If the remote LUN Manager feature is not installed, the Hitachi Data Systems representative can configure the LUN mapping and FC ports using the 9900V service processor (SVP). For information on LUN configuration services, please contact your Hitachi Data Systems account team.

Note: The availability of 9900V features and devices (e.g., OPEN VLL, 3390-3C) depends on the level of microcode installed on the 9900V subsystem.

- Windows® 2000 server/workstation. Please refer to the Microsoft® user documentation for PC server hardware requirements.
- Windows® 2000 Server or Windows® 2000 Professional operating system

Important: Please contact Microsoft® to make sure that the most current OS patches are installed.

Note: For the latest information on Windows® 2000 version support, please contact your Hitachi Data Systems account team.

- Fibre-channel adapters. Make sure to install all utilities, tools, and drivers that come with the adapter(s). For information on driver requirements for the Emulex LP8000 host bus adapter (HBA), see Appendix B. For information on driver requirements for other adapters, please refer to the user documentation for the adapter or contact the vendor.
 - The 9900V subsystem supports: 2 Gbps fibre-channel interface, including shortwave non-OFC (open fibre control) optical interface and multimode optical cables with LC connectors; and 1 Gbps fibre-channel interface, including shortwave non-OFC optical interface and multimode optical cables with SC connectors. Do not connect any OFC-type fibre-channel interface to the 9900V subsystem.
 - For information on supported fiber-channel adapters (FCAs), optical cables, hubs, and fabric switches, please contact your Hitachi Data Systems account team or the Hitachi Data Systems Support Center (see section 5.2).

Note: Support for dynamic disks is not available at this time.

2.2 Installing the 9900V Subsystem

The 9900V subsystem comes with all hardware and cabling required for installation. Installation of the 9900V subsystem involves the following activities:

1. **Hardware installation.** The Hitachi Data Systems representative performs this activity, which includes:

- Assembling all hardware and cabling
- Installing and formatting the logical devices (LDEVs) using the SVP. Make sure to get the desired LDEV configuration information from the user, including the desired number of OPEN-x, LUSE, VLL, VLL LUSE, and multiplatform (HRX) devices.

Note: The 9900V subsystem supports up to 256 devices per fibre-channel port, but the 9900V subsystem up to 32 LUNs for Windows® 2000. Therefore, Windows® 2000 has a current limit of 32 devices per FC port.

- Installing the fibre-channel adapters and cabling: The total fibre cable length attached to each fibre-channel adapter must not exceed 500 meters (1,640 feet). Do not install/de-install fibre-channel cabling while Windows® 2000 is active. This can cause the system to hang. Always confirm that Windows® 2000 is shut down before connecting/disconnecting the fibre cable.

9900V FC Port: The fibre topology parameters for each 9900V fibre port depend on the type of device to which the 9900V port is connected. Determine the topology parameters supported by the device, and set your topology accordingly (see section 2.4.2). The type of 9900V port is also important.

Note: The Hitachi Data Systems representative must use the 9900V Maintenance Manual during all installation activities. Follow all precautions and procedures in the maintenance manual, and always check all specifications to ensure proper installation and configuration.

2. **LUN Manager installation.** The user can perform this activity. You will use the LUN Manager software to configure the 9900V fibre channel ports. For instructions on installing and using the LUN Manager software, please refer to the *Hitachi Lightning 9900™ V Series Remote Console - Storage Navigator User's Guide* (MK-92RD101) and the *Hitachi Lightning 9900™ V Series LUN Manager User's Guide* (MK-92RD105).

Note: If the remote LUN Manager feature is not installed, please contact your Hitachi Data Systems account team for information on fibre-channel configuration services.

2.3 System Option Modes

To provide greater flexibility and enable the 9900V to be tailored to unique customer operating requirements, additional operational parameters, or system option modes, are available for the 9900V subsystem. At installation, the 9900V modes are set to their default values (**OFF**), so make sure to discuss these settings with your Hitachi Data Systems team. The 9900V modes can only be changed by the Hitachi Data Systems representative.

Note: This 9900V mode information was current at the time of publication of this document but may change. Please contact your Hitachi Data Systems representative for the latest information on the 9900V System Option Modes.

2.4 Preparing to Connect the 9900V Subsystem

Before the 9900V is connected to your Win2000 system, you must perform the following tasks:

- Set the host mode for the 9900V fiber channel ports (see section 2.4.1), and
- Configure the 9900V fibre-channel ports (see section 2.4.2).

2.4.1 Setting the Host Mode for the 9900V Ports

The 9900V ports have special modes which must be set for the connected operating system. Use the LUN Manager software to set the host mode for each port (see Figure 2.1). The required host mode setting for 9900V Windows® 2000 operations is **0C**. The host mode setting 0C is required to support MSCS failover and to recognize more than 8 LUs. Please note that it is not acceptable to use any other host mode setting except 0C.

Note: If a path is defined from Windows 2000 host to an LDEV and you want to perform an LUSE operation that handles this path-defined LDEV, you must ensure that the host mode of the Windows 2000 host is 2C (Windows Extension) to register Windows® server hosts in the host group.

Note: If you register Windows® server hosts in a host group, the host mode should be either 0C (Windows®) or 2C (Windows® Extension). You should use 2C (Windows® Extension) if you are considering creating LUSE volumes, because you cannot create a LUSE volume if the host mode of a host group is 0C (Windows®) and an LU path is defined between the host group and a logical volume. For detailed information about LUSE, please refer to *Hitachi Lightning 9900™ V Series LUN Expansion (LUSE) and Virtual LVI/LUN (VLL) User's Guide* (MK-92RD104).

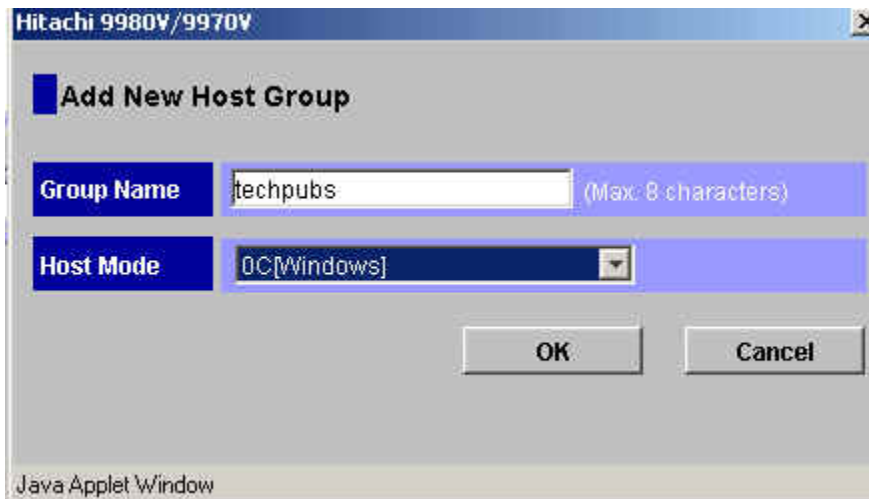


Figure 2.1 Setting the Host Mode

2.4.2 Configuring the 9900V Fibre-Channel Ports

You need to configure the 9900V fibre-channel ports to define the fibre parameters (see Table 2.1, Figure 2.2, and Table 2.2). You will use the LUN Manager software to configure the 9900V fibre-channel ports. For instructions on using LUN Manager, please refer to the *Hitachi Lightning 9900™ V Series LUN Manager User's Guide* (MK-92RD105).

Note: The 9900V subsystem supports up to 256 devices per fibre-channel port, but the 9900V subsystem up to 32 LUNs for Windows® 2000. Therefore, Windows® 2000 has a current limit of 32 devices per FC port.

Fibre topology. Figure 2.2 shows the LUN Manager panel used to define the port parameters, and Table 2.1 explains the settings on this panel. You will select the appropriate settings for each 9900V fibre-channel port based on the device to which the port is connected. Determine the topology parameters supported by the device, and set your topology accordingly. The type of 9900V port is also important. **Note:** If you plan to connect different types of servers to the 9900V via the same fabric switch, you must use the **zoning** function of the fabric switch.

Port address. In fabric environments, the port addresses are assigned automatically by fabric switch port number and are not controlled by the 9900V port settings. In arbitrated loop environments, the port addresses are set by entering an AL-PA (arbitrated-loop physical address, or loop ID). Table 2.2 shows the available 9900V AL-PA values ranging from 01 to EF. Fibre-channel protocol uses the AL-PAs to communicate on the fibre-channel link, but the software driver of the platform host adapter translates the AL-PA value assigned to the 9900V port to a SCSI TID. See Appendix A for a description of the AL-PA-to-TID translation. **Note on loop ID conflict:** The AL-PAs should be unique for each device on the loop to avoid conflicts.

Note: For the latest fibre topology information, please contact your Hitachi Data Systems account team.

Table 2.1 Fibre Topology Settings on the 9900V Remote Console

Fabric Parameter	Connection Parameter	Provides:
ON	FC-AL	FL-port (Fabric port)
ON	Point-to-Point	F-port (Fabric port)
OFF	FC-AL	NL-port (Private arbitrated loop)
OFF	Point-to-Point	<i>Not supported</i>

Note: Please contact Hitachi Data Systems for detailed information about port topology configurations supported by each host bus adapter/switch combination. Not all types of switches support F-port connection.

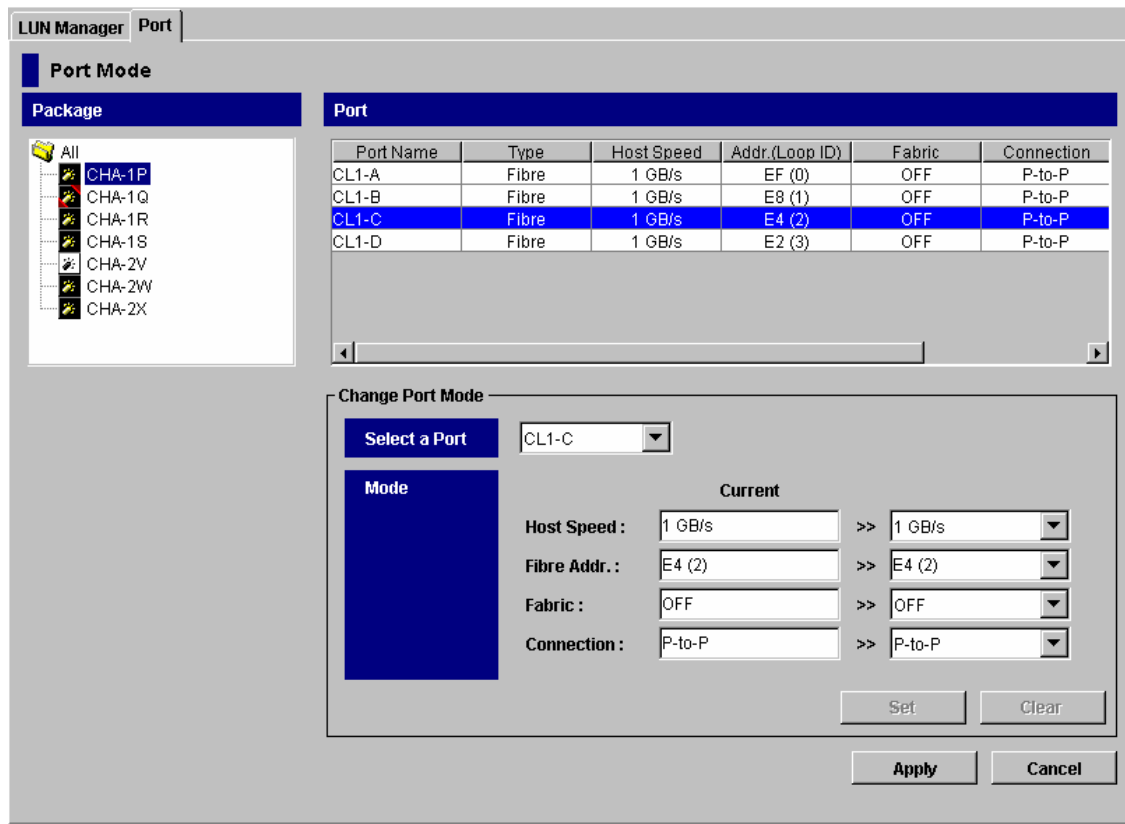


Figure 2.2 Setting the Fibre-Channel Port Parameters

Table 2.2 Available AL-PA Values

EF	CD	B2	98	72	55	3A	25
E8	CC	B1	97	71	54	39	23
E4	CB	AE	90	6E	53	36	1F
E2	CA	AD	8F	6D	52	35	1E
E1	C9	AC	88	6C	51	34	1D
E0	C7	AB	84	6B	4E	33	1B
DC	C6	AA	82	6A	4D	32	18
DA	C5	A9	81	69	4C	31	17
D9	C3	A7	80	67	4B	2E	10
D6	BC	A6	7C	66	4A	2D	0F
D5	BA	A5	7A	65	49	2C	08
D4	B9	A3	79	63	47	2B	04
D3	B6	9F	76	5C	46	2A	02
D2	B5	9E	75	5A	45	29	01
D1	B4	9D	74	59	43	27	
CE	B3	9B	73	56	3C	26	

2.5 Connecting the 9900V Subsystem and Recording the Disk Numbers

After you have configured the host modes and fibre-channel ports for the 9900V, you are ready to connect the 9900V subsystem to the Windows® 2000 system. The 9900V subsystem comes with all hardware and cabling required for connection to the host system(s).

To connect the 9900V subsystem to the Win2000 system:

1. **Verify subsystem installation.** The Hitachi Data Systems representative verifies that the status of the fibre-channel ports and LDEVs is NORMAL. The Hitachi Data Systems representative should also check the fibre-channel ports and fibre device parameters to make sure that all 9900V devices are unique for each host system.
2. **Shut down and power off the Win2000 system.** The user should perform this activity. You must shut down and power off the Win2000 system before connecting the 9900V. To shut down and power off the Win2000 system:
 - a) Shut down the Win2000 operating system as usual.
 - b) Power off all peripheral devices except for the 9900V subsystem.
 - c) Power off the Win2000 system. You are now ready to connect the 9900V subsystem.
3. **Connect the 9900V to the Win2000 system.** The Hitachi Data Systems representative installs the fibre cables between the 9900V and the Win2000 system. **Note:** The Hitachi Data Systems representative must use the 9900V Maintenance Manual during all installation activities. Follow all precautions and procedures, and check all specifications to ensure proper installation and configuration.
4. **LUN security.** If the 9900V is connected to fabric, you must control access to the 9900V LUs before you power on the Win2000 system to prevent failures on other systems connected to the same fabric. You can use any of several methods for ensuring that the Win2000 system sees only the LUs it owns (e.g., LUN Security, set FC adapters to not automap LUNs, switch zoning). For further information on using the 9900V LUN Security LUN Manager software, please refer to the *Hitachi Lightning 9900™ V Series LUN Manager/SANTinel User's Guide* (MK-92RD105).
5. **Power on and start booting the Win2000 system.** The user should perform this activity. To power on the Win2000 system after connecting the 9900V:
 - a) Power on the Win2000 system display.
 - b) Power on all peripheral devices. The 9900V should already be on. The host modes and fibre channel ports should already be configured (see sections 2.4.1-2.4.2). If not, the Win2000 system may need to be restarted in order to recognize the new devices.
 - c) Confirm the ready status of all peripheral devices, including the 9900V.
 - d) Power on the Win2000 system connected to the 9900V.

6. **Verify new device recognition, and record the disk numbers.** When the adapter connected to the 9900V starts displaying the new devices (see Figure 2.3), pause the screen and record the disk number for each new device on your SCSI Device worksheet (see Table 2.3). You will need the disk numbers for the devices when you write signatures on the devices (see section 3.1).

Note: You will also need the disk numbers for the HRX devices when you create the HRX volume definition file (**datasetmount.dat**). For example, if disk number 3 is a 3390-3B HRX device, the entry for this volume in the HRX volume definition file is:

```
\\.\PHYSICALDRIVE3 XXXXXX 3390-3B (XXXXXX is the VOLSER)
```

7. **Reboot.** After recording the disk numbers, reboot the Win2000 system and get ready to access the fibre-channel adapter utility while the system is booting up.

```
Adaptec AHA-2944 Ultra/Ultra W Bios v1.32.1
© 1997 Adaptec, Inc. All Rights Reserved
<<<Press <CTRL><A> for SCSISelect™ Utility>>>

SCSI ID:0
  LUN: 0 HITACHI OPEN-9 Hard Disk 0
  LUN: 1 HITACHI OPEN-9 Hard Disk 1
  LUN: 2 HITACHI OPEN-3 Hard Disk 2
  LUN: 3 HITACHI OPEN-3 Hard Disk 3
  LUN: 4 HITACHI OPEN-3 Hard Disk 4
  LUN: 5 HITACHI OPEN-9 Hard Disk 5
  LUN: 6 HITACHI 3390-3A Hard Disk 6
  LUN: 7 HITACHI 3390-3A Hard Disk 7
SCSI ID:1
  LUN: 0 HITACHI OPEN-3 Hard Disk 8
  LUN: 1 HITACHI OPEN-3 Hard Disk 9
  LUN: 2 HITACHI OPEN-3 Hard Disk 10
:
:
```

Figure 2.3 Recording the Disk Numbers for the New Devices

Note: The Win2000 system assigns the disk numbers sequentially starting with the local disks and then by adapter, and by TID/LUN. If the 9900V is attached to the first adapter (displayed first during system start-up), the disk numbers for the new devices will start at 1 (the local disk is 0). If the 9900V is not attached to the first adapter, the disk numbers for the new devices will start at the next available disk number. For example, if 40 disks are attached to the first adapter (disks 1-40) and the 9900V is attached to the second adapter, the disk numbers for the 9900V will start at 41.

Note: When disk devices are added to or removed from the Win2000 system, the disk numbers are reassigned automatically. For the HRX devices, make sure to update your HRX volume definition file (**datasetmount.dat**) with the new disk numbers.

Table 2.3 Sample SCSI Device Information Worksheet

LDEV (CU:LDEV)	LU Type	VLL (MB)	Device Number	Bus Number	Path 1	Alternate Path(s)	
0:00					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:01					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:02					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:03					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:04					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:05					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:06					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:07					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:08					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:09					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:0a					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:0b					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:0c					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:0d					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:0e					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:0f					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
0:10					TID:____ LUN:____	TID:____ LUN:____	TID:____ LUN:____
and so on...							

2.6 Configuring the Host Fibre-Channel Adapters

After connecting the 9900V subsystem and recording the disk numbers for the new devices, you are ready to configure the fibre-channel adapter(s) connected to the 9900V. The HBA setup utility allows you to configure the adapter settings while the system is booting up. The host bus adapters have many configuration options. This section provides the following minimum requirements for configuring the 9900V subsystem.

- The disk I/O timeout value (TOV) requirement for the 9900V is 60 seconds (0x3c hex).
- The queue depth requirements for the 9900V devices are specified in Table 2.4.
- The BIOS may need to be disabled to prevent the system from trying to boot from the 9900V. If you want to configure the Win2K boot disk on the 9900V subsystem, see section 2.6.1.

In addition to the disk I/O TOV, queue depth, and BIOS, several other parameters (e.g., FC fabric) may also need to be set. Please refer to the user documentation, which came with your HBA to determine whether other options are required to meet your operational requirements.

Note: Make sure to use the same settings and device parameters for all 9900V devices.

The following sample instructions apply to the QLogic FC adapter. For other adapters, please refer to the user documentation for the adapter.

Note: If your HBA does not have a setup utility, or if your HBA setup utility does not provide access to the required parameters, use the Windows® 2000 Registry Editor to set the required parameters. Please ask your Hitachi Data Systems representative for assistance in setting these parameters. See section 2.7 for instructions on configuring the adapter settings using the Registry Editor.

Table 2.4 Execution Throttle (Queue Depth) Requirements for the 9900V Devices

Parameter	Required Value
Queue depth per LUN	queue-depth $\leq$ 32 per LUN
Queue depth per port (MAXTAGS)	queue-depth $\leq$ 512 per port

Note: You can adjust the queue depth for the 9900V devices later as needed (within the specified range) to optimize the I/O performance of the 9900V devices.

To configure a QLA2200F/2300F fibre-channel adapter connected to the 9900V:

1. While the Win2000 system is booting up, launch the HBA setup utility as follows: when the message **Press <Alt-Q> to Run QLogic Fast! Utility** appears, press **Alt-Q**.
2. Select the QLogic adapter to configure.
3. Go to **<Configuration Settings>**, select **<Host Adapter Settings>**, and then verify the following settings:

Host Adapter BIOS:	Disabled
Frame Size:	2048
Execution Throttle:	See Table 2.4 (<i>execution throttle = queue depth</i>)
4. Select **<Adapter Hard ID Settings>**, and then verify the following settings:

Adapter Hard ID:	Enabled
Hard ID:	Less than all 9900V fibre port addresses
5. To configure an MSCS environment, Go to **<Configuration Settings>**, select **<Advanced Adapter Settings>**, and then verify the following settings:

>4Gbyte Addressing:	Enabled
Enable LIP Reset:	Yes
Enable Target Reset:	Yes
6. Verify all other required settings for your operational environment. For example, the QLogic adapter defaults to eight LUNs per target, so you may need to change that setting. Refer to the user documentation for the adapter as needed.
7. Repeat steps (2)-(5) for each QLogic FC adapter connected to the 9900V subsystem. When you are finished configuring QLogic adapters, exit the HBA setup utility.

WARNING for Emulex FC adapter with Intel Pentium Pro PCI chipsets

On Windows® 2000 systems using the Intel Pentium Pro PCI chipsets, the Emulex adapter is not recognized by the secondary power-control interface (PCI) bus of a dual peer-bus system. This problem is caused by the Microsoft® HAL improperly assigning resources to some PCI devices. Microsoft® provides a workaround for this problem which causes the HAL to use the BIOS-assigned defaults rather than reassign PCI resources. This workaround involves editing the Win2000 system's **boot.ini** file.

Note: You may need to remove the read-only file attribute in order to edit the **boot.ini** file. You can use the Windows® **File-Properties** panel or the DOS **attrib** command (e.g., **attrib -r -h -s c:\boot.ini**) to remove the read-only file attribute. Please ask your Hitachi Data Systems representative for assistance.

Edit the **boot.ini** file as follows to enable both PCI buses to recognize the Emulex FC adapter:

1. Use a text editor (e.g., Notepad) to open the **boot.ini** file.
2. Add the **/PCILOCK** option to the system boot entry, and then save your changes.
3. Close the **boot.ini** file. You must reboot the system for these changes to take effect.

2.6.1 Configuring the Windows® 2000 Boot Disk on the 9900V Subsystem

Table 2.5 shows the FC adapter configuration requirements for Windows® 2000 boot disk.

Note: It is best to configure the Windows® 2000 boot disk when host activity is lowest.

To configure the Windows® 2000 boot disk on the 9900V subsystem, your system must have the following:

- **FC-AL.** Fibre-channel topology must be FC-AL (private loop technology). Boot disk through fabric switch is not supported.
- **Emulex or QLogic HBA.**

If an Emulex HBA is used, the HBA must be Emulex LP9002L:

- Emulex LightPulse HBA firmware version 3.90a7 or later. The firmware must contain boot BIOS version 1.60a7 or later. **Note:** To download the firmware and boot BIOS, see <http://www.emulex.com>.
- Registry option “LinkTimeOut” must be more than ‘180’.

If a QLogic HBA is used, the HBA must be QLogic QLA2200F or QLA2300F.

- QLogic QLA2200F HBA boot BIOS version 1.61 or later
- QLogic QLA2300F HBA boot BIOS version 1.04 or later

Note: To download the boot BIOS, see <http://www.qlogic.com/>.

- **Loop Reset Delay** in <Host Adapter Settings> must be more than “20” (set using the QLogic Fast! Utility).

Table 2.5 Fibre Adapter Configuration Requirements: Boot Disk

Windows® 2000 Boot Disk	BIOS Settings	
	QLogic QLA2200F/2300F	Emulex LightPulse
No	Host Adapter BIOS = Disabled	default
Yes	Host Adapter BIOS = Enabled	Host Adapter BIOS = Enabled

For further information on setting up the Windows® 2000 system to boot from the 9900V, please contact your Hitachi Data Systems representative.

2.7 Verifying the Disk and Device Parameters

After you have configured the fibre channel ports during boot-up, you need to verify the required disk and device parameters using the Windows® 2000 Registry. You must verify the disk I/O timeout value (TOV) and the queue depth, and you should also verify other required parameters such as FC fabric support and link down timeout.

2.7.1 Verifying the Disk I/O Timeout Value (TOV)

The disk I/O TOV parameter, which applies to all SCSI disk devices attached to the Win2000 system, must be set to 60 seconds. The default setting is hexadecimal 0x3c, which is decimal 60. **Note:** With some HBAs (such as Emulex), this value is set by manually editing the Registry entry. For information about specific HBAs, contact the manufacturer.

CAUTION: The following procedure utilizes the Windows® 2000 Registry Editor and is intended for the system administrator with the assistance of your Hitachi Data Systems representative. **Use the Registry Editor with extreme caution.** Always use **regedt32** instead of **regedit**. Do not make any changes to the system registry other than those specified below. For instructions on editing the registry, please refer to the online help for the Registry Editor. When specifying multiple parameters, separate each parameter by a semi-colon and a space. If you have questions or concerns, please contact the Hitachi Data Systems Support Center before beginning this procedure.

Verify the disk I/O TOV using the Registry Editor as follows (see Figure 2.4):

1. Start the Windows® 2000 Registry Editor: from the **Start** menu click on **Run** and enter **regedt32**, or double-click on **regedt32** in the Windows® 2000 system directory.
2. Display the disk parameters as follows: go to **HKEY_LOCAL_MACHINE → SYSTEM → CurrentControlSet → Services → Disk** (see Figure 2.4).
3. Make sure that the **TimeOutValue** disk parameter is set to 60 seconds (0x3c).
 - If the **TimeOutValue** is not set to 60 seconds, reboot the Win2000 system, and set the TOV to 60 seconds using one of the HBA setup utilities. **Note:** With some HBAs (such as Emulex), this value is set by manually editing the Registry entry. If you do not want to reboot, **carefully** edit the **TimeOutValue** entry using the Win2000 Registry Editor (see **CAUTION** above). For instructions on adding or modifying the **TimeOutValue**, refer to the online help for the Registry Editor.
4. Save your changes (if any), and exit the Registry Editor.

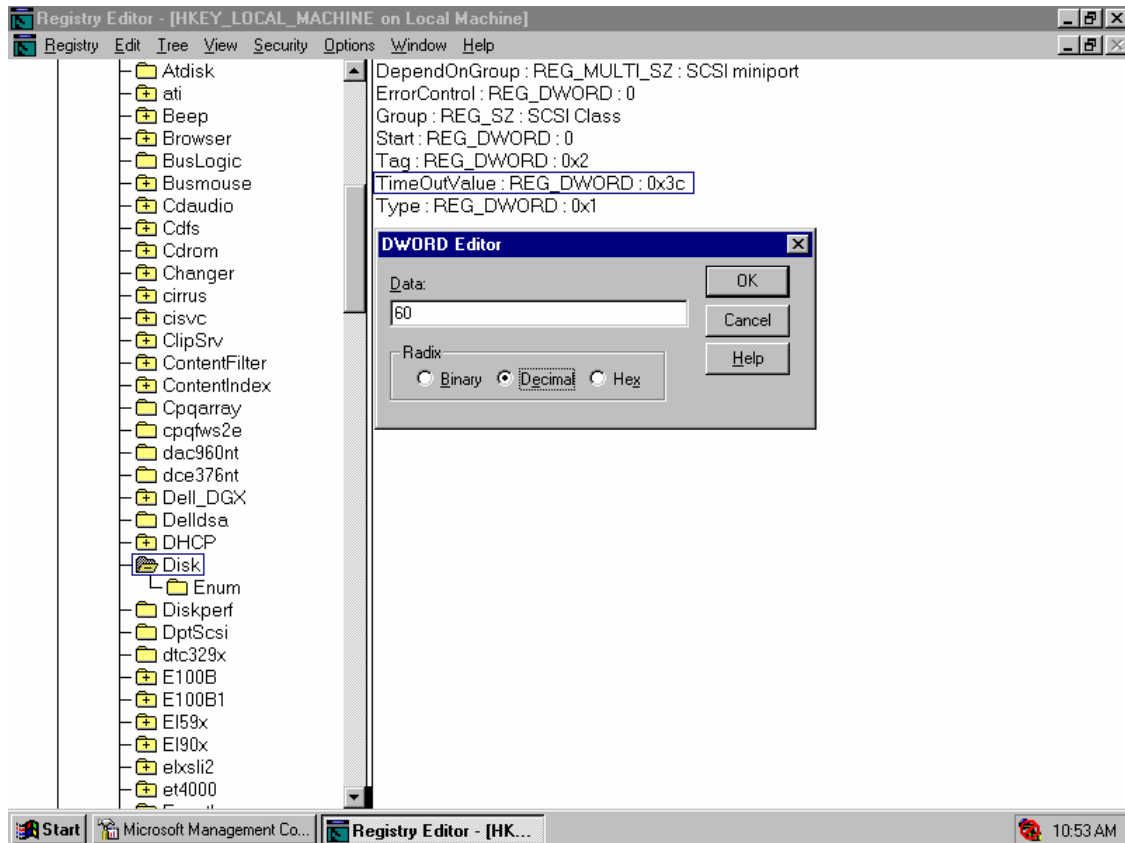


Figure 2.4 Verifying/Setting the Disk I/O TOV Using the Registry Editor

2.7.2 Verifying the Device Parameters

The queue depth parameter for the 9900V devices must be set as specified in Table 2.4 (refer to section 2.6). In addition to queue depth, you should also verify all other required settings for your operational environment (e.g., FC fabric support). You must also make sure that the device parameters are the same for all 9900V devices.

This section provides sample instructions for the Emulex and QLogic FC adapters. For other adapters, please refer to the user documentation for the adapter.

CAUTION: The following procedure utilizes the Windows® 2000 Registry Editor and is intended for the system administrator with the assistance of your Hitachi Data Systems representative. **Use the Registry Editor with extreme caution.** Always use **regedt32** instead of **regedit**. Do not make any changes to the system registry other than those specified below. For instructions on editing the registry, please refer to the online help for the Registry Editor. When specifying multiple parameters, separate each parameter by a semi-colon and a space. If you have questions or concerns, please contact the Hitachi Data Systems Support Center before beginning this procedure.

Note: You can also use Emulex utilities to set driver parameters. See <http://www.emulex.com>.

Verify the queue depth and other device parameters using the Registry Editor as follows:

1. Start the Windows® 2000 Registry Editor.

2. For each Emulex FC adapter:

For the SCSI Port Driver: (refer to Appendix B for LP8000 driver parameters and registry parameters)

- a) Queue Depth (Maximum Queue Depth) is set using Emulex Configuration Tool as shown in Figure 2.5. Queue depth requirements are listed in Table 2.4.
- b) For the SCSI Port Driver, the value of Link Timer is set to 60 as shown in Figure 2.6. (The default value is 30.)

For the SCSI Mini Port Driver:

- a) Go to: HKEY_LOCAL_MACHINE → SYSTEM → CurrentControlSet → Services → LPXNDS → Parameters → Device.

- b) Make sure that the **DriverParameter** device parameter has the following values:

QueueDepth=X; (X meets the requirements in Table 2.4)
LinkTimeOut=180
LipFFrecovery=1
NodeTimeout=180

- c) Make sure that the **DriverParameter** device parameter has the following values in an MSCS and/or HDLM environment:

EmulexOption=0x20
ResetTPRLO=0 (for 21-02-xx microcode)

- d) If the Emulex adapter (SCSI Mini Port Driver) is connected to a fabric switch, verify that the **DriverParameter** device parameter **Topology=1;RegFcpType=1 (for LP9002)**.
- e) Verify all other required settings for your operational environment. Refer to the user documentation for the adapter as needed.

It is also possible to modify queue depth and other device parameters using the LightPulse™ utility to access the LightPulse™ Utility/NT panel.

- a) Go to Start → Find → Files and Folders.
- b) On the Find panel, enter **lputilnt.exe**. From the **Look in** list box, select the hard drive that contains the Emulex miniport driver.
- c) Select **Find Now** to locate the LightPulse™ utility. **Note:** If you cannot find it, contact Emulex technical support.
- d) Select **lputilnt.exe** from the **Find: Files named** list box, then press Enter. The LightPulse Utility/NT panel opens as shown in Figure 2.7. The installed adapter(s) is/are displayed on the left side of the panel. Verify that the installed adapter(s) is/are displayed.
- e) On the **LightPulse Utility** panel, select the **Driver Parameters** option from the **Category** list box and select the applied parameter. The Modify Driver Parameter panel opens to change the value of the parameter as shown in Figure 2.8.

3. For each QLogic FC adapter:
 - a) Display the device parameters for the QLogic FC adapter as follows: go to **HKEY_LOCAL_MACHINE → SYSTEM → CurrentControlSet → Services → ql2200 (or ql2300) → Parameters → Device**.
 - b) If connected to a fabric switch, add **FabricSupported=1** to the **DriverParameter**.
 - c) Verify all other required settings for your operational environment (e.g., support for more than eight LUNs per target ID). Refer to the user documentation for the adapter as needed.
4. If you need to change any adapter settings, reboot the Win2000 system, and use the HBA setup utility. If you do not want to reboot, edit the registry *carefully* (see **CAUTION** above) using the Registry Editor.
5. Save your changes (if any), and exit the Registry Editor.

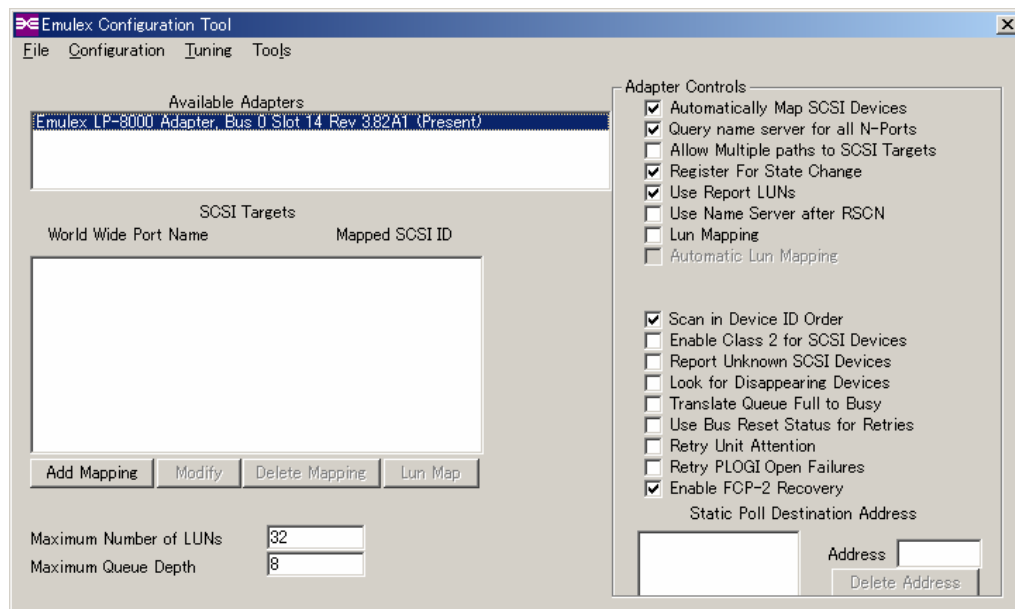


Figure 2.5 Emulex Configuration Tool Panel

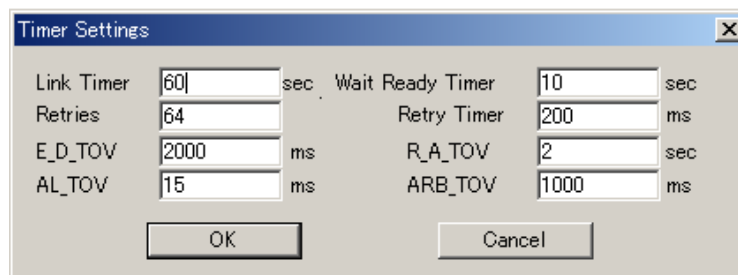


Figure 2.6 Timer Settings Panel

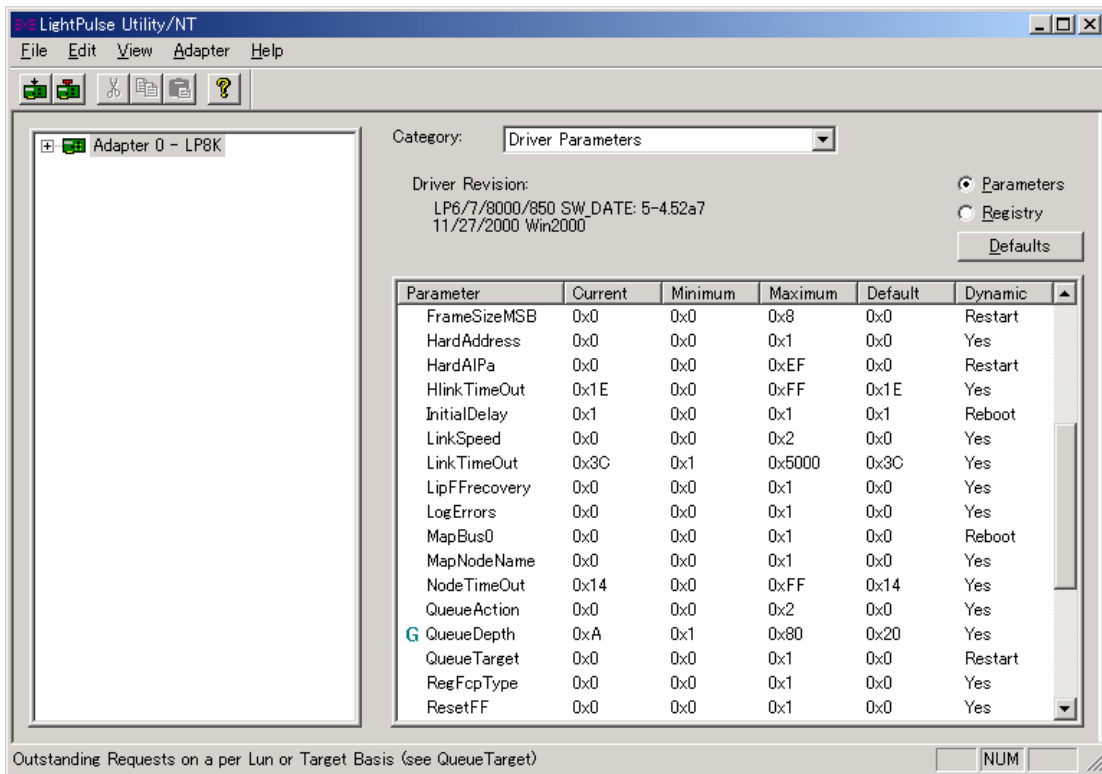


Figure 2.7 LightPulse Utility/NT Panel

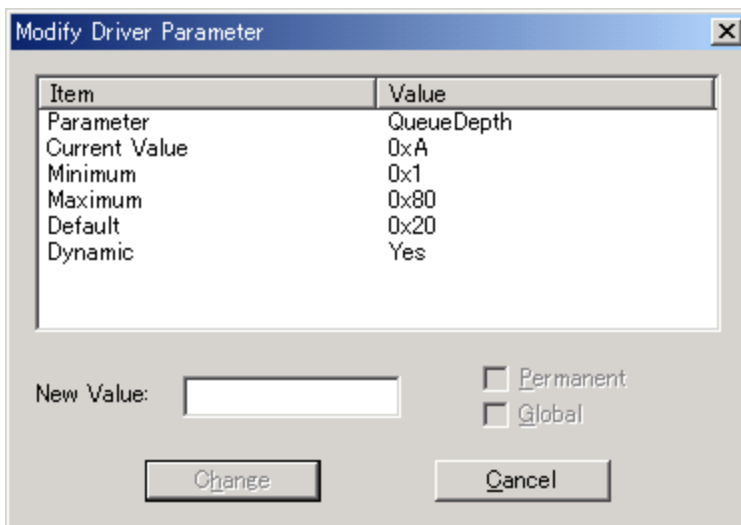


Figure 2.8 Modify Drive Parameter Panel

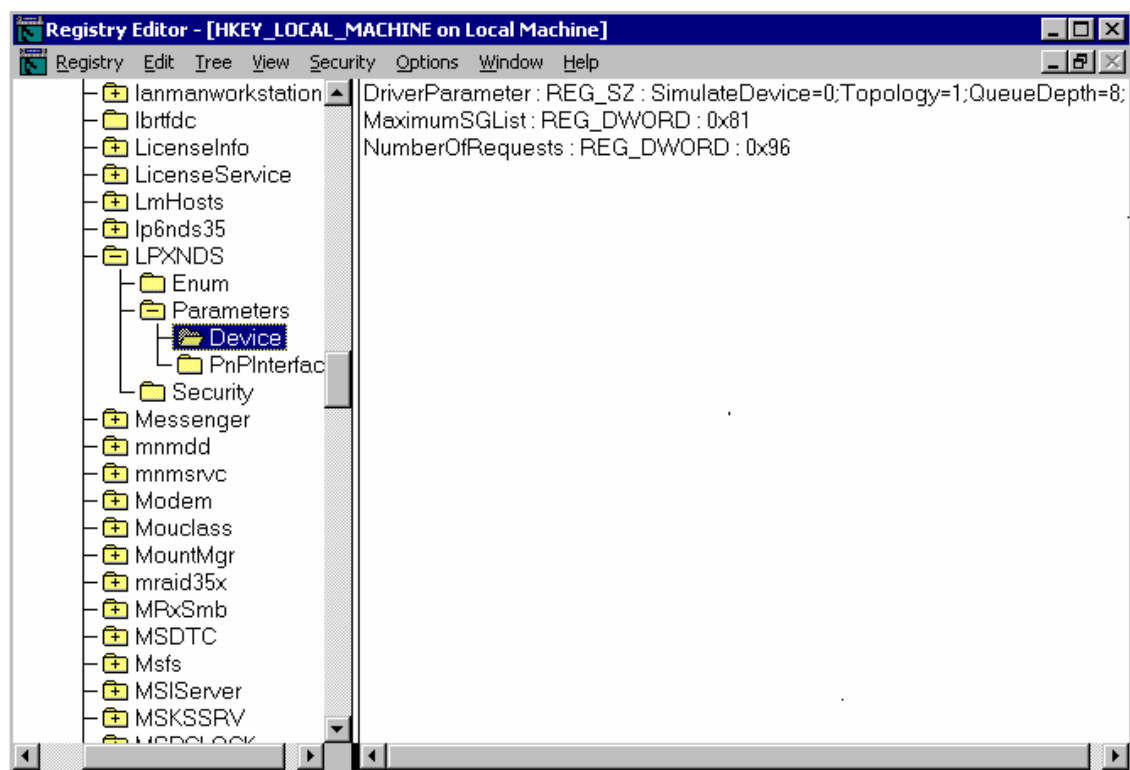


Figure 2.9 Verifying the Queue Depth (Emulex FC adapter shown)

Chapter 3 Configuring the New Devices

After 9900V Series (9900V) installation has been completed and new device recognition has been verified, the new 9900V devices are ready to be configured for use. Configuration of the 9900V devices is performed by the user. The activities involved in configuring the 9900V devices are:

- Writing the signatures on the new devices (see section 3.1),
- Creating and formatting the partitions on the new devices (see section 3.2),
- Verifying system access to the new devices (see section 3.3), and
- Verifying auto-mount of the new devices (see section 3.4).

Do not create partitions on the HRX devices. If the HRX devices will be used in the Microsoft® Cluster Server (MSCS) environment, you must write a signature on each HRX device. If not, do not write a signature.

AL-PA to SCSI TID mapping. For information on the fibre-channel AL-PA to SCSI TID mapping, please refer to Appendix A.

Port Driver and Registry Parameters. For information on the LP8000/LP9002L port drivers and registry parameters, please refer to Appendix B.

Online LUSE expansion. For online LUSE expansion, data migration is necessary in all cases except for OPEN-V. A host reboot is not required for Windows® 2000. Please refer to Appendix C, or contact your Hitachi Data Systems representative for further information.

Note on the term “SCSI disk”: The 9900V logical devices are defined to the host as SCSI disk devices, even though the interface is fibre-channel.

3.1 Writing the Signatures

The first step in configuring the new devices is to write a signature on each device using the Win2000 Disk Management. You must write a signature on each SCSI disk device to enable the Win2000 system to vary the device online. For MSCS environments, you must also write signatures on the HRX devices. The 32-bit signature identifies the disk to the Win2000 system. If the disk's TID and/or LUN is changed, or even if the disk is moved to a different controller, the Disk Management and Windows® 2000 fault-tolerant driver will continue to recognize it.


Note: The Win2000 system assigns the disk numbers sequentially starting with the local disks and then by adapter, and by TID/LUN. If the 9900V is attached to the first adapter (displayed first during system start-up), the disk numbers for the new devices will start at 1 (the local disk is 0). If the 9900V is not attached to the first adapter, the disk numbers for the new devices will start at the next available disk number. For example, if 40 disks are attached to the first adapter (disks 1-40) and the 9900V is attached to the second adapter, the disk numbers for the 9900V will start at 41.

To write the signatures on the new disk devices (see Figure 3.1):

1. From the **Start-Programs** menu, select **Administrative Tools (Computer Management)**, and then select **Disk Management** to start the Disk Manager. Initialization takes a few seconds.
2. When the Disk Management notifies you that one or more disks have been added, select **OK** to allow the system configuration to be updated. **Note:** If you removed any disks, the Disk Management will also notify you at this time.
3. You will need to reboot your system after adding each new device (see Figure 3.2).
4. The Disk Management now displays each new device by disk number and asks if you want to write a signature on the disk (see Figure 3.3). You may only write a signature once on each device. Refer to your completed SCSI Path Worksheet (see Table 2.3) to verify the device type for each disk number. For all SCSI disk devices, select **OK** to write a signature. For HRX devices without MSCS, select **No**. For HRX devices with MSCS, select **Yes** and observe this warning:

WARNING: After a signature has been written on an HRX device, there is no way to distinguish the HRX device from a SCSI disk device. The user must exercise extreme caution not to accidentally partition and format an HRX device. This will overwrite any data on the HRX device and also prevent the HRX software from accessing the device.

5. After you have written a signature (or declined to write a signature) on each new device, the Disk Management main panel opens and displays the devices by disk number (see Figure 3.1). The total capacity and free space are displayed for each disk device with a signature. **Configuration information not available** indicates no signature. Do not exit the Disk Manager yet. You will create partitions on the new SCSI disk devices next.

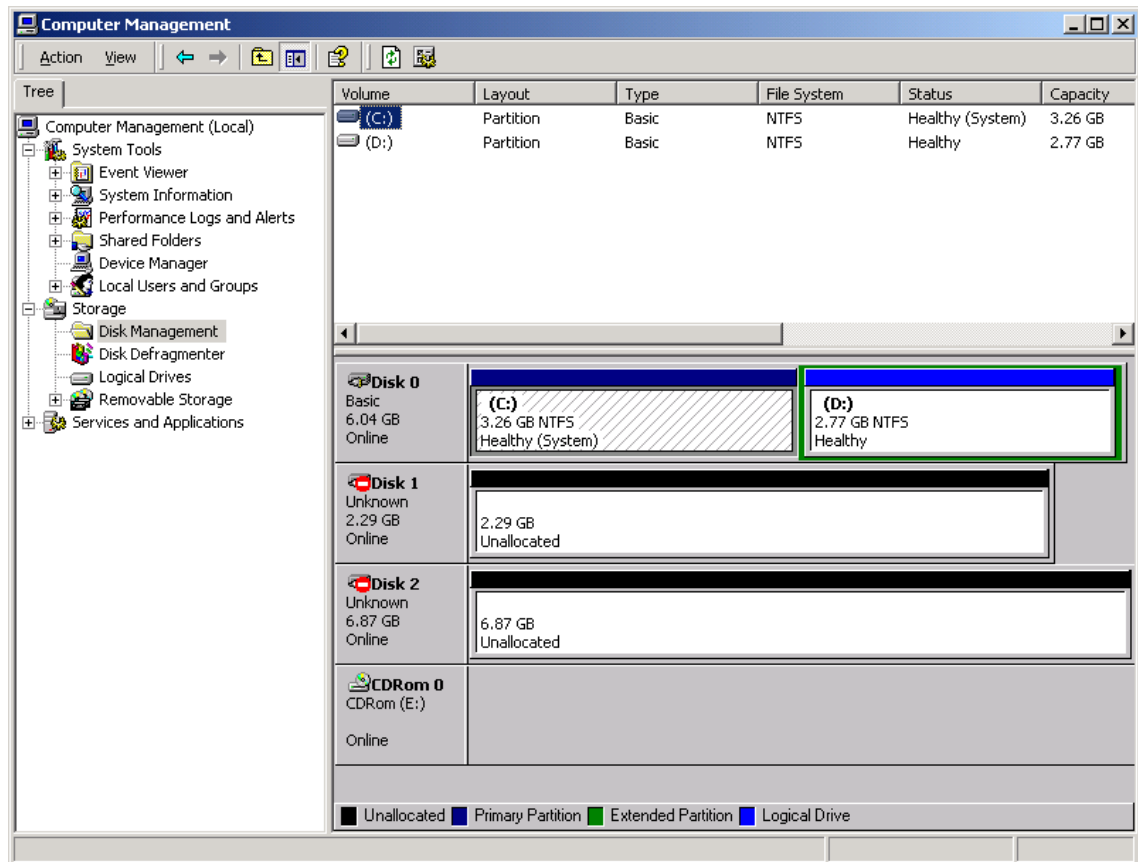

Note: In this example, disk 0 is the local disk, disk 1 is an OPEN-9 device, disk 2 is an OPEN-3 device, disk 3 is a 3390-3B device, and disk 4 is a 3390-3A device. The entries in the HRX volume definition file (**datasetmount.dat**) for these HRX volumes are:

```

\\.\PHYSICALDRIVE3 'volser' 3390-3B
\\.\PHYSICALDRIVE4 'volser' 3390-3A      ('volser' is the mainframe volume serial number)

```

Figure 3.1 Disk Management Panel Showing New Devices

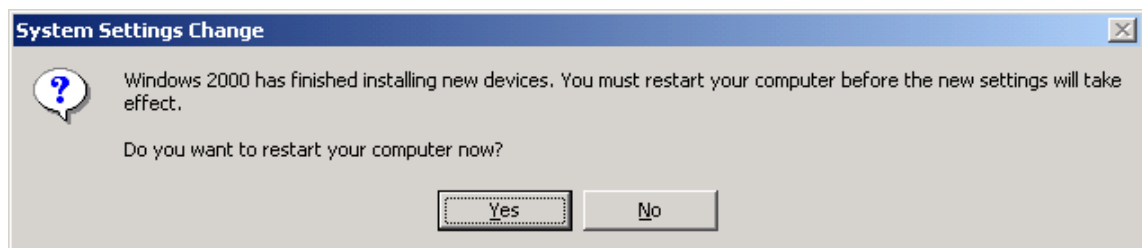


Figure 3.2 Rebooting Your PC After Each New Device Is Added

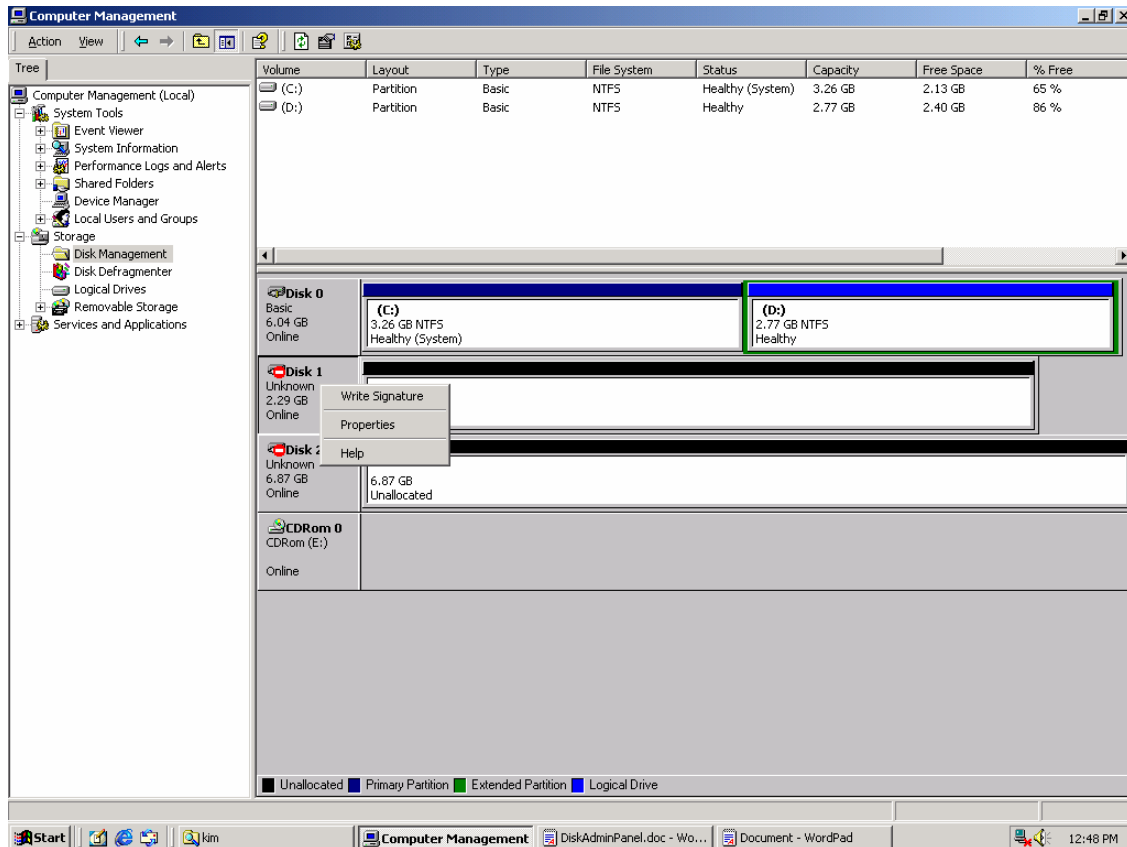


Figure 3.3 Writing the Signatures

3.2 Creating and Formatting the Partitions

After you have written the signatures on the new devices, you are ready to create and format the partitions on the new SCSI disk devices. Do not create partitions on the HRX devices. Use your completed SCSI Device Worksheet (refer to Table 2.3) as needed to verify disk numbers and device types.

Dynamic Disk is supported with no restrictions for the 9900V connected to the Windows® 2000 operating system. For more information, please refer to Microsoft's online help.

To create and format partitions on the new SCSI disk devices (see Figure 3.4-Figure 3.11):

1. On the Disk Management main panel, select the unallocated area for the SCSI disk you want to partition, and select the **Create Partition** menu. A Select Partition Type wizard screen appears (see Figure 3.4). Select the desired type of partition, and click **Next**.
- Note:** Stripe Set Volume with parity is not currently supported on the 9900V.
2. The Specify Partition Size window appears (see Figure 3.5). Specify the desired partition size. If the size is greater than 1024 MB, the Disk Management will request confirmation to create the partition. Click **Next**.
3. The Assign Drive Letter or Path screen appears (see Figure 3.6). Select a drive letter. You may also state no drive letter or drive path. Click **Next**.
4. The Format Partition window appears (see Figure 3.7). Click **Next**.
5. If all partitions have been successfully completed, a window appears confirming this and listing all your selections. The word **Healthy** appears next to each device that has been successfully added.
6. Enter the following information on the Format panel (see Figure 3.9):
 - **File System to use:** Select **NTFS** (enables the Win2000 system to write to the disk).
 - **Allocation unit size:** **Default allocation size**. Do not change this entry.
 - **Volume label:** Enter a volume label, or leave this field blank for no label.
 - **Format Options:** Select **Perform a Quick Format** to decrease the time required to format the partition; select **Enable file and folder compression** only if you want to enable compression.
7. Select **Next** to format the partition as specified. When the format warning is displayed (this new format will erase all existing data on disk), select **OK** to continue. The Format panel displays the progress of the format partition operation (see Figure 3.10).
8. When the format complete message is displayed, select **OK**, and then select **Finish** to close the Format panel. Verify that the Disk Manager main panel displays the correct file system (NTFS) for the formatted partition (see Figure 3.11).
9. Repeat steps (1) through (8) for each new SCSI disk device. When you are finished creating and formatting partitions, exit the Disk Manager (select **Partition-Exit**). When the disk configuration change message comes up, select **Yes** to save your changes.

Note: Make sure to make your new Emergency Repair Disk using RDISK.EXE.

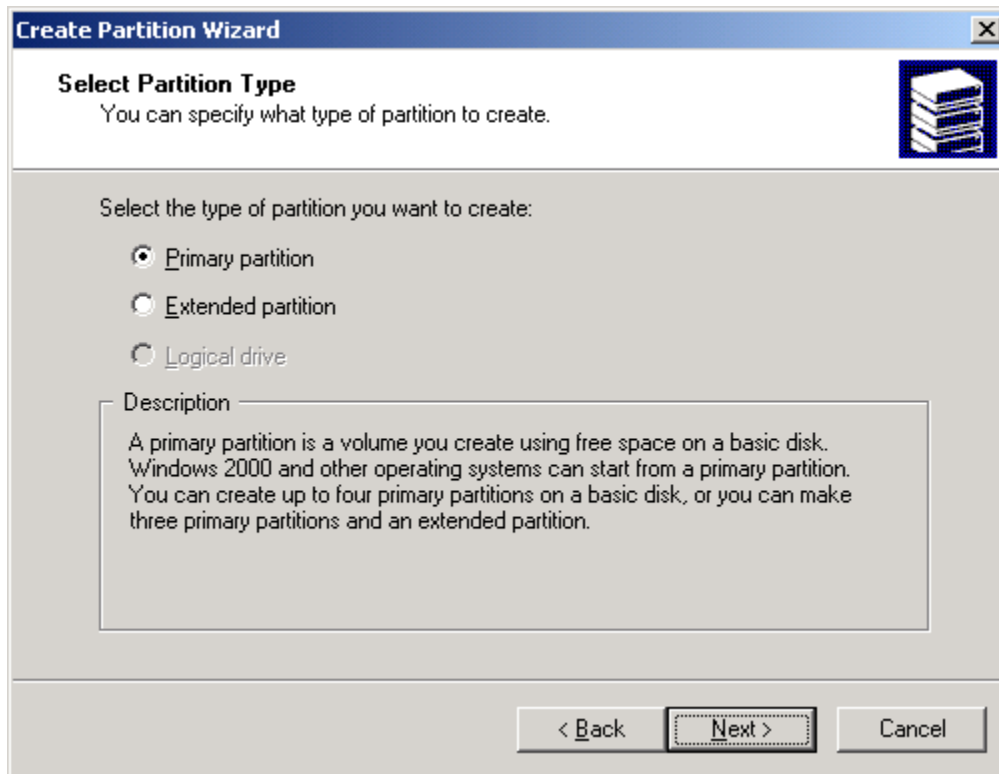


Figure 3.4 Create Partition Wizard Screen

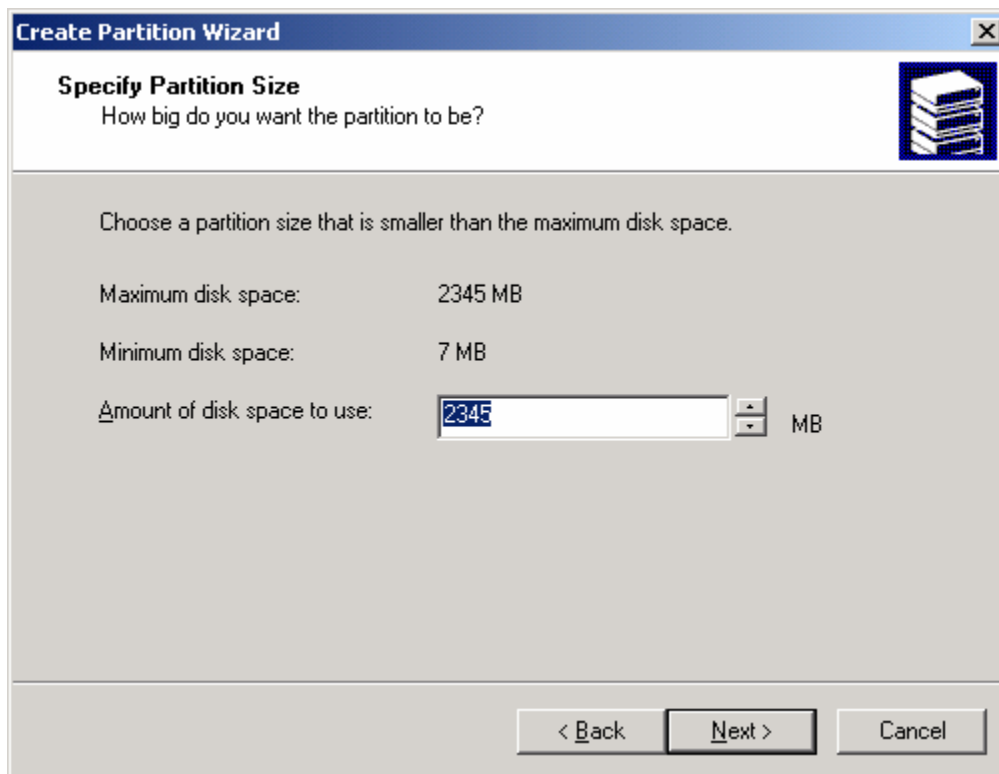


Figure 3.5 Specify Partition Size

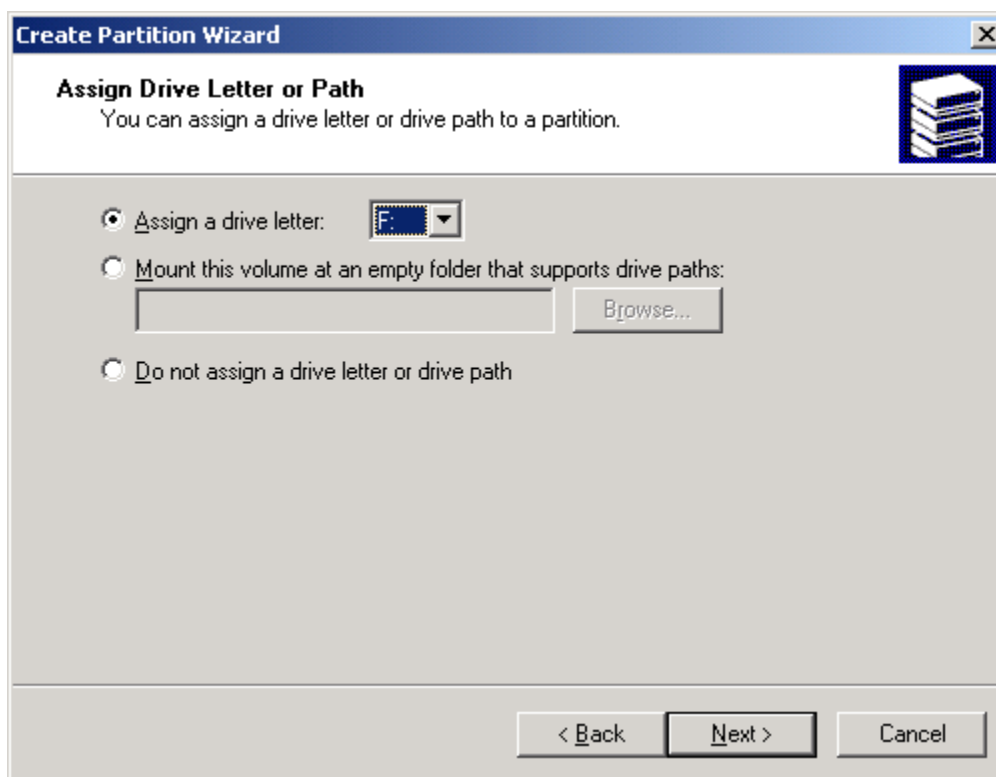


Figure 3.6 Assign Drive Letter or Path

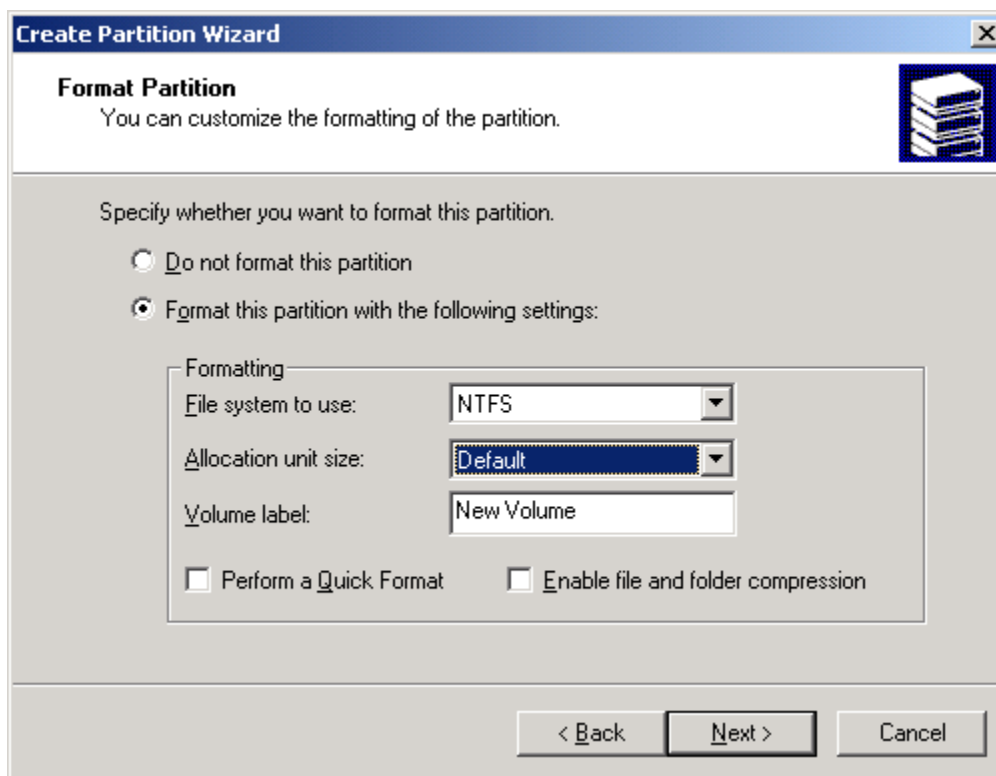


Figure 3.7 Format Partition Window



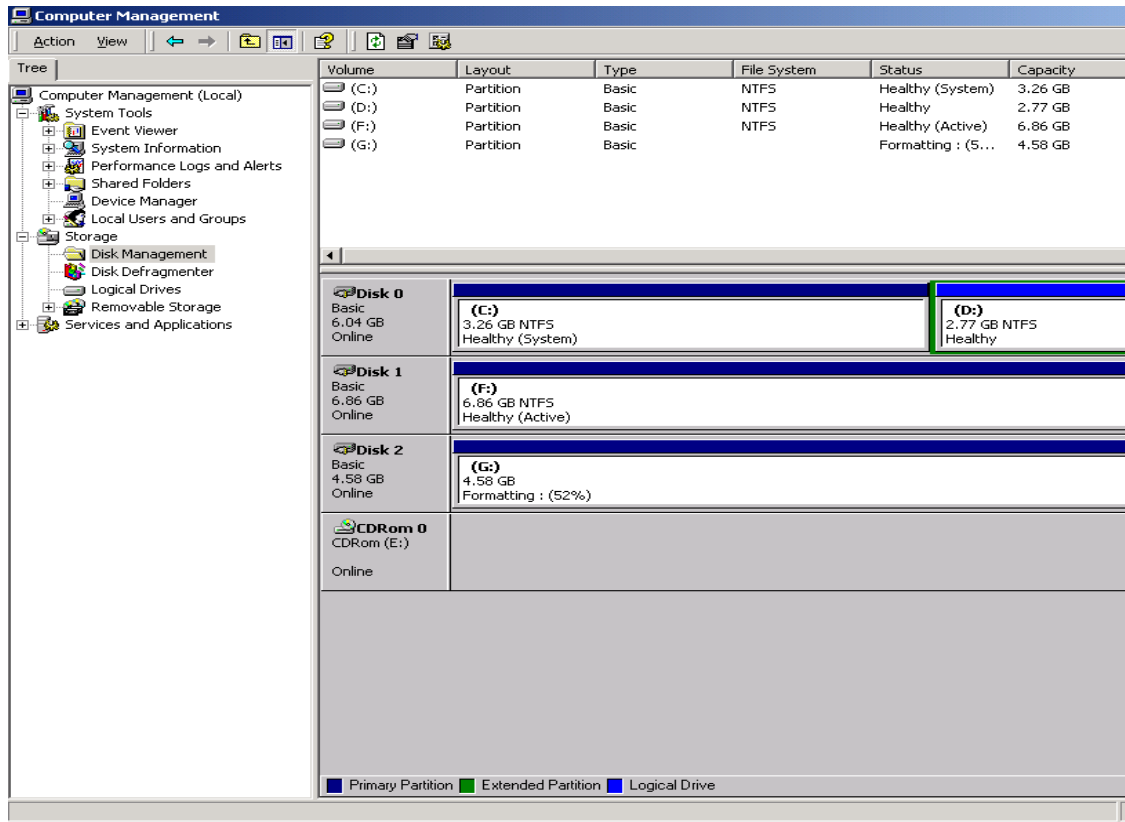


Figure 3.8 Successful Formatting Confirmation Window

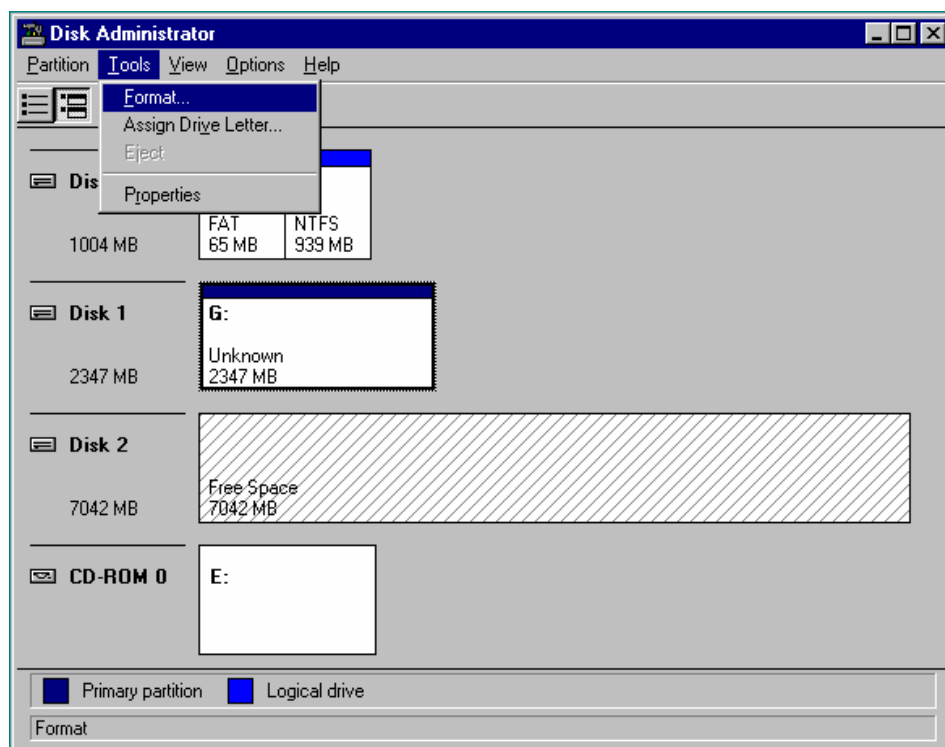

Note: After committing the changes, notice that the newly created partition changes from **Unformatted** to **Unknown**.

Figure 3.9 Opening the Format Panel

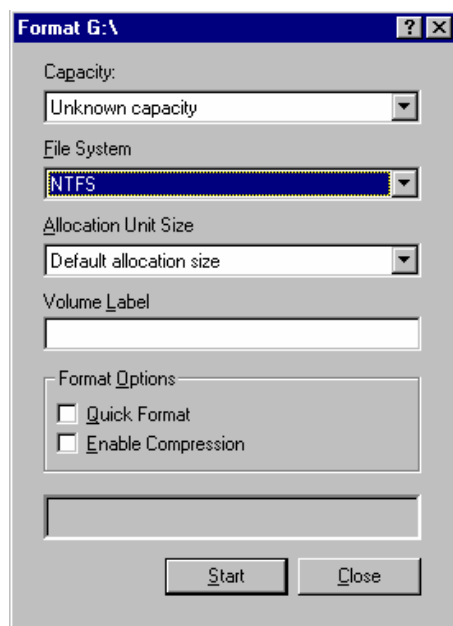

Note: In this example, the name of the partition being formatted is **G:**.

Figure 3.10 Formatting the Partition

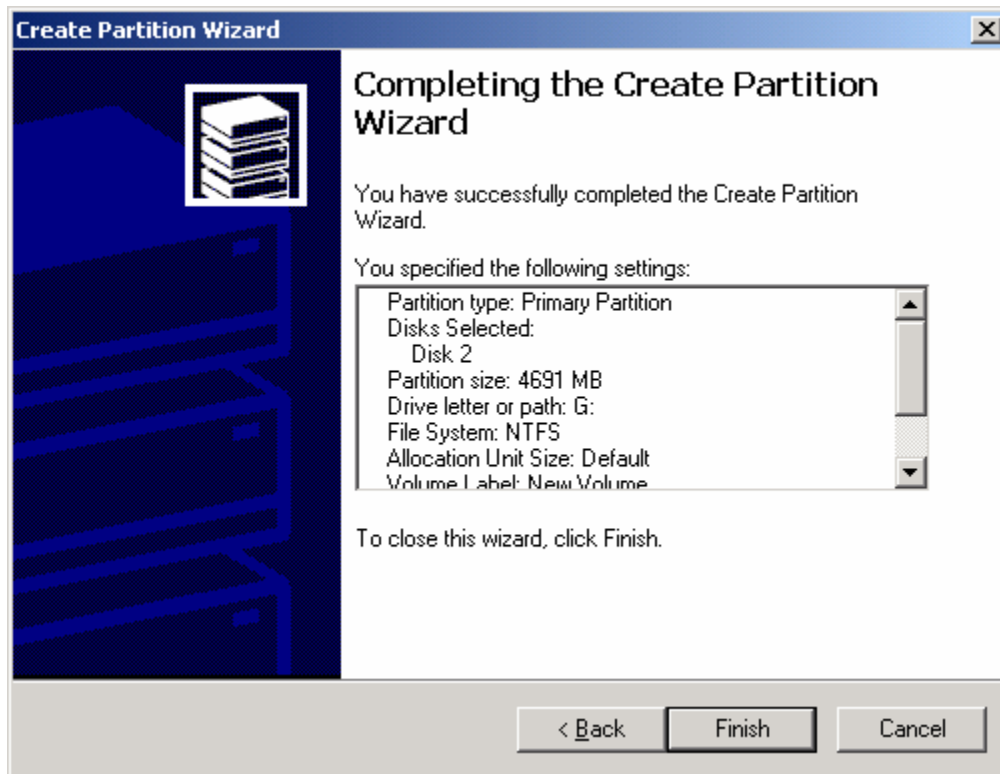


Figure 3.11 Verifying the Formatted Partition


3.3 Verifying File System Operations

After creating and formatting the partitions, you need to verify that the file system is operating properly on each new SCSI disk device (OPEN-x, OPEN VLL, and LUSE). The file system enables the Win2000 system to access the devices. You can verify file system operation easily by copying a file onto each new device. If the file is copied successfully, this verifies that the file system is operating properly (i.e., the Win2000 system can access the new device).

Note: Do not perform this procedure for HRX devices. You must use the HRX File Conversion Utility (FCU) or File Access Library (FAL) to access the HRX devices.

To verify file system operations for the new SCSI disk devices:

1. From the Win2000 desktop, double-click on **My Computer** to display all connected devices. All newly partitioned disks should appear in this window (see Figure 3.12).
2. Select the device you want to verify, and then display its Properties (select the **File** menu and then select **Properties**, or right-mouse-click and then select **Properties**).
3. On the Properties panel (see Figure 3.13), verify that the properties are correct: label (optional), type, capacity, and file system.
4. Copy a file to the new device. Any file will do, so choose a small one to speed things up.
5. Display the contents of the new device to make sure that the copy operation completed successfully (see Figure 3.14). The copied file should be displayed with the correct file size. If desired, compare the copied file with the original file to verify no differences.
6. Delete the copied file from the new device, and verify the file was deleted successfully.
7. Repeat steps (2) through (6) for each new SCSI disk device.

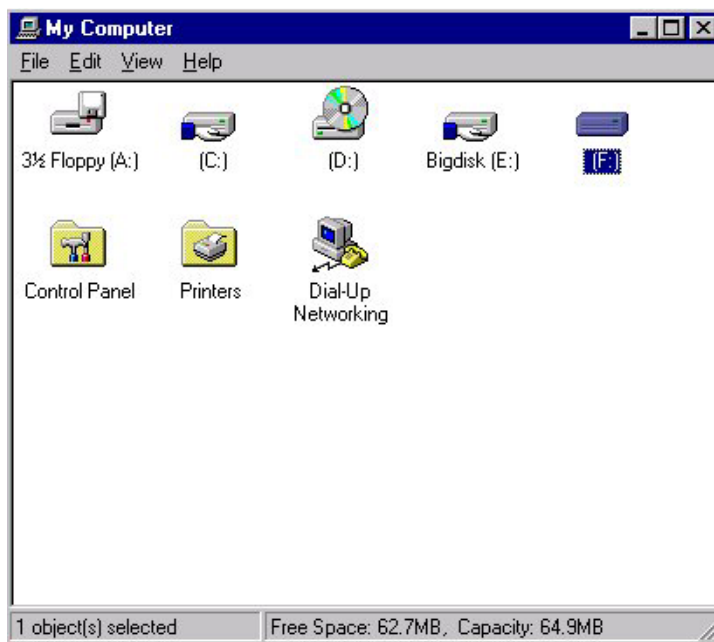

Note: In this example, [F:] is the only new device.

Figure 3.12 Displaying the Connected Devices

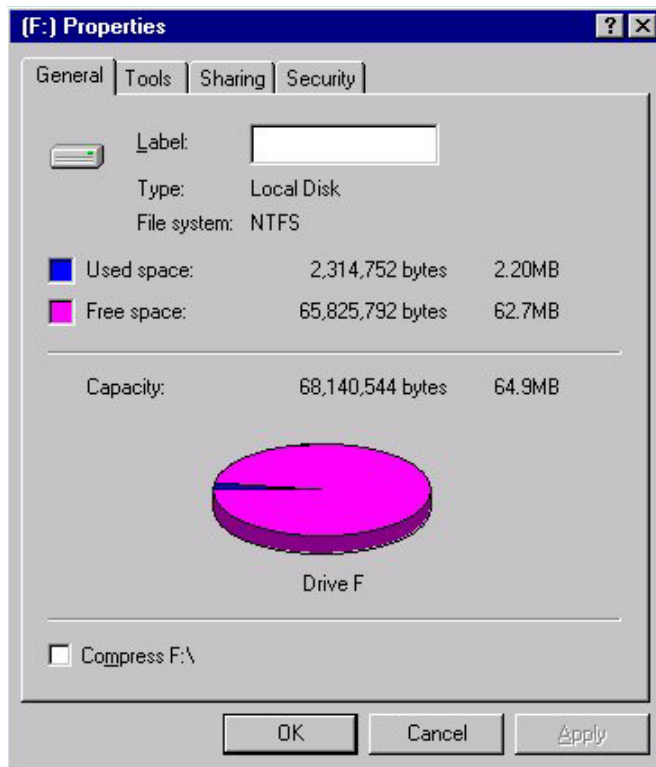


Figure 3.13 Verifying the New Device Properties

```

MS Command Prompt
C:\WINNT>dir notepad.exe
Volume in drive C has no label.
Volume Serial Number is BC35-7D44

Directory of C:\WINNT
10/13/96 06:38p          45,328 NOTEPAD.EXE
               1 File(s)          45,328 bytes
               2,480,414,720 bytes free

C:\WINNT>copy notepad.exe f:
1 file(s) copied.

C:\WINNT>dir f:\notepad.exe
Volume in drive F has no label.
Volume Serial Number is DCA0-7FBB

Directory of f:\
10/13/96 06:38p          45,328 NOTEPAD.EXE
               1 File(s)          45,328 bytes
               65,763,840 bytes free

C:\WINNT>

```

Figure 3.14 Verifying the File Copy Operation

3.4 Verifying Auto-Mount

The last step in configuring the new devices is to verify that all new devices are automatically mounted at system boot-up. To verify auto-mount of the new devices:

1. Shut down and then restart the Windows® 2000 system.
2. Open **My Computer**, and verify that all new SCSI disk devices are displayed.
3. Verify that the Win2000 system can access each new device by repeating the procedure in the previous section (section 3.3):
 - a) Verify the device properties for all new devices (refer to Figure 3.13).
 - b) Copy a file to each new device to make sure that the devices are functioning properly (refer to Figure 3.14).

Chapter 4 Failover and SNMP Configuration

The 9900V Series (9900V) subsystem supports many industry-standard middleware products which provide host failover, I/O path failover, and logical volume management functions. For the Windows® 2000 operating system, the 9900V supports the following products:

- Microsoft® Cluster Server (MSCS) for host fail-over (see section 4.1), and
- Hitachi Dynamic Link Manager™ for I/O path failover (see section 4.2).

Note: The logical volume management functions are included in the Windows® 2000 operating system (e.g., Disk Administrator).

The 9900V subsystem also supports the industry-standard simple network management protocol (SNMP) for remote subsystem management from the UNIX®/PC server host. SNMP is used to transport management information between the 9900V SVP and the SNMP manager on the host. The SNMP agent on the 9900V SVP sends status information to the host(s) when requested by the host or when a significant event occurs.

Note: The user is responsible for configuring the failover and SNMP management software on the UNIX®/PC server host. For assistance with failover and/or SNMP configuration, please refer to the user documentation, or contact the vendor's technical support.


4.1 Host Fail-Over

The 9900V subsystem supports the Microsoft® Cluster Server (MSCS) host fail-over feature of the Windows® 2000 OS. Please contact Microsoft® for the latest information on MSCS.

Note: To configure an MSCS environment via fabric switch, zoning functionality is used per each host bus adapter.

When the 9900V devices will be operating in an MSCS environment, you must perform the following additional configuration activity: writing **signatures** (see section 3.1). For MSCS operations, allow the Windows® 2000 Disk Management to write a signature on each HRX device (e.g., 3390-3A/B/C, OPEN-3 for HRXoto).

After 9900V device configuration is complete, make sure to configure the MSCS software as needed to recognize the devices on the newly attached 9900V subsystem(s). For assistance with MSCS operations, please refer to the Microsoft® user documentation or contact Microsoft® customer support. See Figure 4.1 for an example of a path failover configuration with clustering.

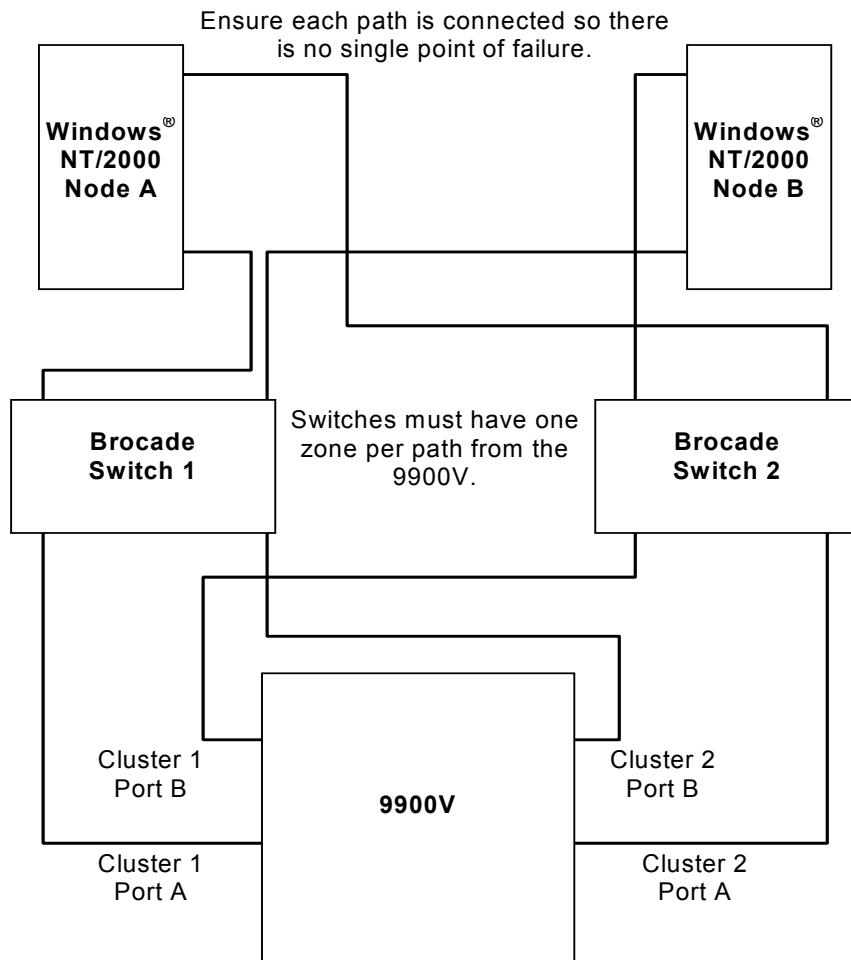

The reason for the isolation between paths is that the cluster resource becomes a virtual device and will cause interaction between the paths when Hitachi Dynamic Link Manager (also HPM) and Clustering are being used together.

Figure 4.1 Path Failover Configuration with 9900V Clustering

4.2 Alternate I/O Path

The 9900V subsystem supports the Hitachi Dynamic Link Manager™ alternate I/O path product for the Windows® 2000 OS. After you have completed 9900V device configuration as described in Chapter 3, make sure to configure Hitachi Dynamic Link Manager™ as needed to recognize the devices on the newly attached 9900V subsystem(s). For assistance with Hitachi Dynamic Link Manager™ operations, please refer to the *Hitachi 9200/9900/9900 V Series Dynamic Link Manager™ User's Guide for NT/2000* (MK-92DLM-129) or contact the Hitachi Data Systems Support Center (see section 5.2).

4.3 SNMP Remote Subsystem Management

SNMP is a part of the TCP/IP protocol suite that supports maintenance functions for storage and communication devices. The 9900V subsystem utilizes SNMP to transfer status and management commands to the UNIX®/PC server host via the 9900V SVP (see Figure 4.2). When the SNMP manager requests status information or when a service information message (SIM) occurs, the SNMP agent on the 9900V SVP notifies the SNMP manager on the UNIX®/PC server host. Notification of 9900V error conditions is made in real time, providing UNIX® and PC server users with the same level of monitoring and support available to S/390® mainframe users. The SIM reporting via SNMP enables the user to monitor the 9900V subsystem from the UNIX®/PC server host without having to check the remote console for remote SIMs (R-SIMs).

When a SIM occurs, the 9900V SNMP agent initiates trap operations, which alert the SNMP manager of the SIM condition. The SNMP manager receives the SIM traps from the SNMP agent, and can request information from the SNMP agent at any time.

Note: The user is responsible for configuring the SNMP manager on the UNIX®/PC server host. For assistance with SNMP manager configuration on the UNIX®/PC server host, please refer to the user documentation, or contact the vendor's technical support.

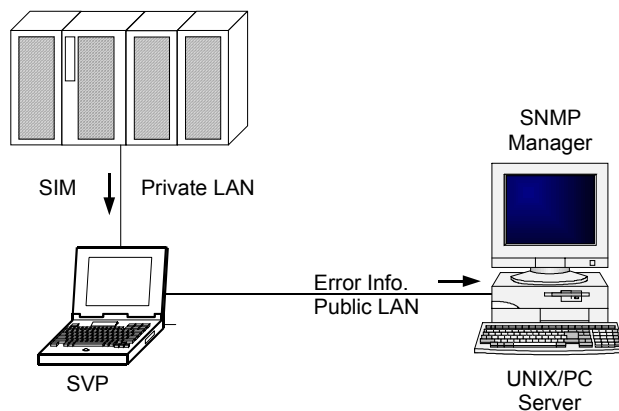


Figure 4.2 9900V SNMP Environment

Chapter 5 Troubleshooting

5.1 Troubleshooting

The Hitachi Lightning 9900™ V Series (9900V) array subsystem provides continuous data availability. For troubleshooting information for the 9900V subsystem, please refer to the *Hitachi 9900™ V Series User and Reference Guide* (MK-92RD100).

Table 5.1 lists potential error conditions during 9900V device configuration and provides instructions for resolving each condition. If you are unable to resolve an error condition, please ask your Hitachi Data Systems representative for help, or call the Hitachi Data Systems Support Center for assistance. See section 5.2 for instructions on calling the Hitachi Data Systems Support Center.

Table 5.1 Troubleshooting

Error Condition	Recommended Action
The devices are not recognized by the system.	Make sure that the READY indicator lights on the 9900V subsystem are ON. Make sure that the fibre cables are correctly installed and firmly connected.
The Win2000 system does not reboot properly after hard shutdown.	If the Win2000 system is powered off unexpectedly (without the normal shutdown process), wait three minutes before restarting the Win2000 system. This allows the 9900V's internal time-out process to purge all queued commands so that the 9900V is available (not busy) during system startup. If the Win2000 system is restarted too soon, the 9900V will continue trying to process the queued commands and the Win2000 system will not reboot successfully.

5.2 Calling the Support Center

If you need to call the Hitachi Data Systems Support Center, make sure to provide as much information about the problem as possible, including the circumstances surrounding the error or failure and the exact content of any error messages displayed on the host system(s). Please note the reference codes and severity levels of the 9900V SIMs.

The worldwide Hitachi Data Systems Support Centers are:

- Hitachi Data Systems North America/Latin America
San Diego, California, USA
1-800-348-4357
- Hitachi Data Systems Europe
Contact Hitachi Data Systems Local Support
- Hitachi Data Systems Asia Pacific
North Ryde, Australia
011-61-2-9325-3300

Appendix A SCSI TID Maps for Fibre-Channel Adapters

When an arbitrated loop (AL) is established or re-established, the port addresses are assigned automatically to prevent duplicate TIDs. When using the SCSI over fibre-channel protocol (FCP) there is no longer a need for target IDs in the traditional sense. SCSI is a bus-oriented protocol requiring each device to have a unique address since all commands go to all devices. For fibre channel, the AL-PA is used instead of the TID to direct packets to the desired destination. Unlike traditional SCSI, once control of the loop is acquired, a point-to-point connection is established from initiator to target. To enable transparent use of FCP, Windows® 2000 “maps” a TID to each AL-PA.

Tables A.1 and A.2 identify the fixed mappings between the bus/TID/LUN addresses assigned by Windows® 2000 and the FC native addresses (AL_PA/SEL_ID) for FC adapters. There are two potential mappings depending on the value of the ScanDown registry parameter:

- For ScanDown = 0 (default), see Table A.1.
- For ScanDown = 1, see Table A.2.

Note: When 9900V devices and other types of devices are connected in the same arbitrated loop, the mappings defined in Tables B.1 and B.2 cannot be guaranteed.

Note: The Emulex driver emulates six SCSI busses per adapter to map all 126 possible AL-PAs to target IDs. The first bus (bus 0) is a dummy bus.

Table A.1 SCSI TID Map for Emulex FC Adapter (ScanDown=0) (continues on next page)

Bus #	TID	LUN	AL_PA	SEL_ID
0	0-31	0-7	NONE	NONE
1	0	0-7	0x01	0x7D
	1	0-7	0x02	0x7C
	2	0-7	0x04	0x7B
	3	0-7	0x08	0x7A
	4	0-7	0x0F	0x79
	5	0-7	0x10	0x78
	6	0-7	0x17	0x77
	7	0-7	0x18	0x76
	8	0-7	0x1B	0x75
	9	0-7	0x1D	0x74
	10	0-7	0x1E	0x73
	11	0-7	0x1F	0x72
	12	0-7	0x23	0x71
	13	0-7	0x25	0x70
	14	0-7	0x26	0x6F
	15	0-7	0x27	0x6E
	16	0-7	0x29	0x6D
	17	0-7	0x2A	0x6C
	18	0-7	0x2B	0x6B
	19	0-7	0x2C	0x6A
	20	0-7	0x2D	0x69
	21	0-7	0x2E	0x68
	22	0-7	0x31	0x67
	23	0-7	0x32	0x66
	24	0-7	0x33	0x65
	25	0-7	0x34	0x64
	26	0-7	0x35	0x63
	27	0-7	0x36	0x62
	28	0-7	0x39	0x61
	29	0-7	0x3A	0x60
	30	0-7	0x3C	0x5F
	31	0-7	NONE	NONE

Bus #	TID	LUN	AL_PA	SEL_ID
2	0	0-7	0x43	0x5E
	1	0-7	0x45	0x5D
	2	0-7	0x46	0x5C
	3	0-7	0x47	0x5B
	4	0-7	0x49	0x5A
	5	0-7	0x4A	0x59
	6	0-7	0x4B	0x58
	7	0-7	0x4C	0x57
	8	0-7	0x4D	0x56
	9	0-7	0x4E	0x55
	10	0-7	0x51	0x54
	11	0-7	0x52	0x53
	12	0-7	0x53	0x52
	13	0-7	0x54	0x51
	14	0-7	0x55	0x50
	15	0-7	0x56	0x4F
	16	0-7	0x59	0x4E
	17	0-7	0x5A	0x4D
	18	0-7	0x5C	0x4C
	19	0-7	0x63	0x4B
	20	0-7	0x65	0x4A
	21	0-7	0x66	0x49
	22	0-7	0x67	0x48
	23	0-7	0x69	0x47
	24	0-7	0x6A	0x46
	25	0-7	0x6B	0x45
	26	0-7	0x6C	0x44
	27	0-7	0x6D	0x43
	28	0-7	0x6E	0x42
	29	0-7	0x71	0x41
	30	0-7	0x72	0x40
	31	0-7	NONE	NONE

Bus #	TID	LUN	AL_PA	SEL_ID
3	0	0-7	0x73	0x3F
	1	0-7	0x74	0x3E
	2	0-7	0x75	0x3D
	3	0-7	0x76	0x3C
	4	0-7	0x79	0x3B
	5	0-7	0x7A	0x3A
	6	0-7	0x7C	0x39
	7	0-7	0x80	0x38
	8	0-7	0x81	0x37
	9	0-7	0x82	0x36
	10	0-7	0x84	0x35
	11	0-7	0x88	0x34
	12	0-7	0x8F	0x33
	13	0-7	0x90	0x32
	14	0-7	0x97	0x31
	15	0-7	0x98	0x30
	16	0-7	0x9B	0x2F
	17	0-7	0x9D	0x2E
	18	0-7	0x9E	0x2D
	19	0-7	0x9F	0x2C
	20	0-7	0xA3	0x2B
	21	0-7	0xA5	0x2A
	22	0-7	0xA6	0x29
	23	0-7	0xA7	0x28
	24	0-7	0xA9	0x27
	25	0-7	0xAA	0x26
	26	0-7	0xAB	0x25
	27	0-7	0xAC	0x24
	28	0-7	0xAD	0x23
	29	0-7	0xAE	0x22
	30	0-7	0xB1	0x21
	31	0-7	NONE	NONE

Table A.1 SCSI TID Map for Emulex FC Adapter (ScanDown=0) (continued)

Bus #	TID	LUN	AL_PA	SEL_ID	Bus #	TID	LUN	AL_PA	SEL_ID
4	0	0-7	0xB2	0x20	5	0	0-7	0xE8	0x01
	1	0-7	0xB3	0x1F		1	0-7	0xEF	0x00
	2	0-7	0xB4	0x1E		2	0-7	NONE	NONE
	3	0-7	0xB5	0x1D		3	0-7	NONE	NONE
	4	0-7	0xB6	0x1C		4	0-7	NONE	NONE
	5	0-7	0xB9	0x1B		5	0-7	NONE	NONE
	6	0-7	0xBA	0x1A		6	0-7	NONE	NONE
	7	0-7	0xBC	0x19		7	0-7	NONE	NONE
	8	0-7	0xC3	0x18		8	0-7	NONE	NONE
	9	0-7	0xC5	0x17		9	0-7	NONE	NONE
	10	0-7	0xC6	0x16		10	0-7	NONE	NONE
	11	0-7	0xC7	0x15		11	0-7	NONE	NONE
	12	0-7	0xC9	0x14		12	0-7	NONE	NONE
	13	0-7	0xCA	0x13		13	0-7	NONE	NONE
	14	0-7	0xCB	0x12		14	0-7	NONE	NONE
	15	0-7	0xCC	0x11		15	0-7	NONE	NONE
	16	0-7	0xCD	0x10		16	0-7	NONE	NONE
	17	0-7	0xCE	0x0F		17	0-7	NONE	NONE
	18	0-7	0xD1	0x0E		18	0-7	NONE	NONE
	19	0-7	0xD2	0x0D		19	0-7	NONE	NONE
	20	0-7	0xD3	0x0C		20	0-7	NONE	NONE
	21	0-7	0xD4	0x0B		21	0-7	NONE	NONE
	22	0-7	0xD5	0x0A		22	0-7	NONE	NONE
	23	0-7	0xD6	0x09		23	0-7	NONE	NONE
	24	0-7	0xD9	0x08		24	0-7	NONE	NONE
	25	0-7	0xDA	0x07		25	0-7	NONE	NONE
	26	0-7	0xDC	0x06		26	0-7	NONE	NONE
	27	0-7	0xE0	0x05		27	0-7	NONE	NONE
	28	0-7	0xE1	0x04		28	0-7	NONE	NONE
	29	0-7	0xE2	0x03		29	0-7	NONE	NONE
	30	0-7	0xE4	0x02		30	0-7	NONE	NONE
	31	0-7	NONE	NONE		31	0-7	NONE	NONE

Table A.2 SCSI TID Map for Emulex FC Adapter (ScanDown=1) (continues on next page)

Bus #	TID	LUN	AL_PA	SEL_ID
0	0-31	0-7	NONE	NONE
1	0	0-7	0xEF	0x00
	1	0-7	0xE8	0x01
	2	0-7	0xE4	0x02
	3	0-7	0xE2	0x03
	4	0-7	0xE1	0x04
	5	0-7	0xE0	0x05
	6	0-7	0xDC	0x06
	7	0-7	0xDA	0x07
	8	0-7	0xD9	0x08
	9	0-7	0xD6	0x09
	10	0-7	0xD5	0x0A
	11	0-7	0xD4	0x0B
	12	0-7	0xD3	0x0C
	13	0-7	0xD2	0x0D
	14	0-7	0xD1	0x0E
	15	0-7	0xCE	0x0F
	16	0-7	0xCD	0x10
	17	0-7	0xCC	0x11
	18	0-7	0xCB	0x12
	19	0-7	0xCA	0x13
	20	0-7	0xC9	0x14
	21	0-7	0xC7	0x15
	22	0-7	0xC6	0x16
	23	0-7	0xC5	0x17
	24	0-7	0xC3	0x18
	25	0-7	0xBC	0x19
	26	0-7	0xBA	0x1A
	27	0-7	0xB9	0x1B
	28	0-7	0xB6	0x1C
	29	0-7	0xB5	0x1D
	30	0-7	0xB4	0x1E
	31	0-7	NONE	NONE

Bus #	TID	LUN	AL_PA	SEL_ID
2	0	0-7	0xB3	0x1F
	1	0-7	0xB2	0x20
	2	0-7	0xB1	0x21
	3	0-7	0xAE	0x22
	4	0-7	0xAD	0x23
	5	0-7	0xAC	0x24
	6	0-7	0xAB	0x25
	7	0-7	0xAA	0x26
	8	0-7	0xA9	0x27
	9	0-7	0xA7	0x28
	10	0-7	0xA6	0x29
	11	0-7	0xA5	0x2A
	12	0-7	0xA3	0x2B
	13	0-7	0x9F	0x2C
	14	0-7	0x9E	0x2D
	15	0-7	0x9D	0x2E
	16	0-7	0x9B	0x2F
	17	0-7	0x98	0x30
	18	0-7	0x97	0x31
	19	0-7	0x90	0x32
	20	0-7	0x8F	0x33
	21	0-7	0x88	0x34
	22	0-7	0x84	0x35
	23	0-7	0x82	0x36
	24	0-7	0x81	0x37
	25	0-7	0x80	0x38
	26	0-7	0x7C	0x39
	27	0-7	0x7A	0x3A
	28	0-7	0x79	0x3B
	29	0-7	0x76	0x3C
	30	0-7	0x75	0x3D
	31	0-7	NONE	NONE

Bus #	TID	LUN	AL_PA	SEL_ID
3	0	0-7	0x74	0x3E
	1	0-7	0x73	0x3F
	2	0-7	0x72	0x40
	3	0-7	0x71	0x41
	4	0-7	0x6E	0x42
	5	0-7	0x6D	0x43
	6	0-7	0x6C	0x44
	7	0-7	0x6B	0x45
	8	0-7	0x6A	0x46
	9	0-7	0x69	0x47
	10	0-7	0x67	0x48
	11	0-7	0x66	0x49
	12	0-7	0x65	0x4A
	13	0-7	0x63	0x4B
	14	0-7	0x5C	0x4C
	15	0-7	0x5A	0x4D
	16	0-7	0x59	0x4E
	17	0-7	0x56	0x4F
	18	0-7	0x55	0x50
	19	0-7	0x54	0x51
	20	0-7	0x53	0x52
	21	0-7	0x52	0x53
	22	0-7	0x51	0x54
	23	0-7	0x4E	0x55
	24	0-7	0x4D	0x56
	25	0-7	0x4C	0x57
	26	0-7	0x4B	0x58
	27	0-7	0x4A	0x59
	28	0-7	0x49	0x5A
	29	0-7	0x47	0x5B
	30	0-7	0x46	0x5C
	31	0-7	NONE	NONE

Table A.2 SCSI TID Map for Emulex FC Adapter (ScanDown=1) (continued)

Bus #	TID	LUN	AL_PA	SEL_ID	Bus #	TID	LUN	AL_PA	SEL_ID
4	0	0-7	0x45	0x5D	5	0	0-7	0x02	0x7C
	1	0-7	0x43	0x5E		1	0-7	0x01	0x7D
	2	0-7	0x3C	0x5F		2	0-7	NONE	NONE
	3	0-7	0x3A	0x60		3	0-7	NONE	NONE
	4	0-7	0x39	0x61		4	0-7	NONE	NONE
	5	0-7	0x36	0x62		5	0-7	NONE	NONE
	6	0-7	0x35	0x63		6	0-7	NONE	NONE
	7	0-7	0x34	0x64		7	0-7	NONE	NONE
	8	0-7	0x33	0x65		8	0-7	NONE	NONE
	9	0-7	0x32	0x66		9	0-7	NONE	NONE
	10	0-7	0x31	0x67		10	0-7	NONE	NONE
	11	0-7	0x2E	0x68		11	0-7	NONE	NONE
	12	0-7	0x2D	0x69		12	0-7	NONE	NONE
	13	0-7	0x2C	0x6A		13	0-7	NONE	NONE
	14	0-7	0x2B	0x6B		14	0-7	NONE	NONE
	15	0-7	0x2A	0x6C		15	0-7	NONE	NONE
	16	0-7	0x29	0x6D		16	0-7	NONE	NONE
	17	0-7	0x27	0x6E		17	0-7	NONE	NONE
	18	0-7	0x26	0x6F		18	0-7	NONE	NONE
	19	0-7	0x25	0x70		19	0-7	NONE	NONE
	20	0-7	0x23	0x71		20	0-7	NONE	NONE
	21	0-7	0x1F	0x72		21	0-7	NONE	NONE
	22	0-7	0x1E	0x73		22	0-7	NONE	NONE
	23	0-7	0x1D	0x74		23	0-7	NONE	NONE
	24	0-7	0x1B	0x75		24	0-7	NONE	NONE
	25	0-7	0x18	0x76		25	0-7	NONE	NONE
	26	0-7	0x17	0x77		26	0-7	NONE	NONE
	27	0-7	0x10	0x78		27	0-7	NONE	NONE
	28	0-7	0x0F	0x79		28	0-7	NONE	NONE
	29	0-7	0x08	0x7A		29	0-7	NONE	NONE
	30	0-7	0x04	0x7B		30	0-7	NONE	NONE
	31	0-7	NONE	NONE		31	0-7	NONE	NONE

Appendix B LP8000/LP9002L Port Driver and Registry Parameters

Tables B.1 and B.2 provide recommended port driver parameters and registry parameters for the Emulex LP8000/LP9002L HBA connected to a 9900V subsystem. These parameters were used by Hitachi when testing the 9900V and Emulex LP8000 HBA. The test environment consisted of:

- **Firmware:** Ver3.82a0
- **BootBIOS:** Ver1.53A1
- **Driver:** Ver5-2.11a2

Table B.1 LP8000/LP9002L Driver Parameters

Setting	Initial	FC-AL	Fabric	Notes
Link Control button:				
Point to Point			X	
Arbitrated Loop	X	X		
Link Speed	AUTO	AUTO	AUTO	
Adapter controls:				
Automatically Map SCSI Devices	X	X	X	Note 1
Query name server for all N-Ports	X	X	X	
Allow Multiple paths to SCSI Targets	0	X	X	
Register for State Change	X	X	X	
Use Report LUNs	X	X	X	
Use Name Server after RSCN	X	0	X	
Lun Mapping	0	0	0	
Scan in Device ID Order	X	X	X	
Enable Class 2 for SCSI Devices	0	0	0	
Report Unknown SCSI Devices	X	X	X	
Look for Disappearing Devices	0	0	0	
Translate Queue Full to Busy	0	0	0	
Use Bus Reset Status for Retries	0	0	0	
Retry Unit Attention	0	0	0	
Retry PLOGI Open Failures	0	0	0	
Enable FCP-2Recovery	X	X	X	
Maximum Number of LUNs	32	Note 2	Note 2	
Maximum Queue Depth	32	Note 2	Note 2	Note 2
Static Poll Destination Address	BLANK	BLANK	BLANK	
Link Timer	30	30	30	
Retries	64	64	64	
E_D_TOV	2000	2000	2000	
AL_TOV	15	15	15	
Wait Ready Timer	45	-1	-1	Note 3
Retry Timer	2000	2000	2000	
R_A_TOV	2	2	2	
ARB_TOV	1000	1000	1000	

Table B.2 LP8000/LP9002L Registry Parameters

Setting	Initial	FC-AL	Fabric	Notes
QuickFail	0	1	1	Note 4
NameServerDelay	0	2000	2000	

Note: The shaded areas indicate parameters that must be changed from the default value.

Note 1: X: Marked. 0: Not marked.

Note 2: This value is set as specified in Table 2.4
(queue-depth $\leq$ 32 per LUN and queue-depth $\leq$ 256 per port).

Note 3: If the timer values are set to -1, the driver will use 2*R_A_TOV as the timer value. If the timer is set to 0, the driver will wait indefinitely for devices to become available.

Note 4: This parameter needs to be set for each adapter installed in the system. QuickFail parameter should be set on each HBA entry and global entry of registry.

Appendix C Creating an Online LUSE for Windows® 2000

This appendix explains how to safely expand a LUSE in an online Windows® operating system using the Hitachi HiCommand Device Manager. You may also use the Web Console panel in storage navigator to perform an expansion.

Note: It is recommended that you stop all I/O activity if possible before you perform an online LUSE expansion.

From the Device Manager main panel, select the Host View tab.



For this example, the following applies:

LDEV # = 0:32
Mount point = i
capacity = 40MB

Note that the LDEV number is extendable even though volume I/O is in process.




Note: This panel applies versions 2.4 and 3.0.

Complete the following steps:


1. Right click **My Computer**, then select **Manage**.
2. From the pull down menu, select **Disk Management** to confirm that Disk I is mounted and that Disk 12 is on this system.

Disk 12 is the disk that will be expanded.

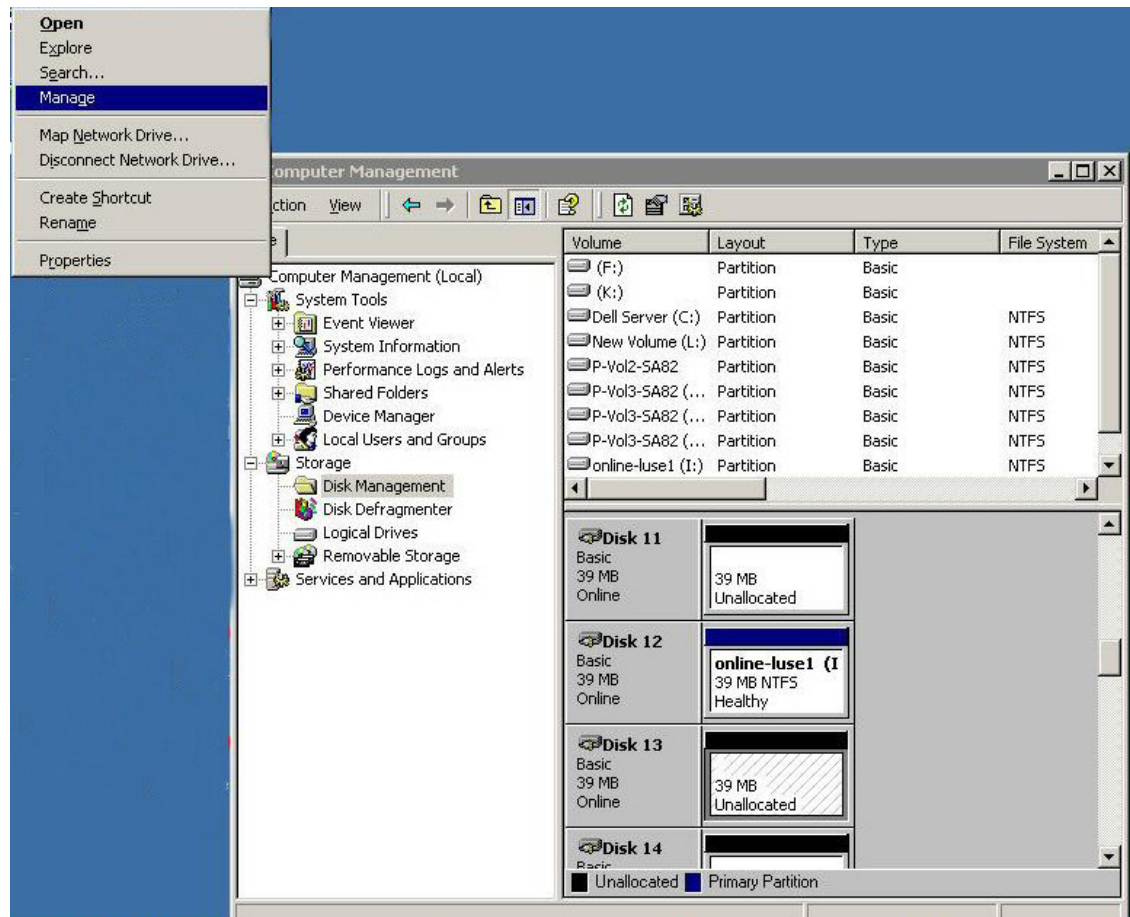

3. Right click on the disk number and select **Properties** to obtain more detailed information.

In this example, detailed information for Disk 13 is displayed.

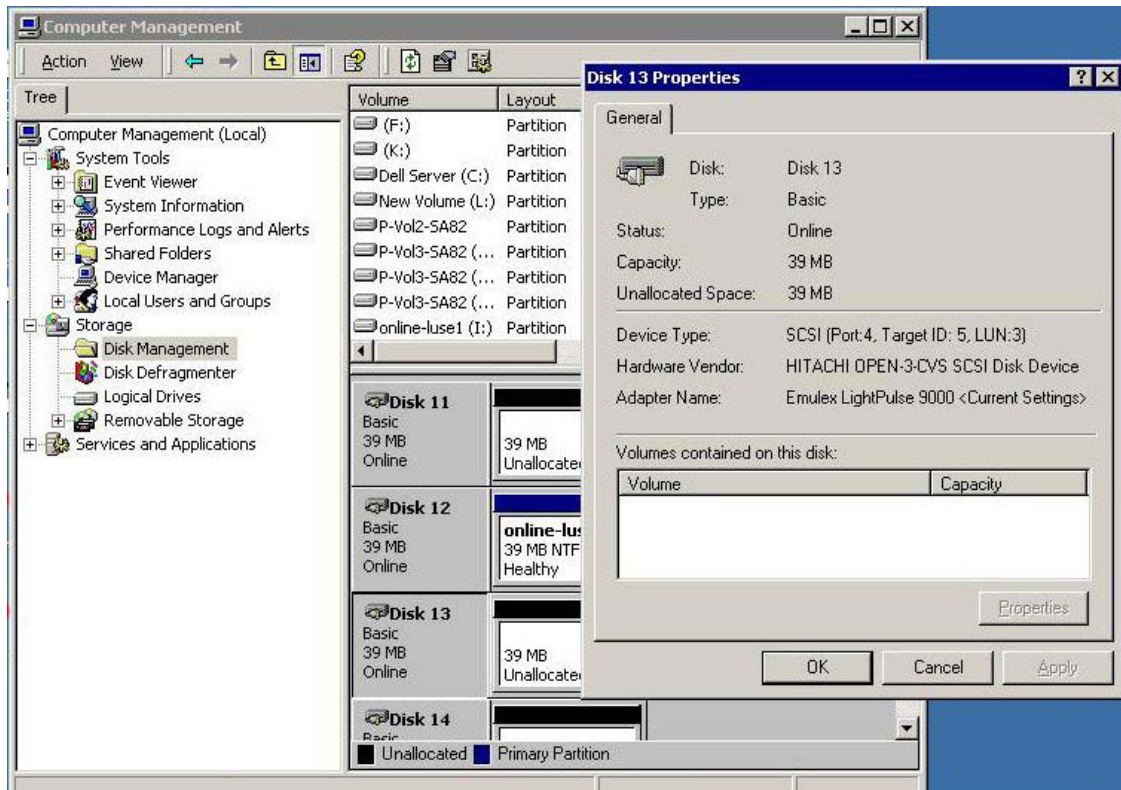

4. To reconfigure the LUSE, use the Storage Navigator main panel.

This example uses the HiCommand Link and Launch function to log into Storage Navigator. (**Note:** You must be in **Modify** mode.)



The Storage Navigator - LUN Management shows the Path information for LDEV 32.

5. Select LDEV 32.

In this case, there is only one path.


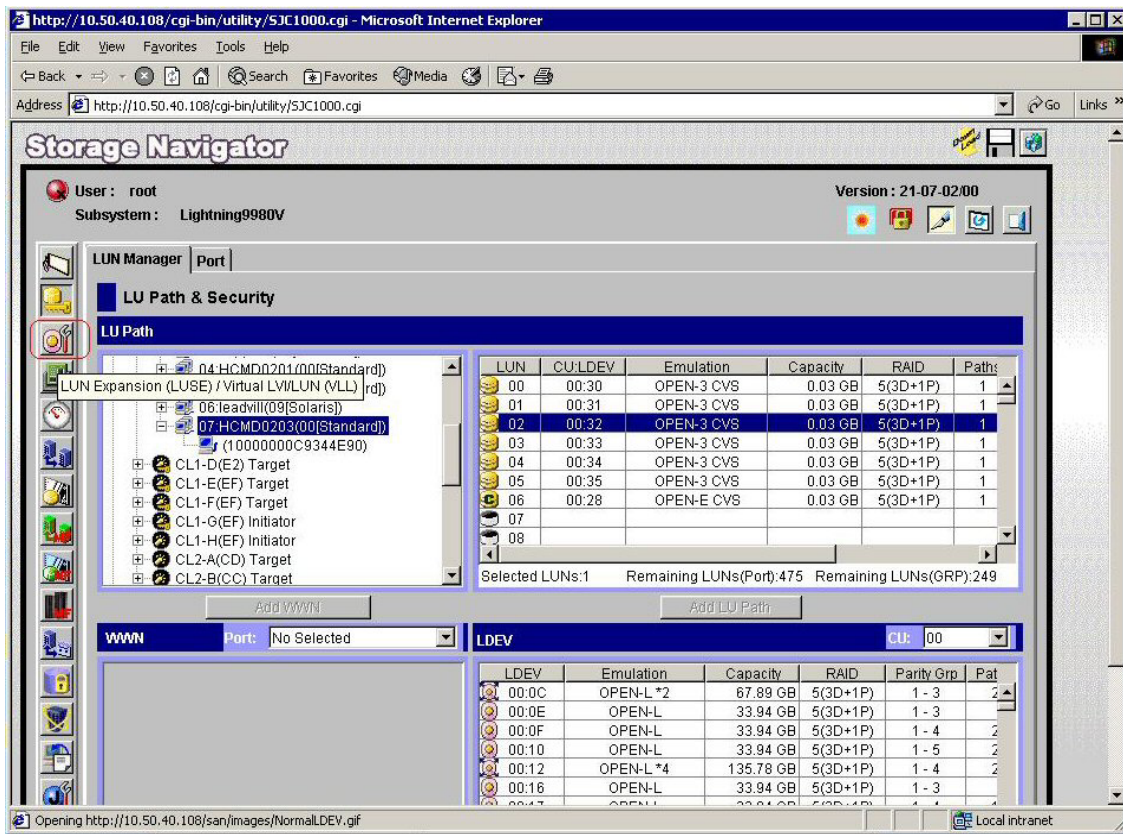



Figure C.1 Storage Navigator Main Panel

6. From the vertical menu bar, select the third icon (LUN Expansion).
7. After the window appears, select LDEV 32.
8. From the Free LDEVs column, select an LDEV (LDEV 36 in this example), and then select <<Add.

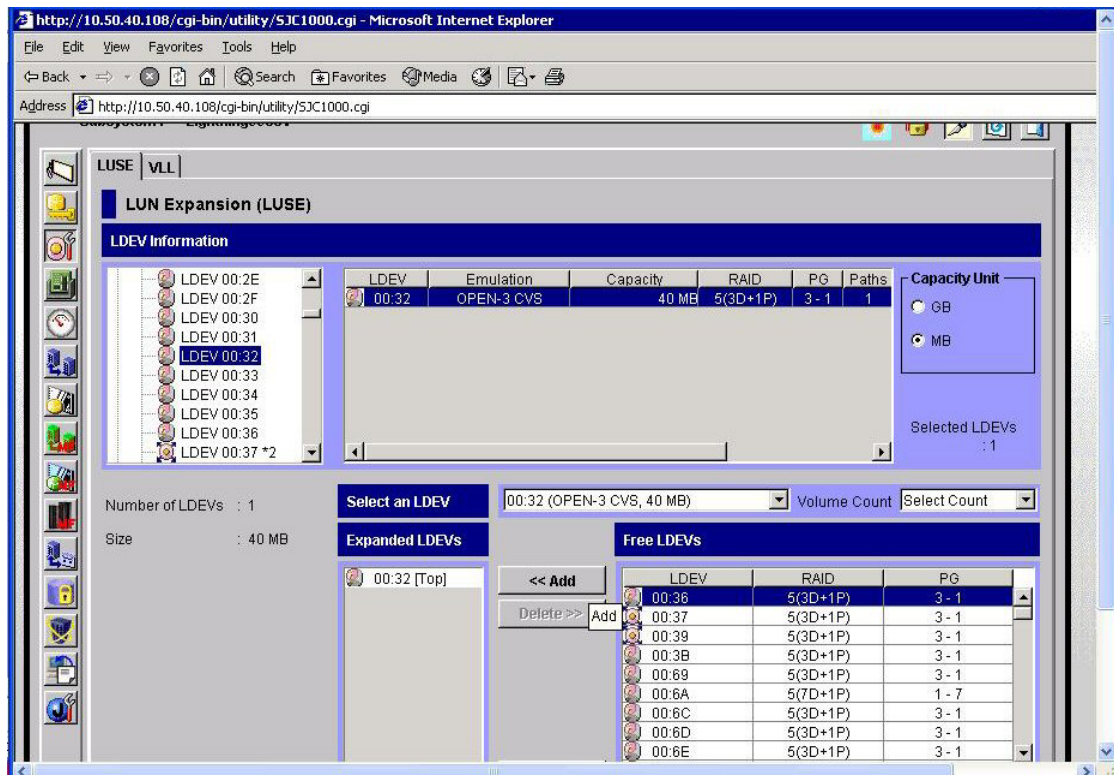


A confirmation panel will appear asking if you want to perform the LUSE operation on a volume that has a path definition.

9. Select **OK** to continue.

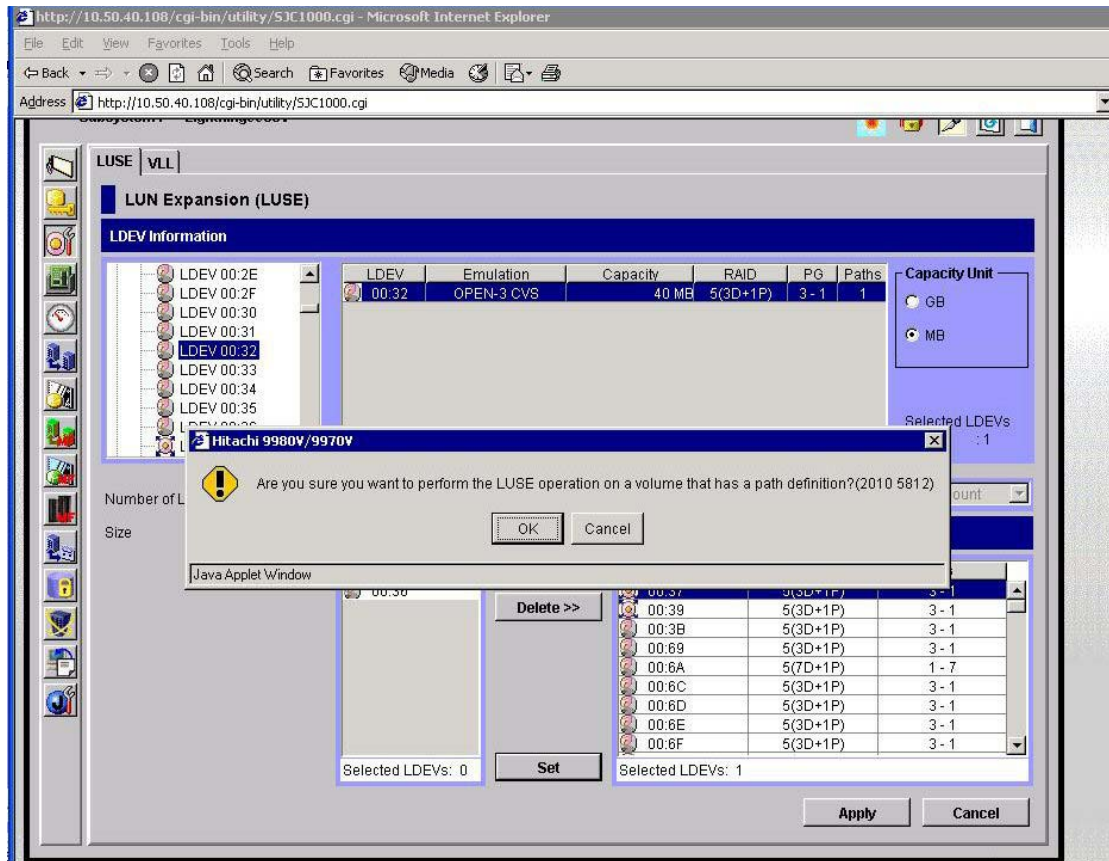


Another confirmation will appear asking if you want to continue expanding the volumes.

10. Select **OK** to continue.

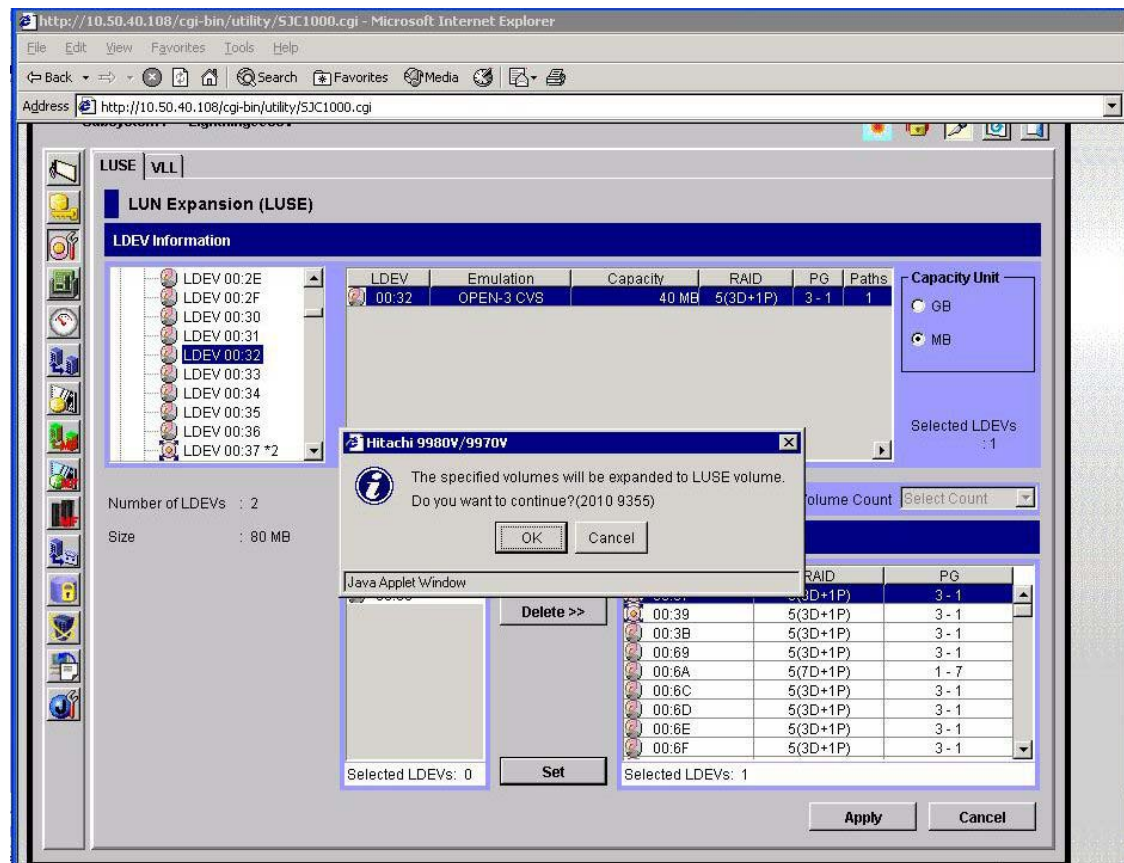


Another confirmation will appear to ask if you want to continue.

11. Select **OK** to continue.

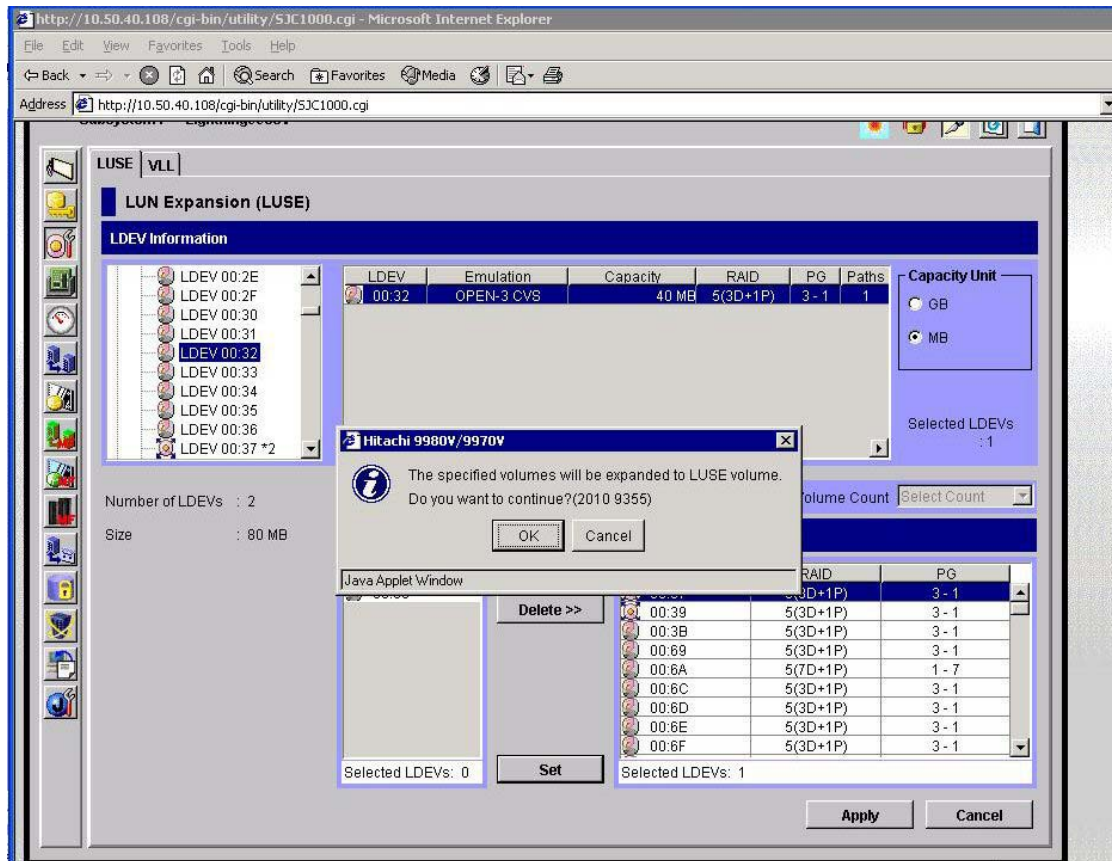


Another confirmation will appear to ask if you want to apply the new settings.

12. Select **OK** to continue.

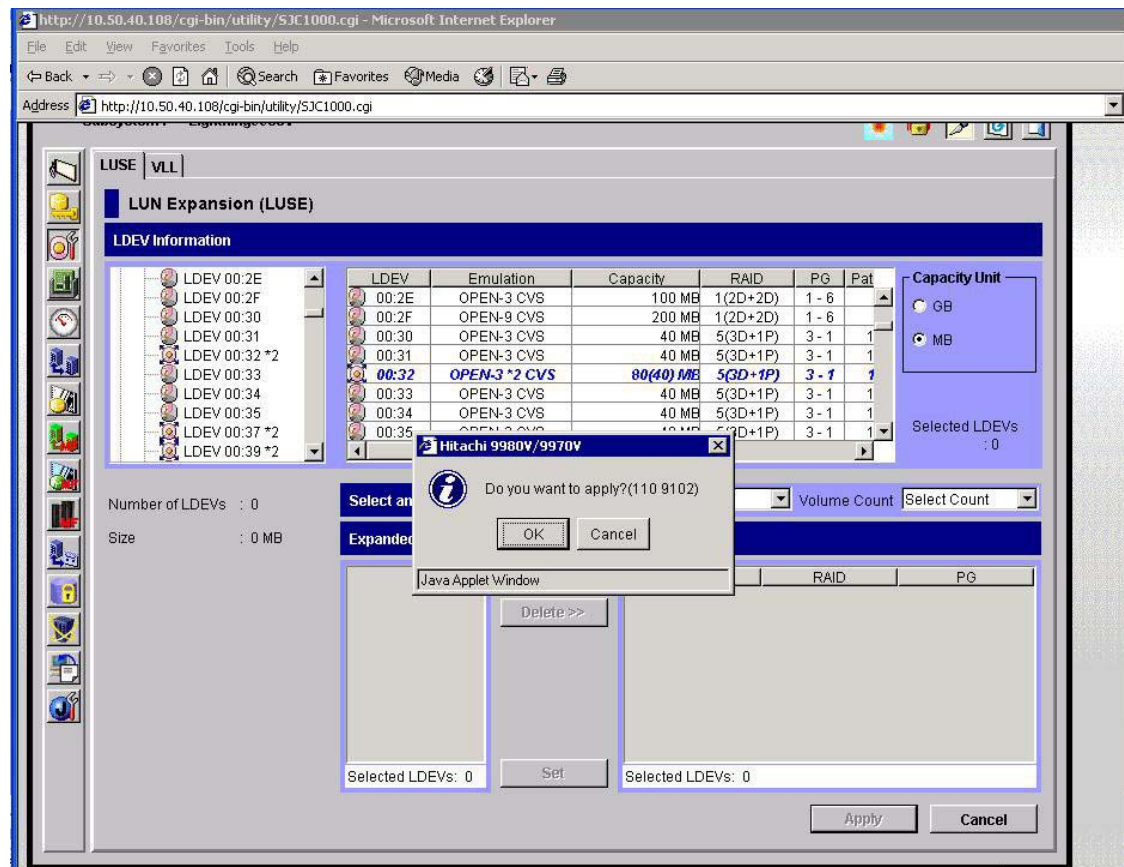


A confirmation panel appears saying that the operation has completed.

13. Select **OK** to continue.

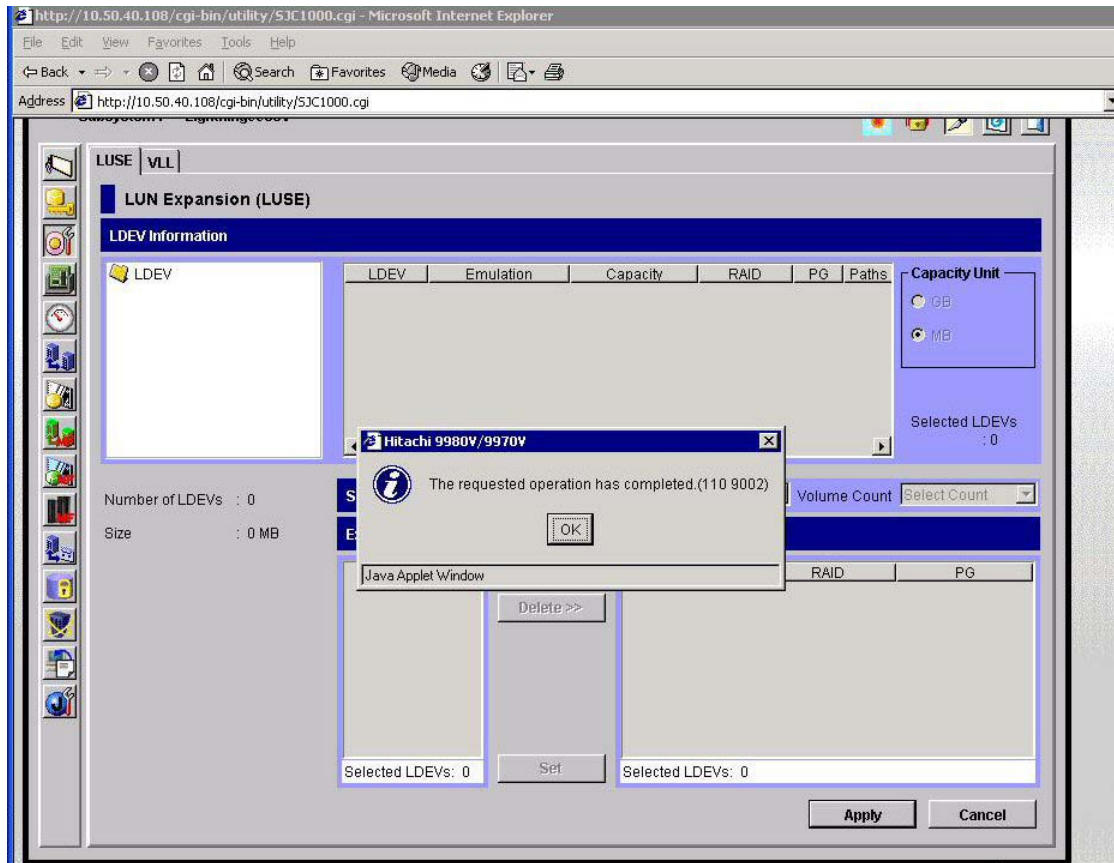

14. Return to the Windows **Computer Management** application.
15. Select **Action** from the Menu bar, then select **Rescan** from the Action subfunctions to refresh the display.

After this is done you will see that the mounted volume I:\ (disk 12) is expanded from 40 MB to 80 MB. At this point, however, the newly added disk is not yet formatted. You now must use Diskpart to combine the new partition.

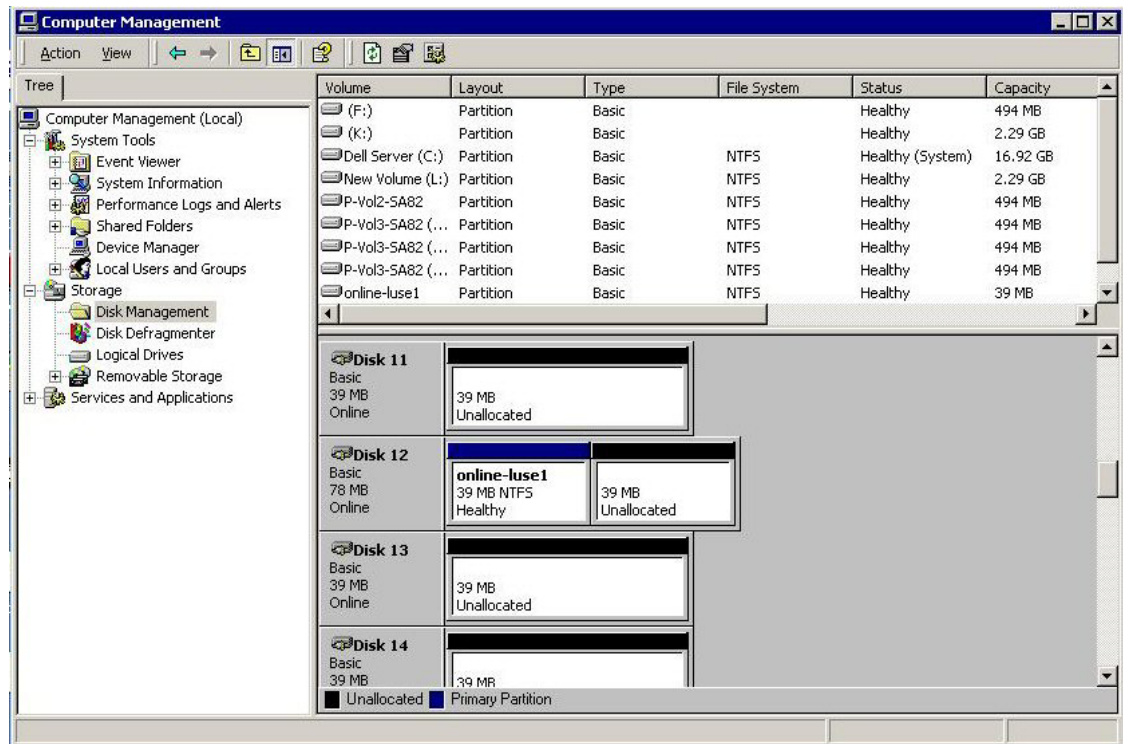

Note: Before using DiskPart, please read all applicable instructions.

- a) From a command prompt, type Diskpart and press **Enter**.
- b) At the DISKPART> prompt type list disk and press **Enter**.

A list of disks appears.

When you have identified the disk to be expanded (Disk 1 in this example), type select disk=1 (for this example) and press **Enter**.

Disk 1 is now the selected disk that the operations will be performed on.



The screenshot shows a Windows command prompt window titled "DISKPART.EXE". The text inside the window is as follows:

```
Microsoft DiskPart version 5.1.3553
Copyright (C) 1999-2001 Microsoft Corporation.
On computer: PE4400-1

DISKPART> list disk
```

Disk ###	Status	Size	Free	Dyn	Gpt
Disk 0	Online	17 GB	0 B		
Disk 1	Online	68 GB	34 GB		
Disk 2	Online	34 GB	0 B		

```
DISKPART> select disk=1


Disk 1 is now the selected disk.
```

c) At the DISKPART> prompt type detail disk and press **Enter**.

Disk details will be shown.

d) Select the volume to be used.

For this example, type select volume = 4 and press **Enter**.

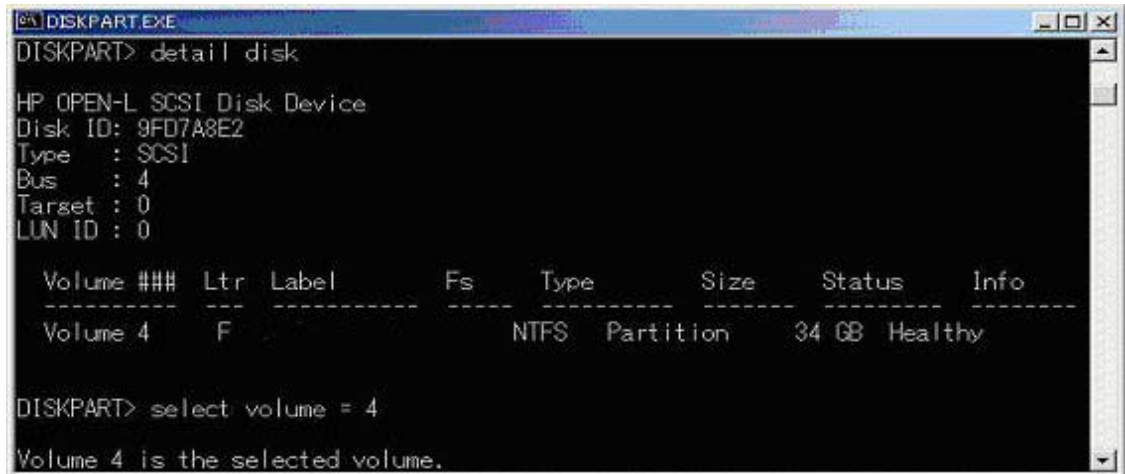

```
DISKPART> detail disk

HP OPEN-L SCSI Disk Device
Disk ID: 9FD7A8E2
Type : SCSI
Bus : 4
Target : 0
LUN ID : 0


Volume ### Ltr Label Fs Type Size Status Info
-----
Volume 4 F NTFS Partition 34 GB Healthy

DISKPART> select volume = 4

Volume 4 is the selected volume.
```

e) At the DISKPART> prompt, type extend and press **Enter** to combine the available volumes for the selected disk into a single partition.

f) Type detail disk at the DISKPART> prompt and press **Enter** to verify that the size is 68G.

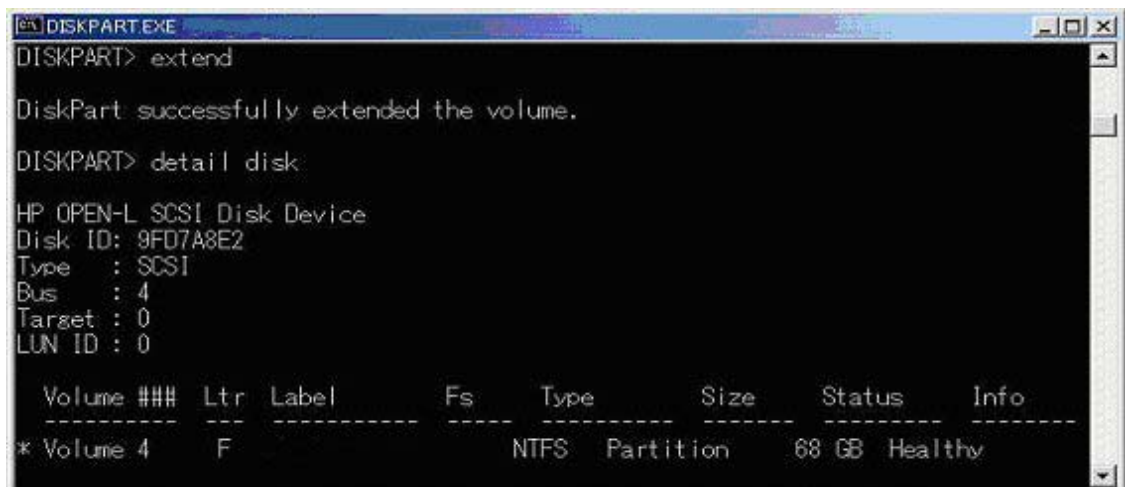

```
DISKPART> extend

DiskPart: successfully extended the volume.

DISKPART> detail disk

HP OPEN-L SCSI Disk Device
Disk ID: 9FD7A8E2
Type : SCSI
Bus : 4
Target : 0
LUN ID : 0

Volume ### Ltr Label Fs Type Size Status Info
-----
* Volume 4 F NTFS Partition 68 GB Healthy
```

16. To see the same newly expanded volume information using the HiCommand Device Manager, issue a Refresh request to the subsystem from there.
17. Run Hiscan on the Server.
18. Select the **Host View** tab to verify the expanded volume.

The screenshot shows the HiCommand Device Manager interface. The 'Host View' tab is selected, displaying information for the host 'sawin2k_sp3' with IP address 10.60.70.25 and allocated capacity of 40.95 GB. Below the host information, a table lists LUNs and their properties. A red box highlights the LUN 0:32, which is an OPEN-3x2 volume with a capacity of 80 MB and 80% usage, labeled as LUSE(CVS).

LDEV	Port / HSD / LUN	Host	Filesystem	EMU Type	Capacity	% Used	Volume Attr
0:28	CL1-C / HCMD0203 / 06	sawin2k_sp3 : 10.00.00.00.C9.34.4E.90		OPEN-E	40 MB	0 %	CVS
0:30	CL1-C / HCMD0203 / 00	sawin2k_sp3 : 10.00.00.00.C9.34.4E.90		OPEN-3	40 MB	0 %	CVS
0:31	CL1-C / HCMD0203 / 01	sawin2k_sp3 : 10.00.00.00.C9.34.4E.90		OPEN-3	40 MB	0 %	CVS
0:32	CL1-C / HCMD0203 / 02	sawin2k_sp3 : 10.00.00.00.C9.34.4E.90		OPEN-3x2	80 MB	80 %	LUSE(CVS)
0:33	CL1-C / HCMD0203 / 03	sawin2k_sp3 : 10.00.00.00.C9.34.4E.90		OPEN-3	40 MB	0 %	CVS
0:34	CL1-C / HCMD0203 / 04	sawin2k_sp3 : 10.00.00.00.C9.34.4E.90		OPEN-3	40 MB	0 %	CVS
0:35	CL1-C / HCMD0203 / 05	sawin2k_sp3 : 10.00.00.00.C9.34.4E.90		OPEN-3	40 MB	0 %	CVS

Acronyms and Abbreviations

AL	arbitrated loop
AL-PA	arbitrated loop physical address
ESCON [®]	Enterprise System Connection
FC	fibre channel
FICON [™]	Fibre Connection
HBA	host bus adapter
HDS	Hitachi Data Systems
HDLM	Hitachi Dynamic Link Manager
I/O	input/output
LDEV	logical device
LU	logical unit
LUN	logical unit number, logical unit
OFC	open fibre control
PC	personal computer system
PCI	power control interface
SCSI	small computer system interface
SIM	service information message
SNMP	simple network management protocol
TID	target ID
TOV	timeout value

