



**Hitachi Freedom Storage™
Lightning 9900™ V Series
User and Reference Guide**

© 2004 Hitachi Data Systems Corporation, ALL RIGHTS RESERVED

Notice: No part of this publication may be reproduced or transmitted in any form or by any electronic or mechanical means, including photocopying and recording, or stored in a database or retrieval system for any purpose, without the express written permission of Hitachi Data Systems Corporation.

Hitachi Data Systems reserves the right to make changes to this document at any time without notice and assumes no responsibility for its use. Hitachi Data Systems products and services can only be ordered under the terms and conditions of Hitachi Data Systems' applicable agreements, including license agreements. All of the features described in this document may not be currently available. Refer to the most recent product announcement or contact your local Hitachi Data Systems sales office for information on feature and product availability.

This document contains the most current information available at the time of publication. When new and/or revised information becomes available, this entire document will be updated and distributed to all registered users.

Trademarks

Hitachi Data Systems is a registered trademark and service mark of Hitachi, Ltd. The Hitachi Data Systems design mark is a trademark and service mark of Hitachi, Ltd.

Extended Serial Adapter, ExSA, Hitachi Freedom Storage, Hitachi Graph-Track, Hitachi TrueCopy, Hitachi FlashAccess, Hi-Track, and Lightning 9900 are registered trademarks or trademarks of Hitachi Data Systems Corporation.

APC and Symmetra are trademarks or registered trademarks of American Power Conversion Corporation.

HARBOR is a registered trademark of BETA Systems Software AG.

CNT is a registered trademark of Computer Network Technology Corporation.

HP, HP-UX, OpenVMS, and Tru64 are registered trademarks or trademarks of Hewlett-Packard Company.

AIX, DYNIX/ptx, Enterprise Storage Server, ESCON, FICON, IBM, MVS, MVS/ESA, OS/390, VM/ESA, S/390, z/OS, and zSeries are registered trademarks or trademarks of International Business Machines Corporation.

Linux is a registered trademark of Linus Torvalds.

McDATA is a trademark of McDATA Corporation.

Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

NetApp and Network Appliance are registered trademarks of Network Appliance, Inc.

Novell and NetWare are registered trademarks of Novell, Inc.

Oracle is a registered trademark of Oracle Corporation.

SGI and IRIX are registered trademarks or trademarks of Silicon Graphics, Inc.

Java, Solaris, and Sun are registered trademarks or trademarks of Sun Microsystems, Inc.

SUSE is a registered trademark of SUSE LINUX AG.

Tantia is a trademark of Tantia Technologies Inc. Tantia Technologies is a wholly owned subsidiary of BETA Systems Software AG of Berlin.

UNIX is a registered trademark of The Open Group in the United States and other countries.

VERITAS and VERITAS Cluster Server are registered trademarks or trademarks of VERITAS Operating Corporation.

All other brand or product names are or may be registered trademarks, trademarks or service marks of and are used to identify products or services of their respective owners.

Notice of Export Controls

Export of technical data contained in this document may require an export license from the United States government and/or the government of Japan. Contact the Hitachi Data Systems Legal Department for any export compliance questions.

Document Revision Level

Revision	Date	Description
MK-92RD100-P	March 2002	Preliminary Release
MK-92RD100-P1	April 2002	Revision 1 of Preliminary Release
MK-92RD100-0	May 2002	Initial Release
MK-92RD100-1	July 2002	Revision 1, supersedes and replaces MK-92RD100-0
MK-92RD100-2	October 2002	Revision 2, supersedes and replaces MK-92RD100-1
MK-92RD100-3	January 2003	Revision 3, supersedes and replaces MK-92RD100-2
MK-92RD100-4	February 2003	Revision 4, supersedes and replaces MK-92RD100-3
MK-92RD100-5	July 2003	Revision 5, supersedes and replaces MK-92RD100-4
MK-92RD100-6	November 2003	Revision 6, supersedes and replaces MK-92RD100-5
MK-92RD100-7	March 2004	Revision 7, supersedes and replaces MK-92RD100-6

Source Documents for this Revision

- DKC460I/DKU455I Disk Subsystem Hardware Specifications, revision 11 (Jan 2004)
DKC460I/DKU455I Disk Subsystem Installation Planning Guide, revision 7 (Sep 2003)
- DKC465I Disk Subsystem Hardware Specifications, revision 11 (Jan 2004)
DKC465I Disk Subsystem Installation Planning Guide, revision 7 (Sep 2003)
- ECN DKC460I-M064, revision 3 (Jan 21 2004)
ECN DKC460I-M068, revision 0 (Feb 3 2004)
CR RAID450-V08, revision 0 (Dec 1 2003)
- RAID400_RAID450_Public_Mode_Rev[1].2c
OPEN_for_RAID400_RAID450_Public_Mode_Rev[1].4a_ENG

Changes in this Revision

- Added support for increased 9970V cache memory capacity (now up to 64 GB) and shared memory capacity (now up to 4 GB) (sections 2.2.2, 2.2.3; Table 5.22).
- Added Storage Navigator support for the Linux® OS and Mozilla browser (section 2.6).
- Added information on AC box intermix (new sections 5.5.3, 5.6.3).
- Added information on the z/OS® operating system (sections 1.1, 4.1).
- Added a reference to the *HDLM for Linux® User's Guide* (Table 3.12).
- Changed Hitachi Nanocopy™ to Hitachi Copycentral™ to reflect new product name (Table 3.13; section 3.7.11).
- Added information on the following system option modes for open-system connectivity (Table 3.5):
 - Mode 140 (e-Copy)
 - Mode 165 (Windows HiSupBit)
 - Mode 228 (OpenVMS alternate path)
 - Mode 230 (ShadowImage with Solaris)
 - Mode 236 (Linux LUN recognition)
 - Mode 247 (Tru64 LUN recognition)
 - Mode 249 (Report UnitAttention for LUN add: Linux, Solaris)
 - Mode 254 (reserve conflict status)
 - Mode 272 (TruCluster)
 - Mode 278 (Tru64 and OpenVMS)
 - Mode 280 (HP-UX 11.0 and later ghost LUN remove)
- Updated the information for the following system option modes (Table 3.3, Table 3.4, Table 3.5, Table 3.9): Mode 3, Mode 36, Mode 38, Mode 198, Mode 235.
- Added reference information for mainframe Linux® operations (section 4.2.5).

Referenced Documents

Hitachi Lightning 9900™ V Series documentation. Please see Table 3.12 and Table 3.13 in section 3.7 for a listing of the user documentation for the 9900V subsystem.

IBM® documentation:

- *Planning for IBM Remote Copy*, SG24-2595
- *DFSMSdfp Storage Administrator Reference*, SC28-4920
- *DFSMS MVS V1 Remote Copy Guide and Reference*, SC35-0169
- *OS/390 Advanced Copy Services*, SC35-0395 (replaces *Advanced Copy Services*, SC35-0355)
- *Storage Subsystem Library, 3990 Transaction Processing Facility Support RPQs*, GA32-0134
- *3990 Operations and Recovery Guide*, GA32-0253
- *Storage Subsystem Library, 3990 Storage Control Reference for Model 6*, GA32-0274
- *Implementing Linux with IBM Disk Storage*, SG24-6261

Preface

This document provides the installation and configuration planning information for the Hitachi Lightning 9900™ V Series subsystems, describes the physical, functional, and operational characteristics of the Lightning 9900™ V Series subsystems, and provides general instructions for operating the Lightning 9900™ V Series subsystems.

This document assumes that:

- The user has a background in data processing and understands direct-access storage device (DASD) subsystems and their basic functions.
- The user is familiar with the open-system platforms and/or mainframe operating systems supported by the Lightning 9900™ V Series subsystem.
- The user is familiar with the equipment used to connect RAID disk array subsystems to the supported host systems.

For further information on Hitachi Data Systems products and services, please contact your Hitachi Data Systems account team, or visit Hitachi Data Systems online at <http://www.hds.com>. For specific information on supported host systems and platforms for the Lightning 9900™ V Series subsystem, please refer to the Lightning 9900™ V Series user documentation for the platform, or contact the Hitachi Data Systems Support Center.

Note: Unless otherwise noted, the term “9900V” refers to the entire Hitachi Lightning 9900™ V Series subsystem family, including all models (e.g., 9980V, 9970V) and all configurations (e.g., all-open, all-mainframe, multiplatform).

Note: The use of all Hitachi Data Systems products is governed by the terms of your license agreement(s) with Hitachi Data Systems.

Microcode Level

This document revision applies to 9900V microcode versions 21-08-05 and higher.

Comments

Please send us your comments on this document. Make sure to include the document title, number, and revision. Please refer to specific section(s) and paragraph(s) whenever possible.

E-mail: doc.comments@hds.com

Fax: 858-695-1186

Mail:

Technical Writing, M/S 35-50
Hitachi Data Systems
10277 Scripps Ranch Blvd.
San Diego, CA 92131

Thank you! (All comments become the property of Hitachi Data Systems Corporation.)

Contents

Chapter 1 Overview of the Lightning 9900™ V Series Subsystem

1.1	Key Features of the Lightning 9900™ V Series Subsystem	1
1.1.1	Continuous Data Availability	2
1.1.2	Connectivity	3
1.1.3	Mainframe Compatibility and Functionality	4
1.1.4	Open-Systems Compatibility and Functionality	5
1.1.5	Hitachi Freedom SAN™ and Hitachi Freedom Data Networks™	6
1.1.6	Hitachi Freedom NAS™ and HDS-NetApp NAS Enterprise Gateways	7
1.1.7	Program Products and Service Offerings	8
1.1.8	Subsystem Scalability	10
1.2	Reliability, Availability, and Serviceability	11

Chapter 2 Subsystem Architecture and Components

2.1	Overview	13
2.2	Components of the Controller Frame	17
2.2.1	Storage Clusters	17
2.2.2	Nonvolatile Shared Memory	18
2.2.3	Nonvolatile Duplex Cache	18
2.2.4	Multiple Data and Control Paths	19
2.2.5	Redundant Power Supplies	19
2.2.6	Channel Adapters and CHiPs	20
2.2.7	Channels	21
2.2.8	Array Control Processors (ACPs)	22
2.3	Array Frame	24
2.3.1	Hard Disk Drives	24
2.3.2	Array Groups	26
2.3.3	Sequential Data Striping	28
2.4	Intermix Configurations	29
2.4.1	RAID-1 & RAID-5 Intermix	29
2.4.2	Hard Disk Drive Intermix	30
2.4.3	Device Emulation Intermix	30
2.5	Service Processor (SVP)	31
2.6	Remote Console - Storage Navigator	32

Chapter 3 Functional and Operational Characteristics

3.1	New Features and Capabilities of the Lightning 9900™ V Series	33
3.2	I/O Operations	33
3.3	Cache Management	34
3.3.1	Algorithms for Cache Control	34
3.3.2	Write Pending Rate	34
3.4	Control Unit (CU) Images, LVIs, and LUs	35
3.4.1	CU Images	35
3.4.2	Logical Volume Image (LVIs)	35
3.4.3	Logical Unit (LU) Type	36
3.5	System Option Modes	37

3.6	Open Systems Features and Functions.....	44
3.6.1	Failover and SNMP Support	44
3.6.2	Share-Everything Architecture.....	44
3.6.3	SCSI Extended Copy Command Support	44
3.7	Data Management Functions	45
3.7.1	Hitachi TrueCopy.....	47
3.7.2	Hitachi TrueCopy - S/390®.....	47
3.7.3	Hitachi ShadowImage.....	48
3.7.4	Hitachi ShadowImage - S/390®.....	48
3.7.5	Command Control Interface (CCI).....	49
3.7.6	DB Validator	49
3.7.7	Open LDEV Guard	50
3.7.8	Extended Copy Manager (ECM).....	50
3.7.9	Hitachi Hi-Copy.....	51
3.7.10	Hitachi Extended Remote Copy (HXRC)	51
3.7.11	Hitachi Copycentral™.....	52
3.7.12	Data Migration.....	52
3.7.13	Hitachi RapidXchange (HRX)	53
3.7.14	Hitachi Multiplatform Backup/Restore (HMBR)	53
3.7.15	HARBOR® File-Level Backup/Restore	54
3.7.16	HARBOR® File Transfer	54
3.7.17	HiCommand™ Device Manager	55
3.7.18	HiCommand™ Tuning Manager	56
3.7.19	LUN Manager.....	56
3.7.20	Hitachi SANTinel (LUN Security)	57
3.7.21	Hitachi SANTinel - S/390®.....	57
3.7.22	LDEV Guard	58
3.7.23	LUN Expansion (LUSE)	58
3.7.24	Virtual LVI/LUN	58
3.7.25	FlashAccess	59
3.7.26	Cache Manager	59
3.7.27	Priority Access.....	59
3.7.28	Hitachi Parallel Access Volume (HPAV).....	59
3.7.29	Hitachi Dynamic Link Manager™ (HDLM).....	60
3.7.30	Hitachi Performance Monitor	60
3.7.31	Hitachi CruiseControl.....	60
3.7.32	Hitachi Graph-Track™	61

Chapter 4 Configuring and Using the 9900V Subsystem

4.1	Mainframe Configuration.....	63
4.1.1	Subsystem IDs (SSIDs).....	63
4.2	Mainframe Hardware Definition	64
4.2.1	Hardware Definition Using IOCP (MVS, VM, or VSE)	64
4.2.2	Hardware Definition Using HCD (MVS/ESA)	69
4.2.3	Defining the 9900V to VM/ESA® Systems	80
4.2.4	Defining the 9900V to TPF.....	80
4.2.5	Defining the 9900V to Mainframe Linux®	81

4.3	Mainframe Operations	82
4.3.1	Initializing the LVIs.....	82
4.3.2	Device Operations: ICKDSF.....	82
4.3.3	MVS Cache Operations.....	84
4.3.4	VM/ESA® Cache Operations	86
4.3.5	VSE/ESA Cache Operations.....	86
4.4	Open-Systems Configuration.....	87
4.4.1	Configuring the Fibre-Channel Ports	88
4.4.2	Virtual LVI/LUN Devices	89
4.4.3	LUN Expansion (LUSE) Devices	89
4.5	Open-Systems Operations	90
4.5.1	Command Tag Queuing	90
4.5.2	Host/Application Failover Support	90
4.5.3	Path Failover Support.....	91
4.5.4	SIM Reporting	92
4.5.5	SNMP Remote Subsystem Management	92
4.5.6	NAS and SAN Operations.....	92
4.6	Control Panel.....	93
4.6.1	Emergency Power-Off (EPO).....	95

Chapter 5 Planning for Installation and Operation

5.1	User Responsibilities and Safety Precautions	99
5.1.1	Safety Precautions	99
5.2	Dimensions, Physical Specifications, and Weight.....	100
5.3	Service Clearance, Floor Cutout, and Floor Load Rating Requirements	103
5.4	9980V-9900 Intermix Configurations.....	109
5.4.1	Service Clearance, Floor Cutout, and Floor Load Rating for 9980V-9900 Intermix.....	110
5.4.2	Restrictions and Notes for 9980V-9900 Intermix	112
5.5	Electrical Specifications and Requirements for Three-Phase Subsystems	114
5.5.1	Power Plugs for Three-Phase	115
5.5.2	Features for Three-Phase	117
5.5.3	AC Box Intermix (Three-Phase).....	118
5.5.4	Current Rating, Power Plugs, Receptacles, and Connectors for Three-Phase (60 Hz only)	119
5.5.5	Input Voltage Tolerances for Three-Phase	120
5.5.6	Cable Dimensions for 50-Hz Three-Phase Subsystems	120
5.6	Electrical Specifications and Requirements for Single-Phase Subsystems.....	121
5.6.1	Power Plugs for Single-Phase	122
5.6.2	Features for Single-Phase	125
5.6.3	AC Box Intermix (Single-Phase)	126
5.6.4	Current Rating, Power Plugs, Receptacles, and Connectors for Single-Phase (60 Hz only)	127
5.6.5	Input Voltage Tolerances for Single-Phase	127
5.6.6	Cable Dimensions for 50-Hz Single-Phase Subsystems	128
5.7	Cable Requirements.....	129
5.7.1	Device Interface Cable	130

5.8	Channel Specifications and Requirements	131
5.9	Environmental Specifications and Requirements	133
5.9.1	Temperature and Humidity Requirements	133
5.9.2	Power Consumption and Heat Output Specifications	134
5.9.3	Loudness.....	137
5.9.4	Air Flow Requirements	137
5.9.5	Vibration and Shock Tolerances	138
Chapter 6	Troubleshooting	
6.1	Troubleshooting	139
6.2	Calling the Hitachi Data Systems Support Center.....	140
6.3	Service Information Messages (SIMs)	141
Appendix A	Acronyms and Abbreviations	143
Appendix B	Units and Unit Conversions	147

List of Figures

Figure 2.1	Lightning 9980V HiStar Network (HSN) Architecture	14
Figure 2.2	9980V Subsystem Frames.....	15
Figure 2.3	9970V Subsystem Frame.....	16
Figure 2.4	Conceptual 9980V ACP Array Domain	22
Figure 2.5	Sample RAID-1 2D + 2D Layout	26
Figure 2.6	Sample RAID-5 3D + 1P Layout (Data Plus Parity Stripe)	27
Figure 2.7	Sample RAID Level Intermix	29
Figure 2.8	Sample 9980V Device Emulation Intermix.....	30
Figure 2.9	Example of 9900V Remote Console - Storage Navigator & SVP Configuration ..	32
Figure 3.1	Fibre-Channel Device Addressing	36
Figure 4.1	IOCP Definition for FICON™ Channels (direct connect and via FICON™ switch)	65
Figure 4.2	IOCP Definition for 1024 LVIs (9900V connected to host CPU(s) via ESCD).....	66
Figure 4.3	IOCP Definition for 1024 LVIs (9900V directly connected to CPU).....	67
Figure 4.4	Master MENU (Step 1).....	71
Figure 4.5	Basic HCD Panel (Step 2).....	72
Figure 4.6	Define, Modify, or View Configuration Data (Step 3).....	72
Figure 4.7	Control Unit List Panel (Step 4).....	73
Figure 4.8	Add Control Unit Panel (Step 5).....	73
Figure 4.9	Selecting the Operating System (Step 6)	74
Figure 4.10	Control Unit Chpid, CUADD, and Device Address Range Addressing (Step 7) ...	74
Figure 4.11	Select Processor / Control Unit Panel (Step 8)	75
Figure 4.12	Control Unit List (Step 9)	75
Figure 4.13	I/O Device List Panel (Step 10)	76
Figure 4.14	Add Device Panel (Step 11)	76
Figure 4.15	Device / Processor Definition Panel - Selecting the Processor ID (Step 12)	77
Figure 4.16	Define Device / Processor Panel (Step 13)	77
Figure 4.17	Device / Processor Definition Panel (Step 14)	78
Figure 4.18	Define Device to Operating System Configuration (Step 15)	78
Figure 4.19	Define Device Parameters / Features Panel (Step 16)	79
Figure 4.20	Update Serial Number, Description and VOLSER Panel (Step 18).....	79
Figure 4.21	LVI Initialization for MVS: ICKDSF JCL.....	82
Figure 4.22	Displaying Cache Statistics Using MVS DFSMS	84
Figure 4.23	IDCAMS LISTDATA COUNTS (JCL example).....	84
Figure 4.24	Fibre Port-to-LUN Addressing	88
Figure 4.25	Alternate Pathing	91
Figure 4.26	9980V Control Panel	93
Figure 4.27	Emergency Power-Off (EPO).....	95
Figure 5.1	Physical Overview of 9980V Subsystem	97
Figure 5.2	Physical Overview of the 9970V Subsystem	98
Figure 5.3	9980V DKC and DKU Physical Dimensions.....	100
Figure 5.4	9970V Physical Dimensions.....	101
Figure 5.5	Service Clearance and Floor Cutout for the 9980V DKC.....	104
Figure 5.6	Service Clearance and Floor Cutout for the 9980V DKU.....	105
Figure 5.7	Service Clearance and Floor Cutouts for the 9980V Minimum Configuration ..	106
Figure 5.8	Service Clearance and Floor Cutouts for 9980V Maximum Configuration	107

Figure 5.9	Service Clearance and Floor Cutout for the 9970V - All Configurations.....	108
Figure 5.10	9900-to-9980V DKC Swap	109
Figure 5.11	9900 DKU Addition to 9980V DKC.....	110
Figure 5.12	Service Clearance and Floor Cutout for 9900 (DKU405I) Connection	110
Figure 5.13	Service Clearance and Floor Cutout for 9980V-9900 Intermix Configuration..	111
Figure 5.14	Acceptable 9900-9980V Intermix Configurations	112
Figure 5.15	Prohibited 9900-9980V Intermix Configurations	113
Figure 5.16	Same Location (R1, R2, L1, L2) Required for 9900 DKUs	113
Figure 5.17	Power Plugs for Three-Phase 9980V Disk Array Unit (Europe)	115
Figure 5.18	Power Plugs for Three-Phase 9980V Disk Array Unit (USA)	115
Figure 5.19	Power Plugs for Three-Phase 9970V Subsystem (Europe).....	116
Figure 5.20	Power Plugs for Three-Phase 9970V Subsystem (USA)	116
Figure 5.21	Cable and Terminal Dimensions for 50-Hz Three-Phase Subsystems	120
Figure 5.22	Power Plugs for Single-Phase 9980V Controller (Europe).....	122
Figure 5.23	Power Plugs for Single-Phase 9980V Controller (USA).....	122
Figure 5.24	Power Plugs for a Single-Phase 9980V Disk Array Unit (Europe).....	123
Figure 5.25	Power Plugs for a Single-Phase 9980V Disk Array Unit (USA)	123
Figure 5.26	Power Plugs for a Single-Phase 9970V Subsystem (Europe)	124
Figure 5.27	Power Plugs for a Single-Phase 9970V Subsystem (USA)	124
Figure 5.28	Cable and Terminal Dimensions for 50-Hz Single-Phase Subsystems	128
Figure 5.29	9980V Subsystem Layout and Device Interface Cable Options.....	130
Figure 6.1	Typical 9900V SIM Showing Reference Code and SIM Type	141

List of Tables

Table 1.1	Program Products and Service Offerings	8-9
Table 2.1	Channel Adapter Specifications	20
Table 2.2	ACP Specifications	23
Table 2.3	Disk Drive Specifications.....	25
Table 3.1	Device Numbers for Each CU.....	35
Table 3.2	Capacities of Standard LU Types	36
Table 3.3	Common System Option Modes	37
Table 3.4	System Option Modes for Mainframe Connectivity	37
Table 3.5	System Option Modes for Open-System Connectivity	38-40
Table 3.6	System Option Modes for ShadowImage - S/390® and ShadowImage	41
Table 3.7	System Option Modes Common for all Remote Copy	41
Table 3.8	System Option Modes for TrueCopy Asynchronous.....	41
Table 3.9	System Option Modes for TrueCopy - S/390® Synchronous & Asynchronous	42
Table 3.10	System Option Modes for HXRC	43
Table 3.11	System Option Modes for Concurrent Copy (CC)	43
Table 3.12	Data Management Functions for Open-System Users.....	45-46
Table 3.13	Data Management Functions for Mainframe Users.....	46

Table 4.1	SSID Requirements	63
Table 4.2	Correspondence between Physical Paths & Channel Interface IDs (CI1-Upper)	68
Table 4.3	Correspondence between Physical Paths & Channel Interface IDs (CI2-Upper)	68
Table 4.4	HCD Definition for 64 LVIs	69
Table 4.5	HCD Definition for 256 LVIs	69
Table 4.6	ICKDSF Commands for 9900V Contrasted to RAMAC	83
Table 4.7	9900V Open-System Platforms and Configuration Guides.....	87
Table 4.8	9980V Control Panel	94
Table 5.1	9980V Physical Specifications	102
Table 5.2	9970V Physical Specifications	102
Table 5.3	Floor Load Rating and Required Clearances for 9980V Minimum Config.	106
Table 5.4	Floor Load Rating and Required Clearances for 9980V Maximum Config.	107
Table 5.5	Floor Load Rating and Required Clearances for 9970V Subsystem	108
Table 5.6	9980V and 9900 Frame Dimensions and Breaker Capacities.....	109
Table 5.7	Floor Load Rating, Required Clearances for 9980V-9900 Intermix Config.	111
Table 5.8	9980V and 9970V Three-Phase Features.....	117
Table 5.9	Current Rating, Power Plug, Receptacle, and Connector: 3-Phase 9900V	119
Table 5.10	Input Voltage Specifications for Three-Phase AC Input	120
Table 5.11	Cable and Terminal Dimensions for 50-Hz Three-Phase Subsystems.....	120
Table 5.12	9900V Single-Phase Features	125
Table 5.13	Current Rating, Power Plug, Receptacle, and Connector: Single-Phase 9900V	127
Table 5.14	Input Voltage Specifications for Single-Phase Power	127
Table 5.15	Cable and Terminal Dimensions for 50-Hz Single-Phase Subsystems.....	128
Table 5.16	Cable Requirements	129
Table 5.17	Open-Systems Channel Specifications.....	131
Table 5.18	Mainframe Channel Specifications.....	132
Table 5.19	Temperature and Humidity Requirements	133
Table 5.20	9980V DKC Component Power and Heat Output Specifications.....	134-136
Table 5.21	9980V DKU Component Power and Heat Output Specifications.....	135
Table 5.22	9970V Component Power and Heat Output Specifications.....	136-138
Table 5.23	Internal Air Flow.....	137
Table 5.24	Vibration and Shock Tolerances.....	138
Table 6.1	Troubleshooting	139
Table B.1	Unit Conversions for Standard (U.S.) and Metric Measures.....	147

Chapter 1 Overview of the Lightning 9900™ V Series Subsystem

1.1 Key Features of the Lightning 9900™ V Series Subsystem

The Hitachi Lightning 9900™ V Series subsystem provides high-speed response, continuous data availability, scalable connectivity, and expandable capacity for both open-systems and mainframe environments. The Lightning 9900™ V Series subsystem (9900V) is designed for use in 7×24 data centers that demand high-performance, non-stop operation. The Lightning 9900™ V Series subsystem is compatible with industry-standard software and supports concurrent attachment to multiple host systems and platforms. The 9900V subsystem employs and improves upon the key characteristics of generations of successful Hitachi disk storage subsystems to achieve the highest level of performance and reliability currently available. The advanced components, functions, and features of the Lightning 9900™ V Series represent an integrated approach to data retrieval and storage management.

The Lightning 9900™ V Series subsystem can operate with multihost applications and host clusters, and is designed to handle very large databases as well as data warehousing and data mining applications that store and retrieve terabytes of data. The Lightning 9900™ V Series can be configured for all-open, all-mainframe, and multiplatform operations.

The Lightning 9900™ V Series subsystem provides many benefits and advantages as well as advanced new features for the user, including double or more scalability from the 9900 in both capacity and performance. The 9900V subsystem supports an intermix of fibre-channel, ESCON®, and FICON™ host attachment for heterogeneous environments, and will introduce an enhanced design which provides high performance, high reliability, and high scalability in network-attached storage (NAS) and storage-area network (SAN) environments. The 9900V's new Java™-based user interface makes accessing, configuring, managing, and using the 9900V subsystem easier than ever. The HiCommand™ licensed software products also support the 9900V subsystem for maximum flexibility in configuration and management. The Lightning 9900™ V Series subsystem is designed to meet customers' evolving and increasing needs for data storage and retrieval in the 21st century.

- **Instant access to data around the clock:**
 - 100 percent data availability guarantee with no single point of failure
 - Highly resilient multi-path fibre architecture
 - Fully redundant, hot-swappable components and non-disruptive subsystem microcode updates
 - Global dynamic hot sparing
 - Duplexed write cache with battery backup
 - Hi-Track® “call-home” maintenance system
 - RAID-1 and/or RAID-5 array groups within the same subsystem

- **Unmatched performance and capacity:**
 - Multiple point-to-point data and control paths
 - Up to 16.4-GB/sec internal system bandwidth
 - Fully addressable 128-GB data cache; separate 3-GB control cache
 - Extremely fast and intelligent cache algorithms
 - Non-disruptive expansion to over 147 TB raw capacity
 - Simultaneous transfers from up to 32 separate hosts
 - Up to 1024 high-throughput (10K or 15K rpm) fibre-channel, dual-active disk drives
- **Extensive connectivity and resource sharing:**
 - Concurrent operation of UNIX®, Windows®, Linux®, and mainframe (S/390®, z/OS®) host systems
 - Fibre-channel, FICON™, and Extended Serial Adapter™ (ESCON®) server connections
 - Fibre-channel switched, arbitrated loop, and point-to-point configurations

1.1.1 Continuous Data Availability

The Hitachi Lightning 9900™ V Series subsystem is designed for nonstop operation and continuous access to all user data. To achieve nonstop customer operation, the 9900V subsystem accommodates online feature upgrades and online software and hardware maintenance. See section 1.2 for further information on the reliability and availability features of the Lightning 9900™ V Series subsystem.

1.1.2 Connectivity

The Hitachi Lightning 9900™ V Series RAID subsystem supports concurrent attachment to mainframe hosts and open-system (UNIX®-based and/or PC-server) platforms. The 9900V subsystem can be configured with the following port types to support all-open, all-mainframe, and multiplatform configurations:

- **Fibre-channel.** When fibre-channel interfaces are used, the 9900V subsystem can provide up to 64 ports (48 ports for 9970V) for attachment to UNIX®-based and/or PC-server platforms. The type of host platform determines the number of logical units (LUs) that may be connected to each port. Fibre-channel connection provides data transfer rates of up to 200 MB/sec (2 Gbps). The 9900V subsystem supports fibre-channel arbitrated loop (FC-AL) and fabric fibre-channel topologies as well as high-availability (HA) fibre-channel configurations using hubs and switches.
- **Extended Serial Adapter™ (ExSA™)** (compatible with ESCON® protocol). When ExSA™ channel interfaces are used, the 9900V can provide up to 32 logical control unit (CU) images and 8192 logical device (LDEV) addresses. Each physical ExSA™ channel interface supports up to 256 logical paths for a maximum of 8192 logical paths per subsystem. A maximum of 16 host paths can connect to any physical ExSA™ port (16 host paths × 16 CUs = 256 logical paths). ExSA™ connection provides transfer rates of up to 17 MB/sec.
- **FICON™.** When FICON™ channel interfaces are used, the 9900V subsystem can provide up to 32 logical control unit (CU) images and 8192 logical device (LDEV) addresses. Each physical FICON™ channel interface supports up to 512 logical paths providing a maximum of 8192 logical paths per subsystem. FICON™ connection provides transfer rates of up to 200 MB/sec (2 Gbps).

Note: Current addressing limitations for ESCON are 1024 Unit Addresses (UA) per channel. With FICON addressability is increased to 16,384.

1.1.3 Mainframe Compatibility and Functionality

The 9900V subsystem supports 3990-6, 3990-6E, and 2105 controller emulations and can be configured with multiple concurrent logical volume image (LVI) formats, including 3390-3, 3390-3R, 3390-9, and larger. In addition to full System-Managed Storage (SMS) compatibility, the 9900V subsystem also provides the following functionalities in the mainframe environment:

- Sequential data striping
- Cache fast write (CFW) and DASD fast write (DFW)
- Enhanced dynamic cache management
- Multiple Allegiance support
- Concurrent Copy (CC) support
- Peer-to-Peer Remote Copy (PPRC) and Extended Remote Copy (XRC) support
- FlashCopy® support
- Enhanced CCW support
- Priority I/O queuing
- Parallel Access Volume (PAV) support
- Transaction Processing Facility (TPF)/Multi-Path Locking Facility (MPLF) support
- Support for SuSE Linux® Enterprise Server (SLES) 8 for IBM zSeries™
- Support for Red Hat® Linux® 7.2 for IBM S/390® and zSeries™

For details on FICON™ connectivity, FICON™/Open intermix configurations, and supported HBAs, switches, and directors (e.g., McDATA, CNT) for the 9900V subsystem, please contact your Hitachi Data Systems account team.

1.1.4 Open-Systems Compatibility and Functionality

The Lightning 9900™ V Series subsystem supports multiple concurrent attachment to a variety of host operating systems (OS) and is compatible with most fibre-channel host bus adapters (HBAs). The number of logical units (LUs) that may be connected to each port is determined by the type of host platform being attached. The 9900V supports the following platforms at this time. Please contact Hitachi Data Systems for the latest information on platform, OS version, and HBA support.

- IBM® AIX®
- Sun™ Solaris™
- HP-UX®
- Microsoft® Windows NT®
- Microsoft® Windows® 2000
- Microsoft® Windows® 2003
- Novell® NetWare®
- Sequent® DYNIX/ptx®
- HP Tru64™ UNIX®
- HP OpenVMS™
- SGI™ IRIX®
- Red Hat® Linux®
- SuSE® Linux®

The 9900V subsystem provides enhanced dynamic cache management and supports command tag queuing and multi-initiator I/O. Command tag queuing (see section 4.5.1) enables hosts to issue multiple disk commands to the fibre-channel adapter without having to serialize the operations. The 9900V subsystem operates with industry-standard middleware products providing application/host failover, I/O path failover, and logical volume management. The 9900V subsystem also supports the industry-standard simple network management protocol (SNMP) for remote subsystem management from the open-system host.

The 9900V subsystem can be configured with multiple concurrent logical unit (LU) formats (e.g., OPEN-3, -9, -E, -L). The user can also configure custom-size volumes using the Virtual LVI/LUN and LUN Expansion (LUSE) features of the 9900V subsystem (see section 3.7).

1.1.5 Hitachi Freedom SAN™ and Hitachi Freedom Data Networks™

Hitachi Data Systems' end-to-end SAN Solutions give you the freedom to locate storage wherever it makes the greatest business sense to do so and protect your investment in currently installed components. Made possible by the advent and proliferation of high-speed technologies, storage area networks (SANs) break the traditional server/storage bond and enable total connectivity. As a result, you can consolidate large storage pools shareable across the enterprise, centralize management, and dramatically improve storage utilization while reducing costs.

Hitachi Data Systems' SAN Solutions enable you to increase data availability, counter spiraling information management costs, and take advantage of the speed and flexibility of SAN technology. In addition to supporting the Storage Networking Industry Association's open-systems standards, HDS SAN Solutions reduce total cost of ownership by minimizing support costs and downtime, and optimizing server and storage configurations.

The benefits of Hitachi Data Systems' SAN Solutions include:

- Server/storage system scalability
- Improved information access
- Enhanced application/backup performance
- Increased resource manageability and reliability
- Higher availability

Hitachi Freedom Data Networks™ (FDN) responds to the challenge of open architecture and multiple platforms. FDN is the locus of Hitachi's long-term vision for offering businesses complete freedom of choice in establishing data-centric enterprise networks, encompassing storage, switches, servers, management software, protocols, services, and networks developed by Hitachi, our alliance partners, and third party providers. FDN facilitates:

- Consolidation of server and storage resources
- Data sharing across the enterprise
- Centralized resource and data management
- Superior data security
- Increased availability and scalability
- Business continuity and disaster recovery

For further information on Freedom SAN™ and Freedom Data Networks™, please contact your Hitachi Data Systems account team, or visit Hitachi Data Systems online at www.hds.com.

1.1.6 Hitachi Freedom NAS™ and HDS-NetApp NAS Enterprise Gateways

Hitachi Freedom NAS™ enables you to expand configuration alternatives and boost data access. Freedom NAS enables rapid information access in a modular, rapidly deployed file server. Combined, HDS NAS and SAN technologies create a single pool of centrally managed storage, eliminating storage islands and giving you unmatched capacity, performance, and availability. Freedom NAS is an excellent solution for:

- File/Web serving
- Document/record imaging
- Streaming media
- Video design
- Telco call centers
- Manufacturing

As part of our continued commitment to deliver intelligent information infrastructures, HDS has joined forces with Network Appliance®, the NAS industry leader, to co-develop the HDS-NetApp NAS Enterprise Gateways. The Gateways leverage the powerful Hitachi Freedom Storage™ family of products to offer the high performance, availability, and scalability of SAN and the simplicity and cost effectiveness of NAS.

The HDS-NetApp NAS Gateways enable you to consolidate all of your data—SAN and NAS—into one storage system. The Gateways can be attached directly to the Hitachi Lightning 9900V™ storage subsystems (and Thunder 9500™) via fiber-channel switch. The Gateways come with a high-availability clustered configuration as an option, and offer NetApp Data ONTAP™ operating system and all major supporting utilities including Snapshot™ and SnapRestore® for seamless data backup and recovery.

The benefits of the HDS - NetApp NAS Gateways include:

- Accelerates response times for NAS (and SAN) applications
- Leverages existing storage infrastructure
- Minimizes overhead through consolidation and reduced complexity
- Simplifies management
- Increases availability and reliability
- Provides comprehensive data protection solutions
- Eliminates storage islands
- Installs quickly and easily
- Reduces operational costs

For further information on Freedom NAS™ and NAS Gateways, please contact your Hitachi Data Systems account team, or visit Hitachi Data Systems online at www.hds.com.

1.1.7 Program Products and Service Offerings

The Lightning 9900™ V Series subsystem provides many advanced features and functions that increase data accessibility, enable continuous user data access, and deliver enterprise-wide coverage of on-line data copy/relocation, data access/protection, and storage resource management. Hitachi Data Systems' software solutions provide a full complement of industry-leading copy, availability, resource management, and exchange software to support business continuity, database backup/restore, application testing, and data mining.

Table 1.1 Program Products and Service Offerings (continues on the next page)

Function	Description	See Section:
Data Replication:		
Hitachi TrueCopy™ Hitachi TrueCopy – S/390®	Enables the user to perform remote copy operations between 9900V (and 9900) subsystems in different locations. Hitachi TrueCopy provides synchronous and asynchronous copy modes for mainframe and open-system data.	3.7.1 3.7.2
Hitachi ShadowImage Hitachi ShadowImage – S/390®	Allows the user to create internal copies of volumes for a wide variety of purposes including application testing and offline backup. Can be used in conjunction with TrueCopy to maintain multiple copies of critical data at both the primary and secondary sites.	3.7.3 3.7.4
Command Control Interface (CCI)	Enables open-system users to perform TrueCopy and ShadowImage operations by issuing commands from the host to the 9900V subsystem. The CCI software supports scripting and provides failover and mutual hot standby functionality in cooperation with host failover products.	3.7.5
Extended Copy Manager (ECM)	Provides server-free backup solutions between the 9900V and backup devices (e.g., tape, disk) in SAN environments. Supports the SCSI Extended Copy command issued from the host server to the 9900V subsystem.	3.7.8
Hitachi Hi-Copy	Enables users to copy data from the Thunder 9500V to the 9900V subsystem, and to copy open-systems data from the 9900V to the 9500V subsystem.	3.7.9
Hitachi Extended Remote Copy (HXRC)	Provides compatibility with the IBM® Extended Remote Copy (XRC) mainframe host software function, which performs server-based asynchronous remote copy operations for mainframe LVIs.	3.7.9
Hitachi Copycentral™	Enables mainframe users to make Point-in-Time (PiT) copies of production data, without quiescing the application or causing any disruption to end-user operations, for such uses as application testing, business intelligence, and disaster recovery for business continuance.	3.7.11
Data migration (service offering only)	Enables the rapid transfer of data from other disk subsystems onto the 9900V subsystem. Data migration operations can be performed while applications are online using the data which is being transferred.	3.7.12
Data Sharing and Backup/Restore:		
Hitachi RapidXchange (HRX)	Enables users to transfer data between mainframe and open-system platforms using the ExSA™ and/or FICON™ channels, which provides high-speed data transfer without requiring network communication links or tape.	3.7.13
Hitachi Multiplatform Backup/Restore (HMBR)	Allows users to perform mainframe-based volume-level backup and restore operations on the open-system data stored on the multiplatform 9900V subsystem.	3.7.14
HARBOR® File-Level Backup/Restore	Enables users to perform mainframe-based file-level backup/restore operations on the open-system data stored on the multiplatform 9900V subsystem.	3.7.15
HARBOR® File Transfer	Enables users to transfer large data files at ultra-high channel speeds in either direction between open systems and mainframe servers.	3.7.16

Table 1.1 Program Products and Service Offerings (continued)

Function	Description	See Section:
Resource Management:		
HiCommand™ Device Manager	Enables users to manage the 9900V subsystem and perform functions (e.g., LUN Manager, LUN Security) from virtually any location via the HiCommand™ Web Client, command line interface (CLI), and/or third-party application.	3.7.17
LUN Manager	Enables users to configure the 9900V fibre-channel ports for operational environments (e.g., arbitrated-loop (FC-AL) and fabric topologies, host failover support).	3.7.19
Hitachi SANTinel (LUN Security) Hitachi SANTinel – S/390®	Allows users to restrict host access to data on the Lightning 9900™ V Series subsystem. Open-system users can restrict host access to LUs based on the host's World Wide Name (WWN). Mainframe users can restrict host access to LVIs based on node IDs and logical partition (LPAR) numbers.	3.7.20 3.7.21
LDEV Guard	Allows users to protect data from I/O operations performed by mainframe hosts. Users can assign an access attribute to each logical volume to restrict read and/or write operations, preventing unauthorized access to data.	3.7.22
LUN Expansion (LUSE)	Enables open-system users to create expanded LUs which can be up to 36 times larger than standard fixed-size LUs.	3.7.23
Virtual LVI (VLVI) Virtual LUN (VLUN)	Enables users to configure custom-size LVIs and LUs which are smaller than standard-size devices.	3.7.24
Hitachi FlashAccess™ (Flash)	Enables users to store specific high-usage data directly in cache memory to provide virtually immediate data availability.	3.7.25
Cache Manager	Enables users to perform FlashAccess operations from the mainframe host system. FlashAccess allows you to place specific data in cache memory to enable virtually immediate access to this data	3.7.26
Priority Access	Allows open-system users to designate prioritized ports (e.g., for production servers) and non-prioritized ports (e.g., for development servers) and set thresholds and upper limits for the I/O activity of these ports.	3.7.27
Hitachi Parallel Access Volume (HPAV)	Enables the mainframe host system to issue multiple I/O requests in parallel to single LDEVs in the Lightning 9900™ V Series subsystem. HPAV provides compatibility with the IBM® Workload Manager (WLM) host software function and supports both static and dynamic PAV functionality.	3.7.28
Hitachi Dynamic Link Manager™	Provides automatic load balancing, path failover, and recovery capabilities in the event of a path failure.	3.7.29
DB Validator	Prevents corrupted data environments by identifying and rejecting corrupted data blocks before they are written onto the storage disk, thus minimizing risk and potential costs in backup, restore, and recovery operations.	3.7.6
Open LDEV Guard	Prevents writing to volumes by the 9900V subsystem guarding the volumes.	3.7.7
Storage Utilities:		
Hitachi Performance Monitor	Performs detailed monitoring of subsystem and volume activity.	3.7.30
Hitachi CruiseControl	Performs automatic relocation of volumes to optimize performance.	3.7.31
Hitachi Graph-Track™ (GT)	Provides detailed information on the I/O activity and hardware performance of the 9900V subsystem. Hitachi Graph-Track™ displays real-time and historical data in graphical format, including I/O statistics, cache statistics, and front-end and back-end microprocessor usage.	3.7.32
HiCommand™ Tuning Manager	Provides intelligent and proactive performance and capacity monitoring as well as reporting and forecasting capabilities of storage resources.	3.7.18

1.1.8 Subsystem Scalability

The architecture of the 9900V subsystem accommodates scalability to meet a wide range of capacity and performance requirements. The 9980V storage capacity can be increased from a minimum of 108 GB net or 144 GB raw (one RAID-5(3D+1P) parity group, 36-GB HDDs) to a maximum of 124 TB net or 147 TB raw (126 RAID-5(7D+1P) parity groups of 146-GB HDDs). The 9980V nonvolatile cache can be configured from 4 GB to 128 GB in increments of 4 GB. The 9970V cache can be configured from 2 GB to 32 GB in increments of 2 GB. All disk drive and cache upgrades can be performed without interrupting user access to data.

Note: The 9980V also supports connection to existing 9900 array frames (DKU4051) in a 9980V-9900 intermix configuration, thus providing maximum flexibility for the user.

The 9900V subsystem can be configured with the desired number and type of front-end client-host interface processors (CHIPs). The CHIPs reside on the channel adapters, which are installed in pairs. Each channel adapter pair offers eight host connections. The 9980V can be configured with up to four channel adapter pairs to provide up to 64 paths to attached host processors. The number of 9980V ports is extensible up to 80 ports by adding the -8SE (serial CHA) to the DKA locations. The 9970V subsystem supports up to three channel adapter pairs and 48 paths.

The ACPs are the back-end processors which transfer data between the disk drives and cache. Each ACP pair is equipped with eight device paths. The 9980V subsystem can be configured with up to four pairs of array control processors (ACPs), providing up to thirty-two concurrent data transfers to and from the disk drives. The 9970V can be configured with one or two pairs of ACPs, providing up to sixteen concurrent data transfers to and from the disk drives.

The 9970V subsystem can support up to a combined total of four channel adapter pair features and ACP pair features. Thus if three channel adapter features with a total of 24 host interfaces are configured, one ACP pair must be configured. If two channel adapter features with a total of 16 host interfaces are configured, one or two ACP pairs may be configured. Due to the very high bandwidth of the ACP pairs in the 9970V, it is anticipated that one ACP pair will be sufficient for most 9970V applications.

1.2 Reliability, Availability, and Serviceability

The Lightning 9900™ V Series subsystem is not expected to fail in any way that would interrupt user access to data. The 9900V can sustain multiple component failures and still continue to provide full access to all stored user data. **Note:** While access to user data is never compromised, the failure of a key component can degrade performance.

The reliability, availability, and serviceability features of the 9900V subsystem include:

- **Full fault-tolerance.** The 9900V subsystem provides full fault-tolerance capability for all critical components. The subsystem is protected against disk drive error and failure by enhanced RAID technologies and dynamic scrubbing and sparing. The 9900V uses component and function redundancy to provide full fault-tolerance for all other subsystem components (microprocessors, control storage, power supplies, etc.). The 9900V has no active single point of component failure and is designed to provide continuous access to all user data.
- **Separate power supply systems.** Each storage cluster is powered by a separate set of power supplies. Each set can provide power for the entire subsystem in the unlikely event of power supply failure. The power supplies of each set can be connected across power boundaries, so that each set can continue to provide power if a power outage occurs. The 9900V can sustain the loss of multiple power supplies and still continue operation.
- **Uninterruptible power supply (UPS).** The 9900V supports connection to a UPS to provide additional battery backup capability (see sections 5.5 and 5.6).
- **Dynamic scrubbing and sparing for disk drives.** The 9900V uses special diagnostic techniques and dynamic scrubbing to detect and correct disk errors. Dynamic sparing is invoked automatically if needed. The 9980V can be configured with up to sixteen spare disk drives, and any spare disk can back up any other disk of the same speed (RPMs) and the same or less capacity, even if the failed disk and spare disk are in different array domains (attached to different ACP pairs).
- **Dynamic duplex cache.** The 9900V cache is divided into two equal segments on separate power boundaries. The 9900V places all write data in both cache segments with one internal write operation, so the data is always duplicated (duplexed) across power boundaries. If one copy of write data is defective or lost, the other copy is immediately destaged to disk. This duplex design ensures full data integrity in the event of a cache or power failure.
- **Remote copy features.** The Hitachi TrueCopy and Hitachi Extended Remote Copy (HXRC) data movement features enable the user to set up and maintain duplicate copies of mainframe and open-system data over extended distances. In the event of a system failure or site disaster, the secondary copy of data can be invoked rapidly, allowing applications to be recovered with guaranteed data integrity.

- **Hi-Track®.** The Hi-Track® maintenance support tool monitors the operation of the 9900V subsystem at all times, collects hardware status and error data, and transmits this data via modem to the Hitachi Data Systems Support Center. The Support Center analyzes the data and implements corrective action as needed. In the unlikely event of a component failure, Hi-Track® calls the Hitachi Data Systems Support Center immediately to report the failure without requiring any action on the part of the user. Hi-Track® enables most problems to be identified and fixed prior to actual failure, and the advanced redundancy features enable the subsystem to remain operational even if one or more components fail. **Note:** Hi-Track® does not have access to any user data stored on the 9900V subsystem. The Hi-Track® tool requires a dedicated RJ-11 analog phone line.
- **Nondisruptive service and upgrades.** All hardware upgrades* can be performed nondisruptively during normal subsystem operation. All hardware subassemblies can be removed, serviced, repaired, and/or replaced nondisruptively during normal subsystem operation. All subsystem microcode upgrades can be performed during normal operations using the service processor (SVP) and the alternate path facilities of the host.
 *With one exception: In a 9970V with two ACP pairs, the first 64 drives are connected to the first ACP pair, and the second 64 drives are connected to the second ACP pair. It is also possible to attach both sets of 64 disk drives to a single ACP pair. If you want to add a second ACP pair to a single-ACP-pair 9970V, a service interruption will be required to disconnect any disk drives in the second set of 64 drive locations from the first ACP pair, and to reconnect them instead to the newly installed second ACP pair.
- **Error Reporting.** The Lightning 9900™ V Series subsystem reports service information messages (SIMs) to notify users of errors and service requirements. SIMs can also report normal operational changes, such as remote copy pair status change. The SIMs are logged on the 9900V SVP, reported directly to the mainframe and open-system hosts, and reported to Hitachi Data Systems via Hi-Track®.

Chapter 2 Subsystem Architecture and Components

2.1 Overview


Figure 2.1 shows the Hierarchical Star Network (HiStar or HSN) architecture of the Lightning 9900™ V Series RAID subsystem. The “front end” of the 9900V subsystem includes the hardware and software that transfers the host data to and from cache memory, and the “back end” includes the hardware and software that transfers data between cache memory and the disk drives.

Front End: The 9900V front end is entirely resident in the 9900V disk controller (DKC) frame and includes the client-host interface processors (CHIPs) that reside on the channel adapter boards. The CHIPs control the transfer of data to and from the host processors via the channel interfaces (e.g., fibre-channel, ExSA™, FICON™) and to and from cache memory via independent high-speed paths through the cache switches (CSWs).

- Each channel adapter board contains four CHIPs, and the channel adapter boards are installed in pairs, for a total of eight host interfaces per feature. The 9980V subsystem supports up to four pairs of channel adapter boards (four sets of eight CHIPs) for a maximum of 80 host interfaces, and the 9970V subsystem supports up to three pairs of channel adapter boards to provide a maximum of 48 host interfaces.
- The 9980V controller contains four cache switch (CSW) cards, and the 9970V controller contains two CSW cards.
- Cache memory in the 9980V resides on four cache cards, and cache memory in the 9970V resides on two cards. Cache memory is backed up by battery. An additional battery must be configured on 9980V subsystems with over 32 GB of cache memory.
- Shared memory (minimum 2 GB) resides on the first two cache cards and is provided with its own power sources and backup batteries. Shared memory also has independent address and data paths from the channel adapter and disk adapter boards.

Back End: The 9900V back end is controlled by the array control processors (ACPs) that reside on the disk adapter boards in the 9900V controller frame. The ACPs control the transfer of data to and from the disk arrays via high-speed fibre (100 MB/sec or 1 Gbps) and then to and from cache memory via independent high-speed paths through the CSWs.

- The disk adapter board (DKA) contains four ACPs, and the DKAs are installed in pairs. The 9980V subsystem supports from one to four DKA pairs for a maximum of 32 ACPs. The 9970V subsystem supports one or two DKA pairs for a maximum of sixteen ACPs.

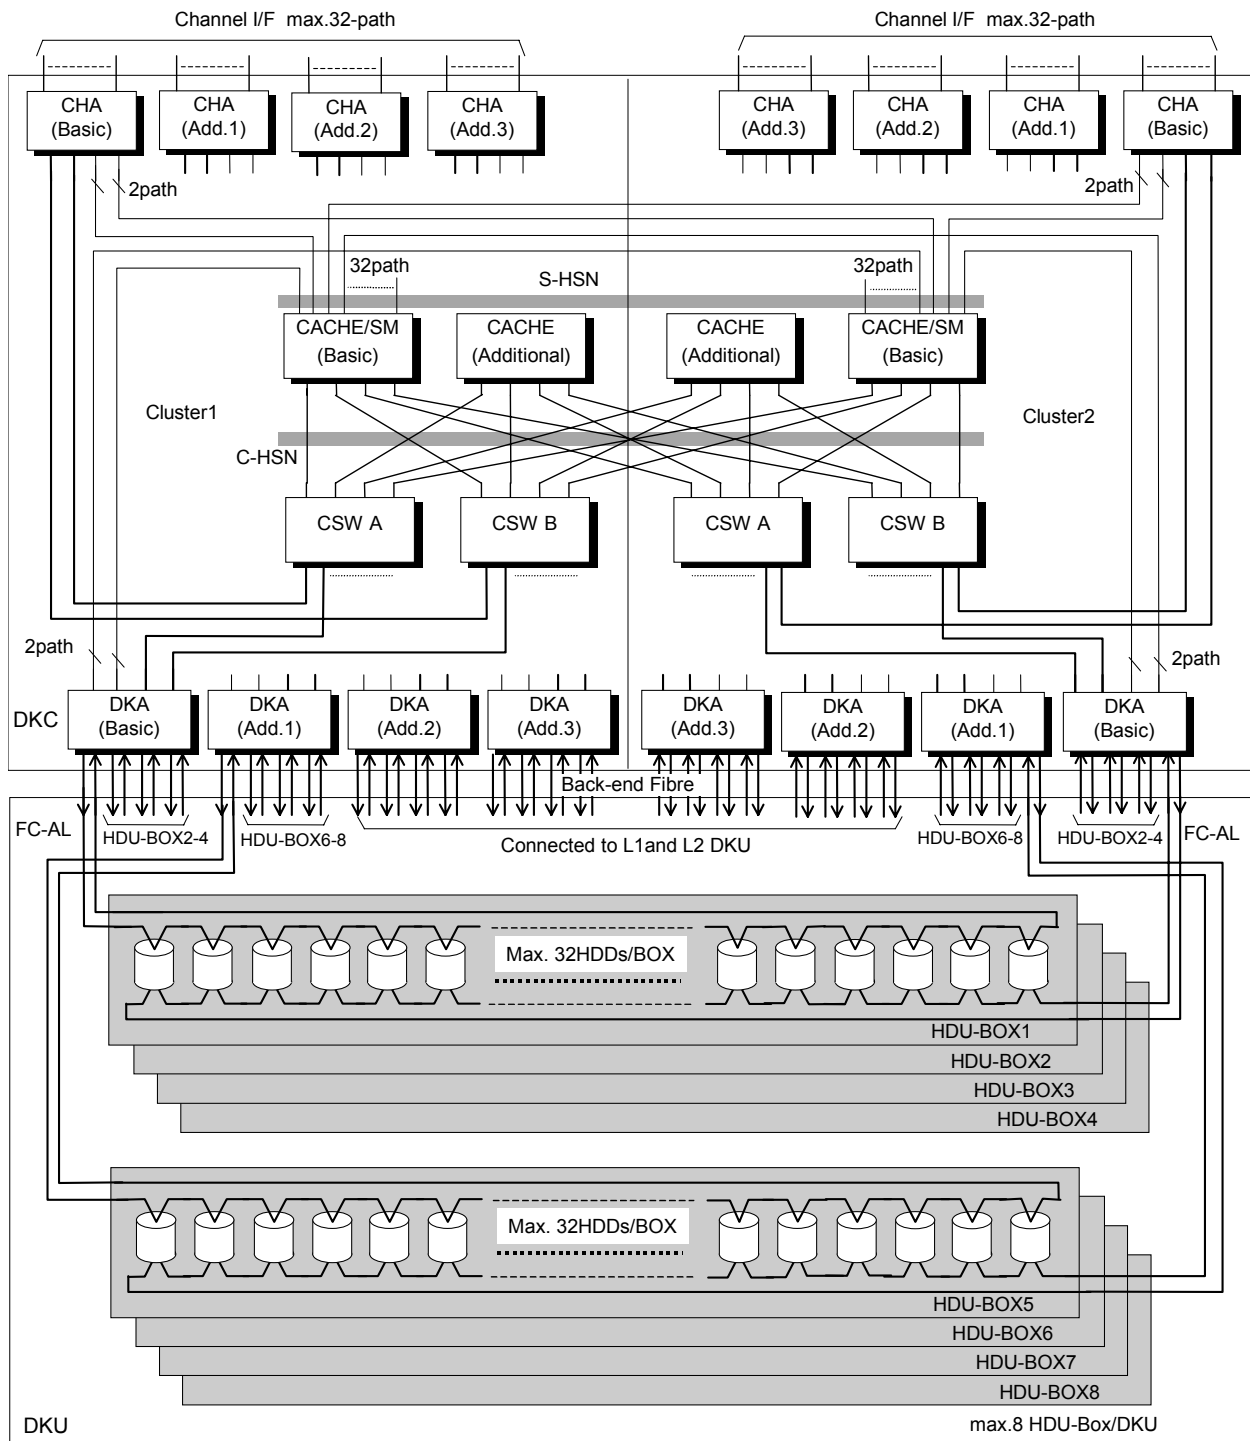

S-HSN: Shared Memory Hierarchical Star Net
C-HSN: Cache Memory Hierarchical Star Net
CSW: Cache Switch

Max.4 DKU/Subsystem
In the maximum configuration of the subsystem,
up to 64 HDDs can be connected through one FC-AL.

Figure 2.1 Lightning 9980V HiStar Network (HSN) Architecture

The 9980V subsystem (see Figure 2.2) includes the following major components:

- One controller frame containing the control and operational components of the subsystem
- Up to four disk array frames containing the storage components (disk drive arrays) of the subsystem
- The service processor (SVP) (see section 2.5). The 9900V SVP is located in the controller frame and can only be used by authorized Hitachi Data Systems personnel. The SVP provides the 9900V remote console functionality (see section 2.6).

Note: The 9980V can be equipped with an optional duplicate SVP for additional reliability.


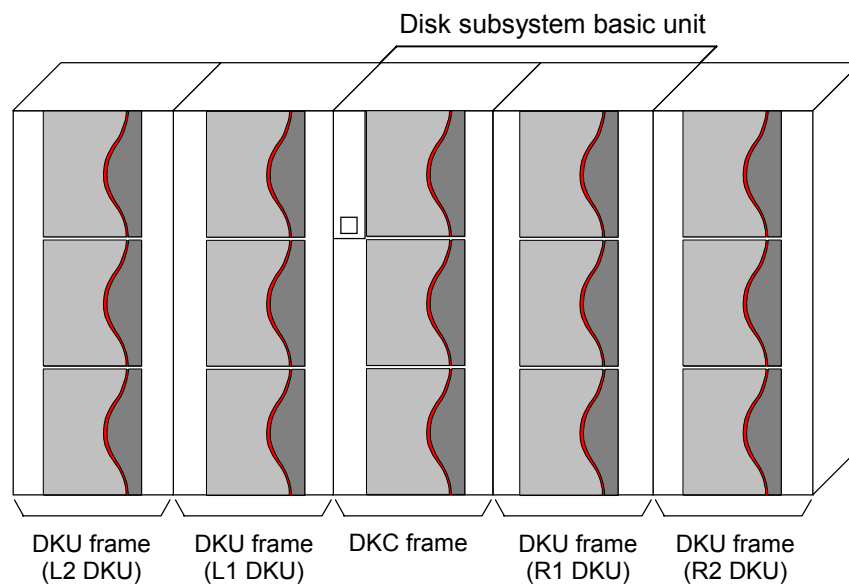


Figure 2.2 9980V Subsystem Frames

The 9970V subsystem (see Figure 2.3) includes the following major components:

- One frame containing the controller and disk components of the subsystem.
- The service processor (SVP) (see section 2.5). The 9900V SVP is located in the controller frame and can only be used by authorized Hitachi Data Systems personnel. The SVP provides the 9900V remote console functionality (see section 2.6).

Note: The 9970V can be equipped with an optional duplicate SVP for additional reliability.

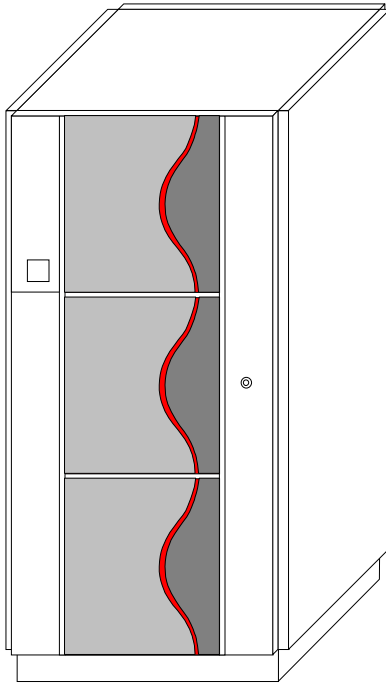

Front view

Figure 2.3 9970V Subsystem Frame

2.2 Components of the Controller Frame

The 9900V controller frame contains the control and operational components of the subsystem. For the 9970V subsystem, the controller frame also contains the disk array components. The 9900V controller is fully redundant and has no active single point of failure. All controller frame components can be repaired or replaced without interrupting access to user data. The key features and components of the controller frame are:

- Storage clusters (see section 2.2.1)
- Nonvolatile duplex shared memory (see section 2.2.2)
- Nonvolatile duplex cache memory (see section 2.2.3)
- Multiple data and control paths (see section 2.2.4)
- Redundant power supplies (see section 2.2.5)
- Channel adapters (ExSA™, fibre-channel, FICON™) (see section 2.2.6)
- Channels (see section 2.2.7)
- ACPs (see section 2.2.8)

Note: The 9980V controller frame can be connected to 9900 array frames (DKU405I) in a 9980V-9900 intermix configuration (see section 5.3).

2.2.1 Storage Clusters

Each controller frame consists of two redundant controller halves called storage clusters. Each storage cluster contains all physical and logical elements (e.g., power supplies, channel adapters, ACPs, cache, control storage) needed to sustain processing within the subsystem. Both storage clusters should be connected to each host using an alternate path scheme, so that if one storage cluster fails, the other storage cluster can continue processing for the entire subsystem.

Each pair of channel adapters is split between clusters to provide full backup for both front-end and back-end microprocessors. Each storage cluster also contains a separate, duplicate copy of cache and shared memory contents. In addition to the high-level redundancy that this type of storage clustering provides, many of the individual components within each storage cluster contain redundant circuits, paths, and/or processors to allow the storage cluster to remain operational even with multiple component failures. Each storage cluster is powered by its own set of power supplies, which can provide power for the entire subsystem in the unlikely event of power supply failure. Because of this redundancy, the Lightning 9900™ V Series subsystem can sustain the loss of multiple power supplies and still continue operation. In addition, the 9900V supports connection to a UPS to provide additional battery backup capability (see sections 5.5 and 5.6).

Note: The redundancy and backup features of the Lightning 9900™ V Series subsystem eliminate all active single points of failure, no matter how unlikely, to provide an additional level of reliability and data availability.

2.2.2 Nonvolatile Shared Memory

The nonvolatile shared memory contains the cache directory and configuration information for the 9900V subsystem. The path group arrays (e.g., for dynamic path selection) also reside in the shared memory. The shared memory is duplexed, and each side of the duplex resides on the first two cache cards, which are in clusters 1 and 2. Even though the shared memory resides on the cache cards, the shared memory has separate power supplies and separate seven-day battery backup. The basic size of the shared memory is 2 GB, and the maximum size is 6 GB for 9980V (4 GB for 9970V). The size of the shared memory storage is determined by the total cache size and the number of logical devices (LDEVs). Any required increase beyond the base size is automatically shipped and configured during the upgrade process. The shared memory is protected by battery backup.

2.2.3 Nonvolatile Duplex Cache

The 9980V subsystem can be configured with up to 128 GB of cache (increments of 4 GB), and the 9970V can be configured with up to 64 GB of cache (increments of 2 GB).

All cache memory in the 9900V is nonvolatile and is protected by 48-hour battery backup. The cache in the 9900V is divided into two equal areas (called cache A and cache B) on separate cards. Cache A is in cluster 1, and cache B is in cluster 2. The 9900V places all read and write data in cache. Write data is normally written to both cache A and B with one CHIP write operation, so that the data is always duplicated (duplexed) across logic and power boundaries. If one copy of write data is defective or lost, the other copy is immediately destaged to disk. This “duplex cache” design ensures full data integrity in the unlikely event of a cache memory or power-related failure.

Note: Mainframe hosts can specify special attributes (e.g., cache fast write (CFW) command) to write data (typically sortwork data) without write duplexing. This data is not duplexed and is usually given a discard command at the end of the sort, so that the data will not be destaged to the disk drives. See section 4.3.3 for further information on mainframe cache operations.

2.2.4 Multiple Data and Control Paths

The 9900V subsystem uses a state-of-the-art architecture called the Hierarchical Star (HiStar) Network (HSN) which utilizes multiple point-to-point data and command paths in order to provide redundancy and improve performance. Each data and command path is independent. The individual paths between the channel or disk adapters and cache are steered by high-speed cache switch cards. The 9900V does not have any common buses, thus eliminating the performance degradation and contention that can occur in a bus architecture. All data stored on the 9900V subsystem is moved into and out of cache via the redundant high-speed paths.

2.2.5 Redundant Power Supplies

Each storage cluster is powered by its own set of redundant power supplies, and each power supply is able to provide power for the entire subsystem, if necessary. Because of this redundancy, the 9900V subsystem can sustain the loss of multiple power supplies and still continue operation. To make use of this capability, the 9900V should be connected either to dual power sources or to different power panels, so if there is a failure on one of the power sources, the 9900V can continue full operations using power from the alternate source.

The 9900V also supports connection to a UPS to provide additional battery backup capability.

2.2.6 Channel Adapters and CHIPs

The channel adapter boards contain the front-end microprocessors (CHIPs) which process the channel commands from the host(s) and manage host access to cache. In the mainframe environment, the CHIPs perform CKD-to-FBA and FBA-to-CKD conversion for the data in cache. Channel adapter boards are installed in pairs. Each channel adapter board has four channel interfaces, which can all transfer at once, independently. Each channel adapter board pair is composed of one type of channel interface (e.g., ExSA™, FICON™, or fibre-channel). Fibre-channel adapters and FICON™-channel adapters are available in both shortwave (multimode) and longwave (single-mode) versions. The 9900V can be configured with multiple channel adapter pairs to support various interface configurations. Table 2.1 lists the channel adapter specifications and configurations and the number of channel connections for each configuration.

Note: Hitachi Performance Monitor and Hitachi Graph-Track (see section 3.7) allow users to collect and view usage statistics for the CHIPs in the 9900V subsystem.

Table 2.1 Channel Adapter Specifications

Parameter	Specification for 9980V	Specification for 9970V
Number of channel adapter pairs	1, 2, 3, or 4	1, 2, or 3
Simultaneous data transfers per CHA pair:		
Mainframe	8 ExSA™ (ESCON®)	
Open Systems	8 fibre channel	
Maximum transfer rate:		
ExSA™ (serial/ ESCON®)	17 MB/sec	
FICON™	100 MB/sec (1 Gbps), 200 MB/sec (2 Gbps)	
Fibre-Channel	200 MB/sec (2 Gbps)	
Physical interfaces per CHA pair		
	8 ExSA™ (ESCON®)	
	8 FICON™	
	8 or 16 fibre-channel	
Maximum physical interfaces per subsystem:	64	48
ExSA™ (serial/ESCON®)	0, 8, 16, 24, 32, 40, or 48	0, 8, 16, or 24
FICON™	0, 8, 16, 24, or 32	0, 8, 16, or 24
Fibre-channel	0, 8, 16, 24, 32, 40, 48, 56, 64	0, 8, 16, 24, 32, 40, or 48
Logical paths per FICON™ port	512 (32 host paths × 16 CUs = 512 logical paths, see note below)	
Logical paths per ExSA™ (ESCON®) port	256 (16 host paths × 16 CUs = 256 logical paths)	
Maximum logical paths per subsystem	8192	6144
Maximum LUs per fibre-channel port	512	
Maximum LVIs/LUs per subsystem	8192	8192

Note on FICON: Configuring 32 channel images per port requires the use of adjacent ports. Please contact your Hitachi Data Systems representative for important information on specific configuration requirements.

2.2.7 Channels

The Lightning 9900™ V Series subsystem supports all-open system, all-mainframe, and multiplatform operations and offers the following types of host channel connections:

- **Fibre-Channel.** The 9980V subsystem supports up to 64 fibre-channel ports, and the 9970V supports up to 48 fibre ports. The fibre ports are capable of data transfer speeds of 200 MB/sec (2 Gbps). The 9900V fibre-channel cards have 8 or 16 ports per pair of channel adapter boards. The 9900V supports shortwave (multimode) and longwave (single-mode) versions of fibre-channel adapters. When configured with shortwave fibre-channel cards, the 9900V subsystem can be located up to 500 meters (2750 feet) from the open-system host(s). When configured with longwave fibre-channel cards, the 9900V subsystem can be located up to ten kilometers from the open-system host(s).
- **Extended Serial Adapter™ (ExSA™).** The 9980V subsystem supports a maximum of 32 ExSA™ serial channel interfaces (compatible with ESCON® protocol), and the 9970V supports a maximum of 24 ExSA™ interfaces. The 9900V ExSA™ channel interface cards provide data transfer speeds of up to 17 MB/sec and have a total of eight ports per pair of channel adapter boards. Each ExSA™ channel can be directly connected to a CHPID or to a serial channel director. Shared serial channels can be used for dynamic path switching. The 9900V also supports the ExSA™ Extended Distance Feature (XDF).
- **FICON™.** The 9980V subsystem supports up to 32 FICON™ ports, and the 9970V supports up to 24 FICON™ ports. FICON™ ports are capable of data transfer speeds of up to 200 MB/sec (2 Gbps). FICON™ features, available in both shortwave (multimode) and longwave (single mode) versions, have a total of 8 FICON™ host interfaces per pair of FICON™ channel adapter cards. When configured with shortwave FICON™-channel cards, the 9900V subsystem can be located up to 500 meters (2750 feet) from the host(s). When configured with longwave FICON™-channel cards, the 9900V subsystem can be located up to ten kilometers from the host(s).

Note: FICON™ data transmission rates vary according to configuration. Please note the following:

- S/390® Parallel Enterprise Servers - Generation 5 (G5) and Generation 6 (G6) only support FICON™ at 1 Gbps.
- z800 and z900 series hosts have the following possible configurations:

FICON™ channel will operate at 1 Gbps ONLY.

FICON™ EXPRESS channel transmission rates will vary according to microcode release. If microcode is 3G or more current, the channel will auto-negotiate to set a 1-Gbps or 2-Gbps transmission rate. If microcode is previous to 3G, the channel will operate at 1 Gbps ONLY. If you need further FICON™ related information, please contact your Hitachi Data Systems representative.

2.2.8 Array Control Processors (ACPs)

The ACPs, which control the transfer of data between the disk drives and cache, are installed in pairs for redundancy and performance. Figure 2.4 illustrates a conceptual ACP pair domain. The 9980V can be configured with up to four ACP pairs, and the 9970V can be configured with one or two ACP pairs. All functions, paths, and disk drives controlled by one ACP pair are called an “array domain.” An array domain can contain a variety of LVI and/or LU configurations.

The disk drives are connected to the ACP pairs by fibre cables using an arbitrated-loop (FC-AL) topology. Each ACP has four microprocessors and four independent fibre backend paths. ACPs are installed in pairs. Each dual-ported fibre-channel disk drive is connected via its two ports to each ACP in a pair via separate physical paths for reasons of performance and redundancy. Each 9980V fibre backend path can access up to 64 disk drives (64 drives $\times$ 4 pairs of paths = 256 disk drives per ACP pair). Each 9970V fibre backend path can access up to 32 disk drives (32 drives $\times$ 4 pairs of paths = 128 disk drives per ACP pair). In a 9970V with two ACP pairs, each fibre backend path can access up to 16 disk drives (16 drives $\times$ 4 pairs of paths = 64 drives per ACP pair).

Table 2.2 lists the ACP specifications. Each 9980V ACP pair can support a maximum of 256 physical disk drives (in two array frames), including dynamic spare disk drives. Each ACP pair contains eight buffers (one per fibre path) that support data transfer to and from cache. Each disk drive has a dual-port feature and can transfer data via either port. Each of the two paths shared by the disk drive is connected to a separate ACP in the pair to provide alternate path capability. Each ACP pair is capable of eight simultaneous data transfers to or from the disk drives.

Note: Hitachi Performance Monitor and Hitachi Graph-Track (see section 3.7) allow users to collect and view usage statistics for the ACPs in the 9900V subsystem.

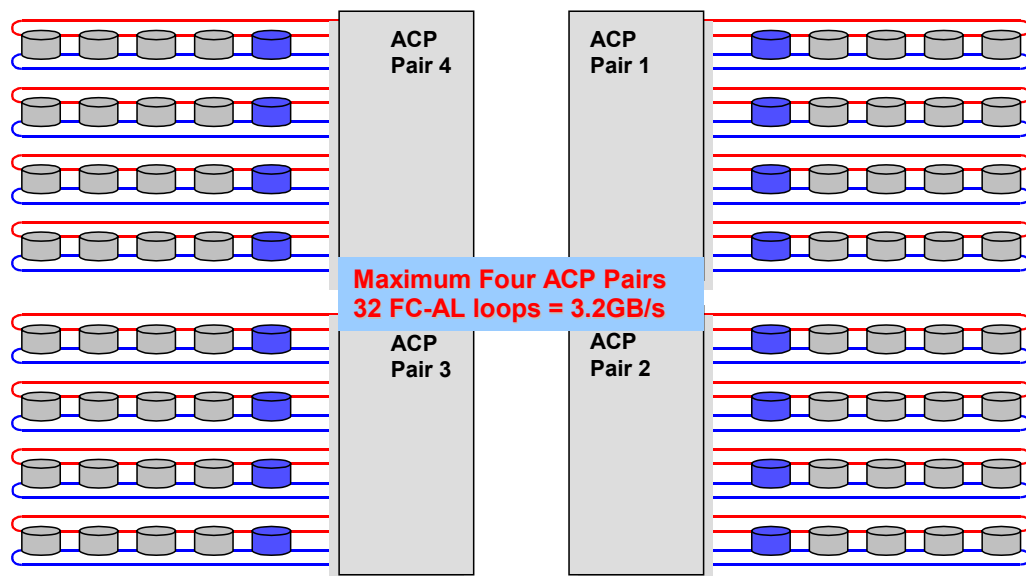


Figure 2.4 Conceptual 9980V ACP Array Domain

Table 2.2 ACP Specifications

Description	Specification for 9980V	Specification for 9970V
Number of ACP pairs	1, 2, 3 or 4	1 or 2
Backend paths per ACP pair	8	
Backend paths per subsystem	8, 16, 24 or 32	8 or 16
Array group (parity group) type per ACP pair	RAID-1 and/or RAID-5 ^[1]	
Hard disk drive type	36 GB, 73 GB, 146 GB	
Logical device emulation type	3390-x ^[2] and OPEN-x	
Backend array interface type	Fibre-channel arbitrated loop (FC-AL)	
Backend interface transfer rate (burst rate)	100 MB/sec (1 Gbps)	
Maximum concurrent backend operations per ACP pair	8	
Maximum concurrent backend operations per subsystem	32	8 or 16
HiStar Network architecture internal bandwidth	10 GB/sec	5 GB/sec

Notes:

1. RAID-5 (3D+1P), RAID-1 (2D+2D), and RAID-1 (4D+4D) intermix is allowed under an ACP pair but not within an array group. RAID-5 (7D+1P) and other RAID level intermix are allowed under two ACP pairs but not within an array group.
2. 3390-3 and 3390-3R LVIs cannot be intermixed in the same 9900V subsystem.

2.3 Array Frame

The 9980V array frames contain the physical disk drives, including the disk array groups and the dynamic spare disk drives. Each array frame has dual AC power plugs, which should be attached to two different power sources or power panels. The 9900V also supports connection to a UPS to provide additional battery backup capability. The 9980V can be configured with up to four array frames to provide a raw storage capacity of up to 147 TB. When configured in four-drive RAID-5 parity groups (3D+1P), $\frac{3}{4}$ of the raw capacity is available to store user data, and $\frac{1}{4}$ of the raw capacity is used for parity data.

Note: The 9980V controller frame can also be connected to 9900 array frames (DKU405I) in a 9980V-9900 intermix configuration (see section 5.3).

The 9970V subsystem combines the controller and disk array components in one physical frame to provide a raw storage capacity of up to 13.2 TB (RAID5, 146-GB HDD). When configured in four-drive RAID-5 parity groups (3D+1P), $\frac{3}{4}$ of the raw capacity is available to store user data, and $\frac{1}{4}$ of the raw capacity is used for parity data.

Note: Storage capacities on the 9900V are calculated based on the following values:

1 kB = 1,024 bytes, 1 MB = 1,024 kB, 1 GB = 1,024 MB, and 1 TB = 1,024 GB

2.3.1 Hard Disk Drives

The 9900V subsystem uses disk drives with fixed-block-architecture (FBA) format. The currently available disk drives have capacities of 36 GB, 73 GB, and 146 GB. Table 2.3 provides the disk drive specifications.

Each disk drive can be replaced nondisruptively on site. The 9900V utilizes diagnostic techniques and background dynamic scrubbing that detect and correct disk errors. Dynamic sparing is invoked automatically if needed. For both RAID-5 and RAID-1 array groups, any spare disk drive can back up any other disk drive of the same rotation speed and the same or lower capacity anywhere in the subsystem, even if the failed disk and the spare disk are in different array domains (attached to different ACP pairs). The 9980V can be configured with a minimum of one and a maximum of sixteen spare disk drives. The 9970V can be configured with a minimum of one and a maximum of four spare disk drives. The standard configuration provides one spare drive for each type of drive installed in the subsystem. The Hi-Track[®] monitoring and reporting tool detects disk drive failures and notifies the Hitachi Data Systems Support Center automatically, and a service representative is sent to replace the disk drive.

Note: The spare disk drives are used only as replacements and are not included in the storage capacity ratings of the subsystem.

Table 2.3 Disk Drive Specifications

Parameter	Disk Drive Capacity and Model Number			
	36 GB (15K) DKS2B-K36FC DKS2C-K36FC	73 GB (10K) DKR2D-J72FC DKR2E-J72FC	146 GB (10K) DKR2E-J146FC	73 GB (15K) DKS2C-K72FC
Formatted capacity (GB)	35.76	72.91	143.76	71.50
Platter diameter	2.5 inches	3 inches	3 inches	2.5 inches
Physical tracks per physical cylinder (user area) (number of heads)	8 / 4 * ¹	10 / 5 * ²	10	8
Physical disk platters (user area) (numbers of disks)	4 / 2 * ¹	5 / 3 * ²	5	4
Sector length (byte)	520(512)	520(512)	520 (512)	520(512)
Seek time (ms) (Read/Write) AVE	MIN	0.4 / 0.8	0.5 / 0.7	0.4 / 0.6
	MAX	7.0 / 8.0	11.0 / 12.0	6.7 / 7.1
		3.8 / 4.2	4.9 / 5.4	3.8 / 4.2
Revolution speed (rpm)	14,904	10,025	10,025	14,904
Average latency time (ms)	2.01	2.99	2.99	2.01
Internal data transfer rate (MB/sec)	68.5 to 88.3	44.2 to 74.0	57.3 to 99.9	74.5 to 111.4
Maximum interface data transfer rate (MB/sec)	100	100	100	100

Notes:

*1 DKS2C-K36FC

*2 DKR2E-J72FC

2.3.2 Array Groups

The array group (also called parity group) is the basic unit of storage capacity for the 9900V. Each array group is attached to both ACPs of an ACP pair via eight fibre paths, which enables all disk drives in the array group to be accessed simultaneously by the ACP pair. Each array frame has two canister mounts, and each canister mount can have up to 128 physical disk drives.

The 9900V supports both RAID-1 and RAID-5 array groups. Figure 2.5 illustrates a sample RAID-1 (2D+2D) layout.

RAID-1. A RAID-1 (2D+2D) array group consists of two pair of disk drives in a mirrored configuration, regardless of disk drive capacity. A RAID-1 (4D+4D) group combines two optional RAID-1 (2D+2D) groups. Data is striped to two drives and mirrored to the other two drives. The stripe consists of two data chunks. The primary and secondary stripes are toggled back and forth across the physical disk drives for high performance. Each data chunk consists of either eight logical tracks (mainframe) or 768 logical blocks (open systems). A failure in a drive causes the corresponding mirrored drive to take over for the failed drive. Although the RAID-5 implementation is appropriate for many applications, the RAID-1 option on the 9900V subsystem is ideal for workloads with low cache-hit ratios.

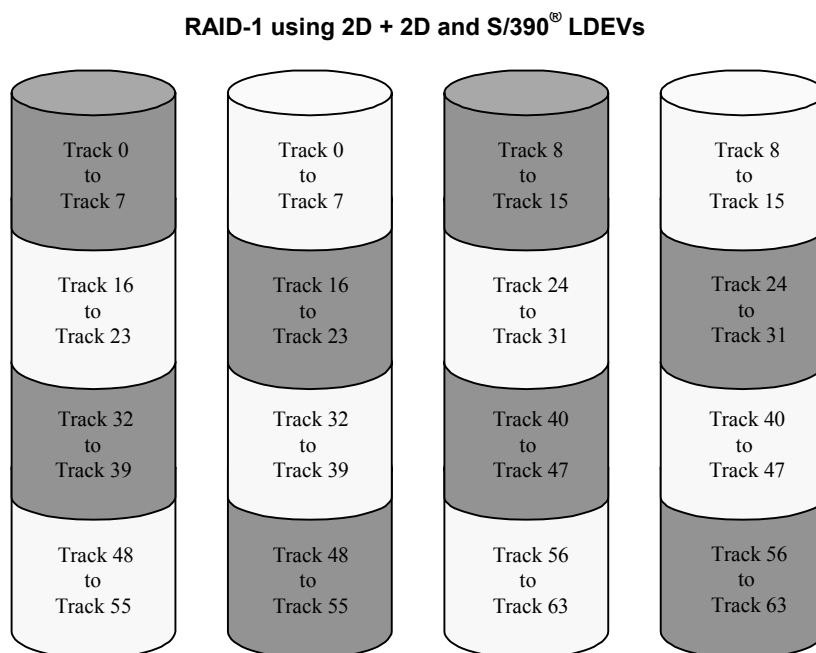


Figure 2.5 Sample RAID-1 2D + 2D Layout

RAID-5. A RAID-5 array group consists of four (3D+1P) or eight (7D+1P) disk drives. The data is written across the four (or eight) disk drives in a stripe that has three (or seven) data chunks and one parity chunk. Each chunk contains either eight logical tracks (mainframe) or 768 logical blocks (open). The enhanced RAID-5+ implementation in the 9900V subsystem minimizes the write penalty incurred by standard RAID-5 implementations by keeping write data in cache until an entire stripe can be built and then writing the entire data stripe to the disk drives. The 7D+1P RAID-5 increases usable capacity and improves performance.

Figure 2.6 illustrates RAID-5 data stripes mapped over four physical drives. Data and parity are striped across each of the disk drives in the array group (hence the term “parity group”). The logical devices (LDEVs) are evenly dispersed in the array group, so that the performance of each LDEV within the array group is the same. Figure 2.6 also shows the parity chunks that are the “Exclusive OR” (EOR) of the data chunks. The parity and data chunks rotate after each stripe. The total data in each stripe is either 24 logical tracks (eight tracks per chunk) for mainframe data, or 2304 blocks (768 blocks per chunk) for open-systems data. Each of these array groups can be configured as either 3390-x or OPEN-x logical devices. All LDEVs in the array group must be the same format (3390-x or OPEN-x). For open systems, each LDEV is mapped to a SCSI address, so that it has a TID and logical unit number (LUN).

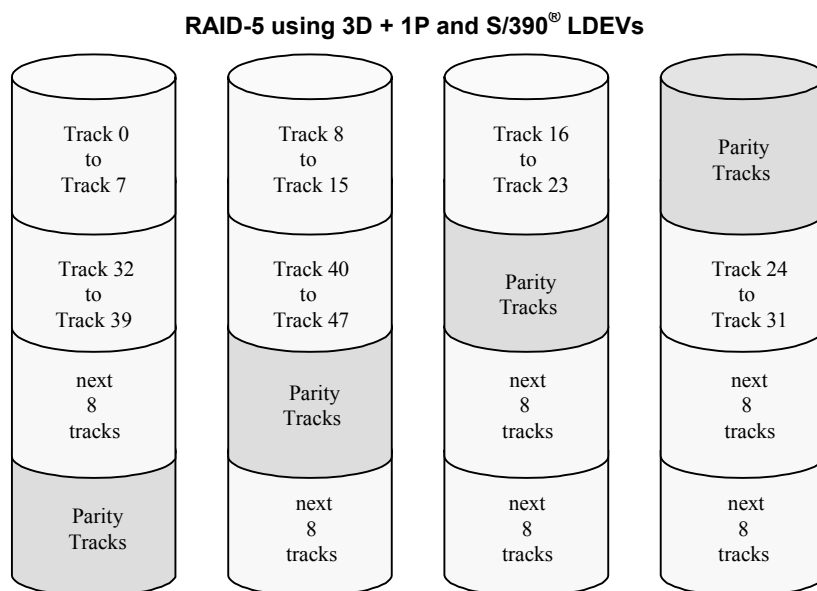


Figure 2.6 Sample RAID-5 3D + 1P Layout (Data Plus Parity Stripe)

Note: Hitachi Performance Monitor and Hitachi Graph-Track (see section 3.7) allow users to collect and view detailed usage statistics for the disk array groups in the 9900V subsystem.

2.3.3 Sequential Data Striping

The 9900V subsystem's enhanced RAID-5+ implementation attempts to keep write data in cache until parity can be generated without referencing old parity or data. This capability to write entire data stripes, which is usually achieved only in sequential processing environments, minimizes the write penalty incurred by standard RAID-5 implementations. The device data and parity tracks are mapped to specific physical disk drive locations within each array group. Therefore, each track of an LDEV occupies the same relative physical location within each array group in the subsystem.

2.4 Intermix Configurations

Note: For information on 9980V-9900 intermix configurations, please see section 5.3.

2.4.1 RAID-1 & RAID-5 Intermix

RAID technology provides full fault-tolerance capability for the disk drives of the 9900V subsystem. The cache management algorithms (see section 3.3.1) enable the 9900V to stage up to one full RAID stripe of data into cache ahead of the current access to allow subsequent access to be satisfied from cache at host channel transfer speeds.

The 9900V supports RAID-1, RAID-5, and intermixed RAID-1 and RAID-5 configurations, including intermixed array groups within an array domain. Figure 2.7 illustrates an intermix of RAID levels.

- RAID-5 (3D+1P), RAID-1 (2D+2D), and RAID-1 (4D+4D) array groups can be intermixed under one ACP pair.
- Two ACP pairs are required when RAID-5 (7D+1P) is intermixed with any other RAID level(s).

Note: The 9970V subsystem configured with one ACP pair does not support RAID-5 (7D+1P).

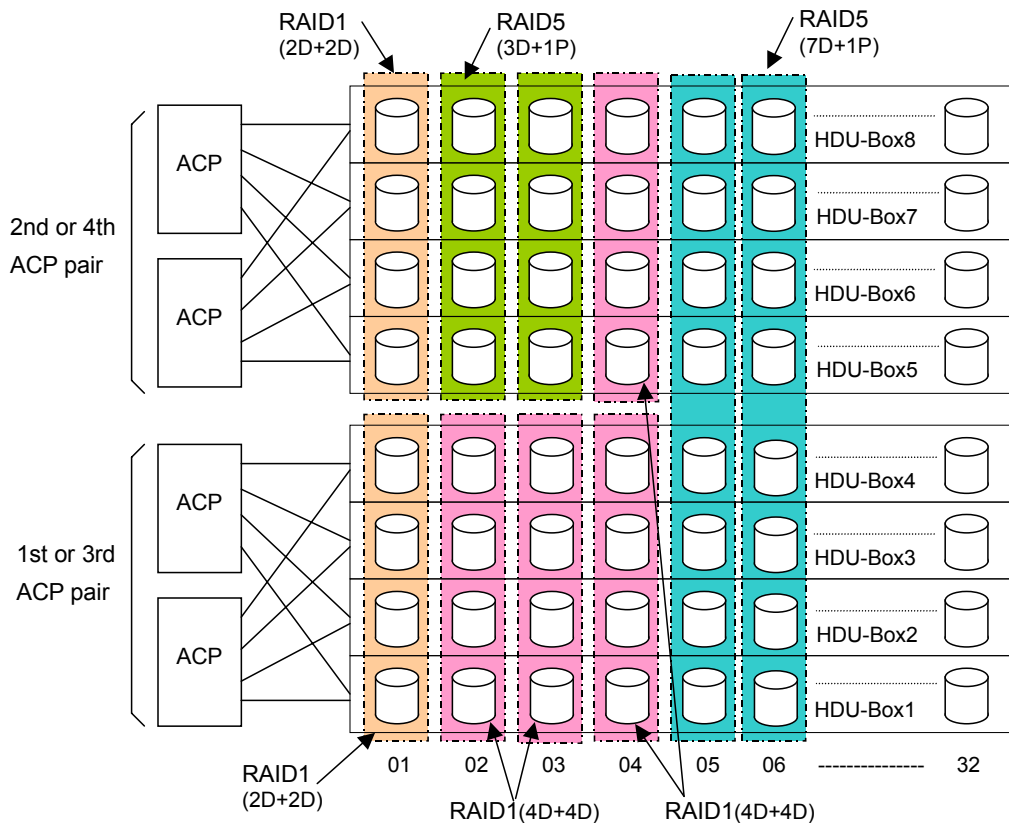


Figure 2.7 Sample RAID Level Intermix

2.4.2 Hard Disk Drive Intermix

All hard disk drives (HDDs) in one array group (parity group) must be of the same capacity and type. Different HDD types can be attached to the same ACP pair.

Note: For the latest information on available HDD types and intermix requirements, please contact your Hitachi Data Systems account team.

2.4.3 Device Emulation Intermix

Figure 2.8 illustrates an intermix of device emulation types. The 9980V subsystem supports an intermix of device emulations on the same ACP pair, with the requirement that the devices under each ACP pair have the same type of track geometry or format, as follows:

- 3390-3, 3390-9, and 3390-L can be intermixed on the same ACP pair.
 - 3390-L devices cannot be configured on array groups with 36-GB HDDs.
- OPEN-3, -9, -E, -L, and -V can be intermixed on the same ACP pair with the following restriction:
 - OPEN-L devices cannot be configured on array groups with 36-GB HDDs.

Note: For the latest information on supported LU types and intermix requirements, please contact your Hitachi Data Systems account team.

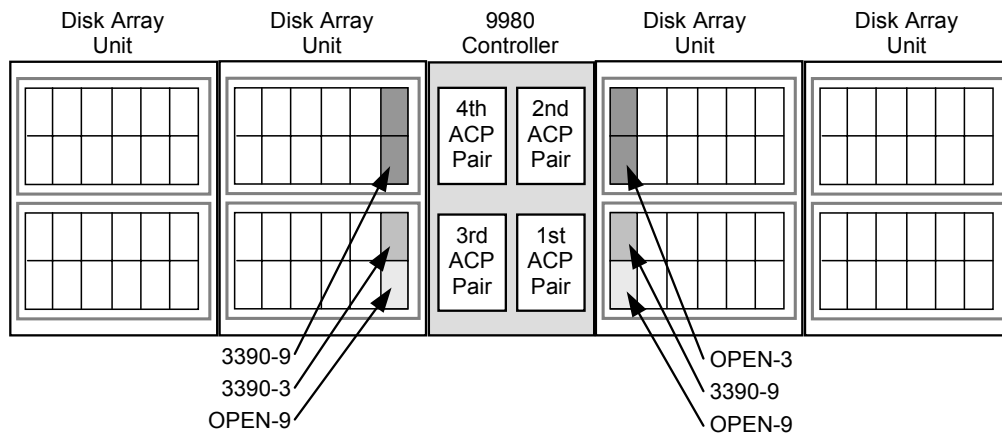


Figure 2.8 Sample 9980V Device Emulation Intermix

2.5 Service Processor (SVP)

The Lightning 9900™ V Series subsystem includes a built-in laptop PC called the service processor (SVP). The SVP is integrated into the controller frame and can only be used by authorized Hitachi Data Systems personnel. The SVP enables the Hitachi Data Systems representative to configure, maintain, and upgrade the 9900V subsystem. The SVP also collects performance data for all key components of the 9900V subsystem to enable diagnostic testing and analysis. In addition, the 9900V Storage Navigator remote console functionality is provided by the SVP (see section 2.6).

The Hitachi Graph-Track™ software product (see section 3.7.32) stores the SVP performance data and allows users to view the data in graphical format and export the data for statistical analysis.

Note: The 9900V can be equipped with an optional duplicate SVP for additional reliability.

Note: The SVP does not have access to any user data stored on the 9900V subsystem.

2.6 Remote Console – Storage Navigator

The Hitachi Lightning 9900™ V Remote Console is provided as a Java applet program which can execute on any machine that supports a Java™ Virtual Machine (JVM). The Remote Console PC hosts the Storage Navigator Java applet program and is attached to the 9900V subsystem(s) via a TCP/IP local-area network (LAN). When a Remote Console accesses and logs into the desired SVP, the Storage Navigator applet is downloaded from the SVP to the Remote Console, runs on the web browser of the Remote Console, and communicates with the attached 9900V subsystems via a TCP/IP network. Figure 2.9 shows an example of Remote Console and SVP configuration.

Two LANs can be attached to the 9900V: the 9900V internal LAN (private LAN), which is used to connect the SVP(s) of multiple subsystems, and the user's intranet (public LAN), which allows you to access the Storage Navigator functions from individual Remote Console PCs. The Remote Console communicates directly with the service processor (SVP) of each attached subsystem to obtain subsystem configuration and status information and send user-requested commands to the subsystem. The 9900V Storage Navigator Java applet program is downloaded to the Remote Console (web client) from the SVP (web server) each time the Remote Console is connected to the SVP. The Storage Navigator Java applet program runs on Web browsers (e.g., Internet Explorer, Netscape Navigator, Mozilla) which run under the Windows®, Solaris™, and Linux® operating systems to provide a user-friendly interface for the 9900V Remote Console functions.

Note: For further information on the 9900V Remote Console and Storage Navigator software, please refer to the *Hitachi Lightning 9900™ V Series Remote Console - Storage Navigator User's Guide* (MK-92RD101).

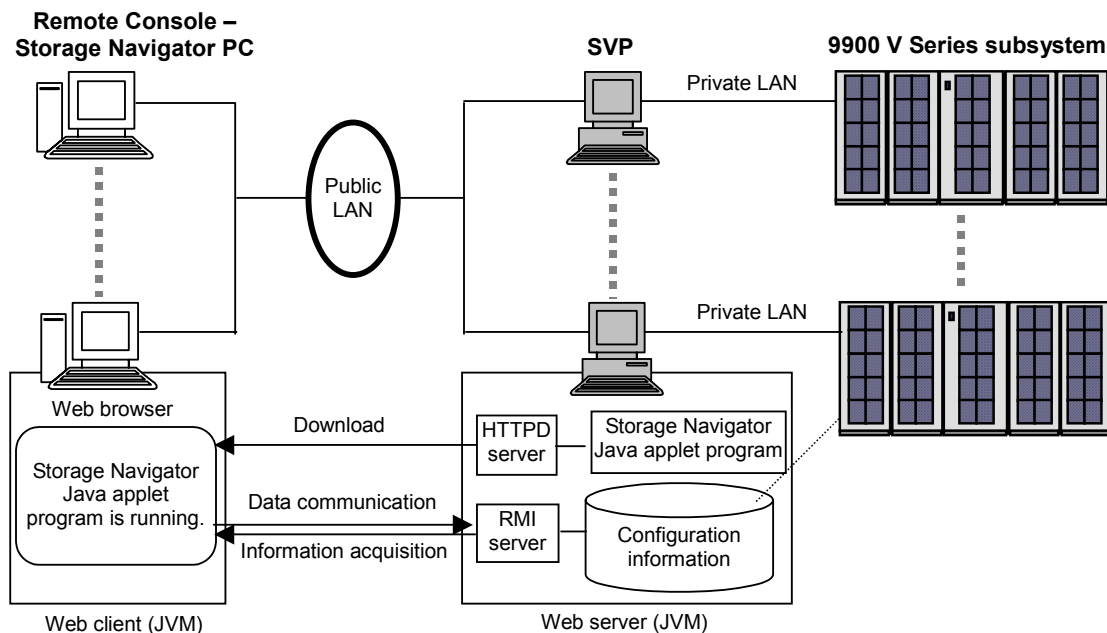


Figure 2.9 Example of 9900V Remote Console - Storage Navigator & SVP Configuration

Chapter 3 Functional and Operational Characteristics

3.1 New Features and Capabilities of the Lightning 9900™ V Series

The Hitachi Lightning 9900™ V Series subsystem offers the following new or improved features and capabilities which distinguish this model from the 9900 (9960/9910) subsystem:

- Thirty-two (32) logical control unit (CU) images (16 for 9900)
- Up to 8192 device addresses (4096 for 9900)
- Up to 128 GB cache memory for the 9980V subsystem (32 GB for 9960) and 32 GB for the 9970V (16 GB for 9910)
- Up to 1024 HDDs (512 HDDs in the 9900)
- Up to 512 LUNs per fibre-channel port (256 for 9900)
- Internal bandwidth increased by over three times relative to 9900
- State-of-the-art hard disk drives of 36-GB, 73-GB, and 146-GB capacities

3.2 I/O Operations

The 9900V I/O operations are classified into three types based on cache usage:

- **Read hit:** For a read I/O, when the requested data is already in cache, the operation is classified as a read hit. The CHIP searches the cache directory, determines that the data is in cache, and immediately transfers the data to the host at the channel transfer rate.
- **Read miss:** For a read I/O, when the requested data is not currently in cache, the operation is classified as a read miss. The CHIP searches the cache directory, determines that the data is not in cache, disconnects from the host, creates space in cache, updates the cache directory, and requests the data from the appropriate ACP pair. The ACP pair stages the appropriate amount of data into cache, depending on the type of read I/O (e.g., sequential).
- **Fast write:** All write I/Os to the 9900V subsystem are fast writes, because all write data is written to cache before being destaged to disk. The data is stored in two cache locations on separate power boundaries in the nonvolatile duplex cache (see section 2.2.3). As soon as the write I/O has been written to cache, the 9900V subsystem notifies the host that the I/O operation is complete, and then destages the data to disk.

3.3 Cache Management

3.3.1 Algorithms for Cache Control

The 9900V subsystem places all read and write data in cache, and 100% of cache memory is available for read operations. The amount of fast-write data in cache is dynamically managed by the cache control algorithms to provide the optimum amount of read and write cache, depending on the workload read and write I/O characteristics.

The algorithms for internal cache control used by the 9900V include the following:

- **Hitachi Data Systems Intelligent Learning Algorithm.** The Hitachi Data Systems Intelligent Learning Algorithm identifies random and sequential data access patterns and selects the amount of data to be “staged” (read from disk into cache). The amount of data staged can be a record, partial track, full track, or even multiple tracks, depending on the data access patterns.
- **Least-recently-used (LRU) algorithm (modified).** When a read hit or write I/O occurs in a nonsequential operation, the least-recently-used (LRU) algorithm marks the cache segment as most recently used and promotes it to the top of the appropriate LRU list. In a sequential write operation, the data is destaged by priority, so the cache segment marked as least-recently used is immediately available for reallocation, since this data is not normally accessed again soon.
- **Sequential prefetch algorithm.** The sequential prefetch algorithm is used for sequential-access commands or access patterns identified as sequential by the Intelligent Learning Algorithm. The sequential prefetch algorithm directs the ACPs to prefetch up to one full RAID stripe (24 tracks) to cache ahead of the current access. This allows subsequent access to the sequential data to be satisfied from cache at host channel transfer speeds.

Note: The 9900V subsystem supports mainframe extended count key data (ECKD) commands for specifying cache functions.

3.3.2 Write Pending Rate

The write pending rate is the percent of total cache used for write pending data. The amount of fast-write data stored in cache is dynamically managed by the cache control algorithms to provide the optimum amount of read and write cache based on workload I/O characteristics. Hitachi Performance Monitor and Hitachi Graph-Track allow users to collect and view the write-pending-rate data and other cache statistics for the Lightning 9900™ V Series subsystem.

Note: If the write pending limit is reached, the 9900V sends DASD fast-write delay or retry indications to the host until the appropriate amount of data can be destaged from cache to the disks to make more cache slots available.

3.4 Control Unit (CU) Images, LVIs, and LUs

3.4.1 CU Images

The 9900V subsystem supports the following logical CU images (emulation types): 3990-6, 3990-6E, and 2105. The 9900V subsystem is configured with one logical CU image for each 256 devices (one storage subsystem ID (SSID) for each 64 or 256 LDEVs) to provide a maximum of 32 CU images per subsystem. The mainframe data management features of the 9900V subsystem may have restrictions on CU image compatibility. FICON™ channel interface requires 2105-F20 emulation. For further information on CU image support, please contact your Hitachi Data Systems account team.

3.4.2 Logical Volume Image (LVIs)

The 9900V subsystem supports the following mainframe LVI types: 3390-3, -3R, -9, and -L. The LVI configuration of the subsystem depends on the RAID implementation and physical disk drive capacities. The 9900V LDEVs are accessed using a combination of CU number (0-1F) and device number (00-FF), as shown in Table 3.1. See section 4.1 for further information on LVI configurations.

Table 3.1 Device Numbers for Each CU

CU Number	Device Numbers		CU Number	Device Numbers
0	0:00 to 0:FF		8	8:00 to 8:FF
1	1:00 to 1:FF		9	9:00 to 9:FF
2	2:00 to 2:FF		A	A:00 to A:FF
3	3:00 to 3:FF		B	B:00 to B:FF
4	4:00 to 4:FF		C	C:00 to C:FF
5	5:00 to 5:FF		D	D:00 to D:FF
6	6:00 to 6:FF		E	E:00 to E:FF
7	7:00 to 7:FF		F	F:00 to F:FF

3.4.3 Logical Unit (LU) Type

The 9900V subsystem currently supports the following LU types: OPEN-3, OPEN-9, OPEN-E, OPEN-L, and OPEN-V. Table 3.2 lists the capacities for each standard LU type. The 9900V also allows users to configure custom-size LUs which are smaller than standard LUs as well as size-expanded LUs which are larger than standard LUs. LUN Expansion (LUSE) volumes can range in size from 4.92 GB (OPEN-3*2) to a maximum of 1312 GB (OPEN-L*36). The OPEN-V LU can vary in size from 48.1 MB to 64.422 GB.

Table 3.2 Capacities of Standard LU Types

LU Type	OPEN-3	OPEN-9	OPEN-E	OPEN-L	OPEN-V
Capacity (GB)	2.461	7.384	14.568	36.450	48.1 MB to 64.422 GB

Each LU is identified by target ID (TID) and LU number (LUN) (see Figure 3.1). Each 9900V fibre-channel port supports addressing capabilities for up to 256 LUNs when not using LUN Security and up to 512 LUNs when using LUN Security.

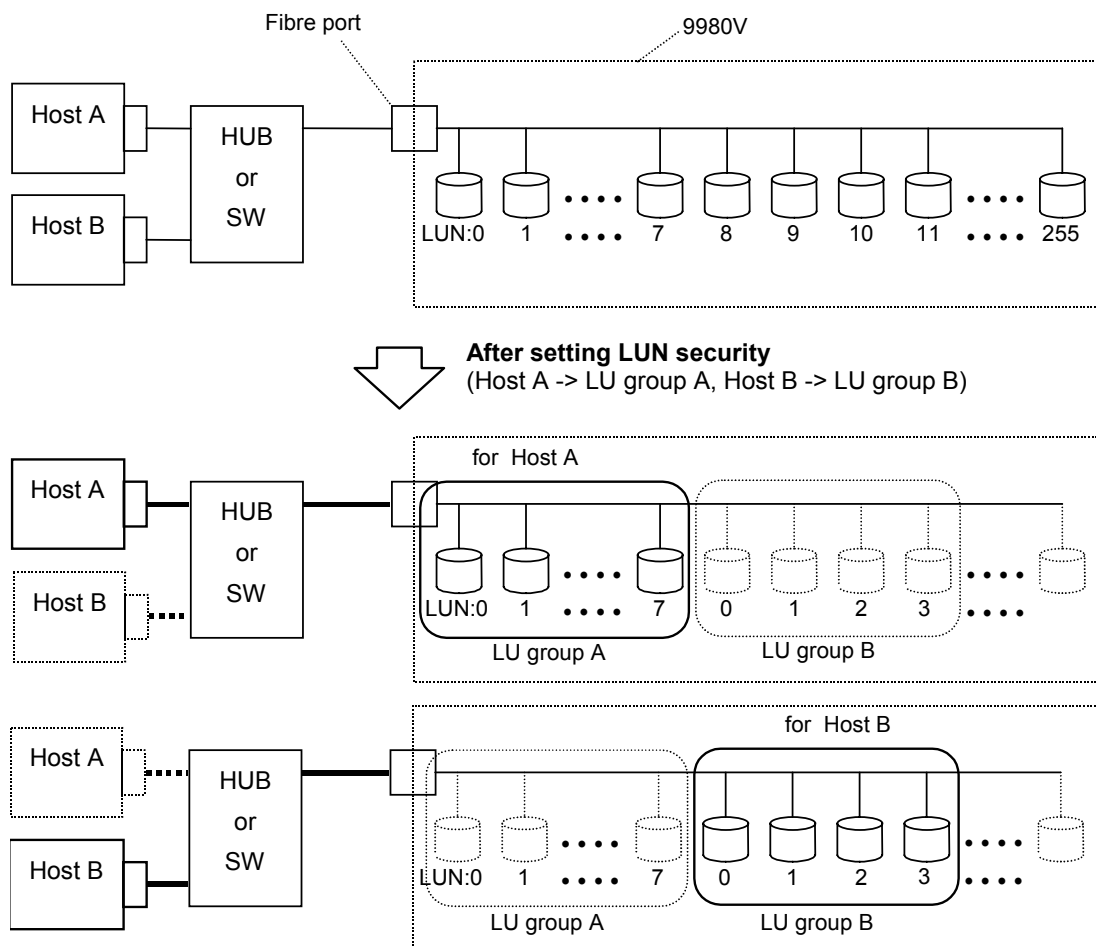


Figure 3.1 Fibre-Channel Device Addressing

3.5 System Option Modes

To provide greater flexibility and enable the 9900V to be tailored to unique customer operating requirements, additional operational parameters, or system option modes, are available for the 9900V subsystem. At installation, the 9900V modes are set to their default values (**OFF**), so make sure to discuss these settings with your Hitachi Data Systems team. The 9900V modes can only be changed by the Hitachi Data Systems representative.

Table 3.3 - Table 3.11 show the public 9900V system option modes. **Note:** This 9900V mode information was current at the time of publication of this document but may change. Please contact your Hitachi Data Systems representative for the latest information on the 9900V System Option Modes.

Table 3.3 Common System Option Modes

Mode	Level	Description and Usage
22	Mandatory	Destage schedule has been improved to support large-capacity HDD (146-GB DKR2E-J146FC). Controlling option for correction/drive copy: Turn mode 22 ON after the completion of the micro-program exchange to microcode 21-04-xx or higher. ON: Controlling option for correction/ drive copy is active. OFF: Controlling option for correction/ drive copy is not active.
235	Optional	Combine all cache queues into one single queue to improve intermixed access pattern performance over the use of multiple-queues. Note: Mode 235 is no longer required after LRU fix in microcode 21-04-04-00/00. Mode 235 is optional for microcode 21-04-03 and lower. Note: To activate Mode 235 requires a Cache PCB Dummy Replacement of one side of cache (one side only) or cache maintenance for cache/SM upgrade or downgrade. ON: Combine all cache queues into one single queue. OFF: Use several queues to manage cache efficiently and assign to control different access patterns.

Table 3.4 System Option Modes for Mainframe Connectivity

Mode	Level	Description and Usage
1	Optional	PDS search assist by learning algorithm. ON: 9900V performs PDS search assist by learning algorithm. OFF: 9900V performs PDS search assist by host indication. Micro-code level: 21-01-24-00/00 and higher.
3	Optional	EPW function for ascending record number in a cylinder. Note: Contact your Hitachi Data Systems representative for detailed information for VM MINI-DISK environment. ON: EPW can work to ascending record number in a cylinder. OFF: EPW cannot work to ascending record number in a cylinder. Micro-code level: 21-01-24-00/00 and higher.
162	Mandatory	Tuning option for mainframe performance. Set Mode162=ON (Non activation) for all subsystems with the following microcode levels: 21-02-50-00/00 or lower, 21-03-03-00/XX, 21-03-04-00/00, and 21-03-05-00/00. ON: Tuning for sequential write performance is inactive. OFF: Tuning for sequential write performance is active. Micro-code level:

Table 3.5 System Option Modes for Open-System Connectivity (continues on the following pages)

Mode	Level	Host Mode	Platform	HA Software	Description and Usage
57	Optional	All	All	None	SIM notification to open-system host. ON: 9900V reports SIM to open-system host as Sense Key/Sense code. OFF: 9900V does not send SIM to open-system host. SIM will be reported as B/C300. EC=D002 will be logged in SSB.log. Microcode level: 21-01-24-00/00 and higher.
140	Optional	All	Solaris HP	None	For e-Copy (Extended Copy Manager). ON: Response to the Inquiry command is changed, and the volume can be used from VeritasNetBackup in heterogeneous OS configuration, such as Solaris and HP-UX. OFF: Normal response to the Inquiry command. In order to use Veritas NetBackup, the response to the Inquiry command is changed. Applied to the following cases. 1. For Veritas NetBackup, FP3 (Feature Pack 3) or later is installed. 2. OS for Backup Client and Backup Server are different (i.e., heterogeneous environment). Micro-code level: 21-06-05-00/00 and higher.
161	Optional	All	All	None	Suppression of high speed micro-program exchange for CHT. ON: 9900V does not perform high speed micro-program for CHT. New micro-program is also written into flash memory on the CHT. OFF: 9900V does perform high speed micro-program for CHT. Only the microprocessor code is loaded. Either a PS OFF/ON or a dummy replace of the CHT board will be required for the subsequent loading of flash memory. Micro-code level: 21-01-24-00/00 and higher.
165	Optional	0x2C 0x0C 0x03	Windows	None	Mode for HiSupBit. ON: Set the HiSupBit to ON for the Standard Inquiry data. OFF: Set the HiSupBit to OFF for the Standard Inquiry data. When Windows OS is used, only up to 8 LUNs can be recognized. Setting this bit to ON solves the problem. For HP HBA B8602A/B, set the host mode to 0x08 and set the bit to ON. Micro-code level: 21-01-24-00/00 and higher.
186	Mandatory	0x09 0x03	Solaris HP	Veritas Database Editions/Advanced Cluster	VERITAS Database Editions/Advanced Cluster. SCSI-3 Persistent Reservation will appear in the Veritas logs when using Veritas Database Edition/Advanced Cluster with mode 186 not set. ON: Mandatory setting when VERITAS Database Editions/Advanced Cluster is connected. OFF: VERITAS Database Editions/Advanced Cluster should never be connected with this setting. Persistent Reserve feature for Veritas VCS (Veritas Cluster Server) is available with these versions. System Option MODE 186=ON is necessary for Veritas VCS. This mode enables change response to Test Unit Ready command from Initiator where key is not registered. According to SCSI-3 interface specifications, reservation conflict will be responded to Test Unit Ready command from in the above condition. Micro-code level: 21-02-23-00/00 and higher.

Table 3.5 System Option Modes for Open-System Connectivity (continued)

Mode	Level	Host Mode	Platform	HA Software	Description and Usage
198	Mandatory	0x07	Tru64	None	Tru64 connection. Note: Check the function of Mode 247. ON: Mandatory setting when Tru64 is connected. OFF: Tru64 should never be connected with this setting. Micro-code level: 21-01-24-00/00 and higher.
213	Mandatory	0x0F	AIX	HACMP	AIX + HACMP ON: Mandatory setting when AIX + HACMP is connected. OFF: AIX + HACMP should never be connected with this setting. Micro-code level: 21-02-43-00/00 and higher.
228	Mandatory	0x05	OpenVMS	MultiPath	OpenVMS Alternate path. ON: OpenVMS alternate path is available. OFF: OpenVMS alternate path is not available. Micro-code level: 21-03-05-00/00 and higher.
230	Mandatory	0x09	Solaris	Veritas NetBackup (NBU)	Extend Copy Manager + Solaris + Veritas NetBackup (NBU). ON: Backup operations using ShadowImage can be performed. OFF: Backup operations using ShadowImage cannot be performed. Micro-code level: 21-02-43-00/00 and higher.
236	Optional	0x00	Linux	Linux	For Linux (kernel 2.4.18 or later). The number of recognized LUNs is changed in the kernel version 2.4.18 or later. ON: Nine or more LUNs are recognized. OFF: Eight or less LUNs are recognized. Micro-code level: 21-04-04-00/00 and higher.
247	Mandatory	0x07	Tru64	None	Tru64 (Recognition of LUN). Micro-program has been modified to change Vendor ID and Product ID as response of Inquiry command with system option Mode 247 for Tru64 connection as shown below. - Do not Set MODE247=ON, If the subsystem is already connecting to Tru64 with old micro-code. - Set MODE247=ON, If the subsystem is newly to be connected to Tru64 with MAIN Ver.21-05-23-00/00 and later. Note: The function of Mode 247 is suppressed when Mode 198 = ON. ON: Mandatory setting when Tru64 is connected. OFF: Tru64 should never be connected with this setting. Micro-code level: 21-05-23-00/00 and higher.
249	Optional	0x00 & 0x09	Linux & Solaris	Depends on HBA	Report UnitAttention when LUN is added. ON: UnitAttention is reported. OFF: UnitAttention is not reported. Micro-code level: 21-06-22/00 and higher.
254	Optional	0x00 & 0x09	All	Veritas Database Editions	Change the response of reserve conflict status to Read Capacity, Verify, and Start Stop Unit. ON: Normal end is reported. OFF: Reserve conflict status is reported. Micro-code level : MAIN Ver. 21-06-22/00 and higher.

Table 3.5 System Option Modes for Open-System Connectivity (continued)

Mode	Level	Host Mode	Platform	HA Software	Description and Usage
272	Optional	0x07	Tru64	None	TruCluster for CA. Micro-program has been modified to change same as response of Inquiry command Page 83 data between P-Vol and S-Vol with system option. SenseCode and Inquiry Data are changed by pair statement of CA. Note: The function of Mode 247 must be set when Mode 272 = ON. ON: Response is changed. OFF: Response is not changed. Micro-code level: 21-08-05-00/00 and higher.
278	Optional	0x05 0x07	Tru64 OpenVMS	All	LUN Configuration setting for Tru64 and OpenVMS. ON: When adding/removing LUNs online, RSCN is issued so that the re-recognizing of devices will be performed for the OS. OFF: LUNs are not recognized by online. Micro-code level: 21-08-05-00/00 and higher.
280	Optional	0x03	HP-UX	All	HP-UX Ghost LUN Remove. OS version: HP-UX 11.0 and later. ON: When the host scans the LUNs on the port, DISKSUBSYSTEM is not represented in device list for HP-UX. OFF: When the host scans the LUNs on the port, DISKSUBSYSTEM is represented in device list for HP-UX. Micro-code level: 21-08-05-00/00 and higher.

Table 3.6 System Option Modes for ShadowImage – S/390® and ShadowImage

Mode	Level	Description and Usage
80	Optional	Disable the ShadowImage Quick Restore function. ON: 9900V does not perform the ShadowImage Quick Restore function. OFF: 9900V performs the ShadowImage Quick Restore function.
87	Optional	Quick Resync by CCI (RAID Manager). ON: 9900V performs ShadowImage quick resync operation for Resync command from CCI. OFF: 9900V does not perform ShadowImage quick resync operation for Resync command from CCI. Micro-code level: 21-01-24-00/00 and higher.
122	Optional	ShadowImage Quick Split and Quick Resync functions. ON: 9900V does not perform ShadowImage quick split and quick resync operations. OFF: 9900V performs ShadowImage quick split and quick resync operations.

Table 3.7 System Option Modes Common for all Remote Copy

Mode	Level	Description and Usage
21	Mandatory	Required ON for MCUs and RCUs which connect to CNT channel extenders. ON: Mandatory setting when channel extenders are connected. OFF: Channel extenders should never be connected with this setting. Micro-code level: 21-01-24-00/00 and higher.

Table 3.8 System Option Modes for TrueCopy Asynchronous

Mode	Level	Description and Usage
107	Mandatory	This is the controlling option for RecordSet. When a 9900V MCU is connected to an RCU via serial (ESCON®) interface, note the following: A. TC390 Async pairs and TrueCopy Async pairs cannot coexist in the same subsystem. B. Set MODE 107 = ON in the RCU before you create any TrueCopy Async pairs with that RCU. CAUTION: Do not set MODE 107 = ON when TC390 Async pairs exist. ON: The controlling option for RecordSet is available. OFF: The R-VOL read-only function is not available.

Table 3.9 System Option Modes for TrueCopy – S/390® Synchronous & Asynchronous

Mode	Level	Description and Usage
20	Optional	Enables TC390 – R-VOL read-only function (RCU only). ON: R-VOL read only function is available. OFF: R-VOL read only function is not available. Micro-code level: 21-01-24-00/00 and higher.
36	Optional	TC390 Synchronous – Selects function of CRIT=Y(ALL) or CRIT=Y(PATHS). ON: CRIT=Y(ALL) => equivalent to Fence Level = Data. All writes to the M-VOL will be rejected when the MCU cannot successfully execute an update copy operation for any reason, volumes will go into suspend status. This will keep the R-VOL identical to the M-VOL once the pair is synchronized, but makes the M-VOL inaccessible for updates whenever TC390 remote copy operations fail. OFF: CRIT=Y(PATHS) => equivalent to Fence Level = Status. All writes to the M-VOL will be rejected if the MCU is not able to change the status to suspended when an update copy operation fails. If the MCU changes the R-VOL pair status to suspended, subsequent write operations to the M-VOL will be permitted, and the MCU will keep track of all updates to the M-VOL while the pair is suspended. This will allow the pair to be resumed quickly using the resync copy operation. Micro-code level: 21-01-24-00/00 and higher.
38	Optional	TC390 – Changes SSB reported against the WRITE I/O to the M-VOL in critical state. ON: Intervention required. The application will wait until the condition for causing the problem is fixed. OFF: Command rejected (PPRC specification). I/O will stop and job will terminate. Micro-code level: 21-01-24-00/00 and higher.
64	Optional	TC390 CGROUP – Defines scope of CGROUP command within the 9900V. Must be OFF for GDPS. ON: All TC390 volumes in this 9900V subsystem. OFF: TC390 volumes behind the specified LCU pair (main and remote LCUs). Micro-code level: 21-01-24-00/00 and higher.
93	Optional	TC390 Async graduated delay process for sidefile control. See the TC390 User's Guide for delay times. ON: soft delay type. OFF: strong delay type. Micro-code level: 21-01-24-00/00 and higher.
104	Optional	TC390 CGROUP – Selects subsystem default for CGROUP FREEZE option. Applies only to 3990 controller emulation. Note: Mode 104 is invalid if the controller emulation is 2105. For 2105, use the CGROUP option of CESTPATH. ON: FREEZE enabled. OFF: FREEZE disabled. Micro-code level: 21-01-24-00/00 and higher.
114	Optional	TC390 – Allows dynamic port mode setting (RCP/LCP for serial, Initiator/RCU target for fibre-channel) through PPRC CESTPATH and CDELPATH commands. ON: Set defined port to RCP/LCP mode (serial) or Initiator/RCU target mode (fibre-channel) as needed. OFF: Port must be reconfigured using Remote Console PC (or SVP). Micro-code level: 21-01-24-00/00 and higher. Note: Please refer to the <i>Hitachi Lightning 9900™ V Series Hitachi TrueCopy – S/390® User and Reference Guide</i> for important restrictions on using the CESTPATH and CDELPATH commands.
118	Optional	HXRC, CC, TC390A – SIM notification when: A. HXRC+CC sidefile reaches sleep wait threshold (see modes 45, 85, 86, 97). B. TC390A sidefile reaches high-water mark (HWM = sidefile threshold - 20%) (see mode 93). ON: Generate SIM. OFF: Do not generate SIM. Micro-code level: 21-01-24-00/00 and higher.

Table 3.10 System Option Modes for HXRC

Mode	Level	Description and Usage
45	Optional	Sleep Wait suppressing option (see modes 61, 85, 86, 97). When Mode 45 is ON and Mode 61 is ON, WRITE I/Os for LDEVs are blocked by the threshold specified by SDM. ON: Sidefile threshold does not activate Sleep Wait timer at the sleep wait threshold. OFF: Sidefile threshold activates Sleep Wait timer at the sleep wait threshold. Micro-code level: 21-01-24-00/00 and higher.
61	Optional	Enables the DONOTBLOCK option of the XADPAIR command. Must be OFF if the operating system does not support the DONOTBLOCK option. ON: DONOTBLOCK option activated. OFF: DONOTBLOCK option ignored. Micro-code level: 21-01-24-00/00 and higher.
85,86	Optional	Variable sidefile threshold. Mode 85 ON and mode 86 OFF: Thresholds for Sleep wait/SCP/Puncture = 30/40/50% Mode 85 OFF and mode 86 OFF: Thresholds for Sleep wait/SCP/Puncture = 40/50/60% Mode 85 OFF and mode 86 ON: Thresholds for Sleep wait/SCP/Puncture = 50/60/70% Mode 85 ON and mode 86 ON: Thresholds for Sleep wait/SCP/Puncture = 60/70/80% Micro-code level: 21-01-24-00/00 and higher.
97	Optional	Variable Sleep Wait timer duration (see modes 45, 85, 86). ON: Sleep Wait timer duration = 10 ms. OFF: Sleep Wait timer duration = 100 ms. Micro-code level: 21-01-24-00/00 and higher.
98	Optional	Selects SCP or session cancel (see modes 45, 85, 86). ON: Forced session cancel. OFF: SCP. Micro-code level: 21-01-24-00/00 and higher.
118	Optional	HXRC, CC, TC390A – SIM notification when: A. HXRC+CC sidefile reaches sleep wait threshold (see modes 45, 85, 86, 97). B. TC390A sidefile reaches high-water mark (HWM = sidefile threshold - 20%) (see mode 93). ON: Generate SIM. OFF: Do not generate SIM. Micro-code level: 21-01-24-00/00 and higher.

Table 3.11 System Option Modes for Concurrent Copy (CC)

Mode	Level	Description and Usage
118	Optional	HXRC, CC, TC390A – SIM notification when: A. HXRC+CC sidefile reaches sleep wait threshold (see modes 45, 85, 86, 97). B. TC390A sidefile reaches high-water mark (HWM = sidefile threshold - 20%) (see mode 93). ON: Generate SIM. OFF: Do not generate SIM. Micro-code level: 21-01-24-00/00 and higher.

3.6 Open Systems Features and Functions

The 9900V subsystem offers many features and functions specifically for the open-systems environment. The 9900V supports multi-initiator I/O configurations in which multiple host systems are attached to the same fibre-channel interface. The 9900V subsystem also supports important open-system functions such as fibre-channel arbitrated-loop (FC-AL) and fabric topologies, command tag queuing, multi-initiator I/O, and industry-standard middleware products which provide application and host failover, I/O path failover, and logical volume management functions. In addition, several program products and services are specifically for open systems. See section 3.7 for more information.

3.6.1 Failover and SNMP Support

The 9900V subsystem supports industry-standard products and functions which provide host and/or application failover, I/O path failover, and logical volume management (LVM), including Hitachi Dynamic Link Manager™, VERITAS® Cluster Server, Sun™ Cluster, VERITAS® Volume Manager/DMP, HP® MC/ServiceGuard, HACMP, Microsoft® Cluster Server. For the latest information on failover and LVM product releases, availability, and compatibility, please contact your Hitachi Data Systems account team.

The 9900V subsystem also supports the industry-standard simple network management protocol (SNMP) for remote subsystem management from the UNIX®/PC server host. SNMP is used to transport management information between the 9900V subsystem and the SNMP manager on the host. The SNMP agent for the 9900V subsystem sends status information to the host(s) when requested by the host or when a significant event occurs.

3.6.2 Share-Everything Architecture

The 9900V subsystem's global cache provides a "share-everything" architecture that enables any fibre-channel port to have access to any LU in the subsystem. In the 9900V, each LU can be assigned to multiple fibre-channel ports to provide I/O path failover and/or load balancing (with the appropriate middleware support) without sacrificing cache coherency. The LUN mapping can be performed by the user using the LUN Manager remote console software, or by your Hitachi Data Systems representative (fee-based configuration service).

3.6.3 SCSI Extended Copy Command Support

The Extended Copy Manager (ECM) feature of the 9900V subsystem (see section 3.7.8) supports the SCSI Extended Copy (e-copy) command issued from the host server to the 9900V subsystem. ECM provides a server-free backup solution between the 9900V subsystem and backup devices (e.g., tape, disk) in a storage-area network (SAN) environment, eliminating server CPU and I/O overhead during movement of data and decreasing the time required for backup. The e-copy (backup) operations are performed via fibre-channel interfaces directly to the backup devices. ECM operations are configured using the 9900V LUN Manager remote console software. To implement ECM operations, you need a backup application on the host server to issue the Extended Copy commands to the 9900V subsystem.

Note: For further information on Extended Copy Manager, please see the *Hitachi Lightning 9900™ V Series Extended Copy Manager User's Guide* (MK-92RD137), or contact your Hitachi Data Systems account team.

3.7 Data Management Functions

The 9900V subsystem provides features and functions that increase data availability and improve data management. Table 3.12 and Table 3.13 list the data management features that are currently available for the 9900V subsystem. Please refer to the appropriate user documentation for more details.

Table 3.12 Data Management Functions for Open-System Users (continues on the next page)

Feature Name	Controlled by:		Licensed Software?	User Document(s)
	Storage Navigator?	Host OS?		
Replication and migration:				
Hitachi TrueCopy (section 3.7.1)	Yes	Yes	Yes	MK-92RD108
Hitachi ShadowImage (section 3.7.3)	Yes	Yes	Yes	MK-92RD110
Command Control Interface (CCI) (section 3.7.5)	No	Yes	Yes	MK-90RD011
Extended Copy Manager (ECM) (section 3.7.8)	Yes	Yes	Yes	MK-92RD137
Hitachi Hi-Copy (section 3.7.9)	Yes	No	Yes	MK-93RD159
Data Migration (section 3.7.12)	Yes	No	No	Service Offering
Backup/restore and sharing:				
Hitachi RapidXchange (HRX) (section 3.7.13)	No	Yes	Yes	MK-91RD052
Hitachi Multiplatform Backup/Restore (HMBR) (section 3.7.14)	No	Yes	Yes	MK-92RD136
HARBOR® File-Level Backup and Restore (section 3.7.15)	No	No	No	Service Offering
HARBOR® File Transfer (section 3.7.16)	No	Yes	Yes	Service Offering
Resource management:				
HiCommand™ Device Manager (section 3.7.17)	No	No	Yes	System Config: MK-93HC031 Web Client: MK-91HC001 CLI: MK-91HC007 Agent: MK-92HC019
LUN Manager (section 3.7.18)	Yes	No	Yes	MK-92RD105
Hitachi SANtinel (LUN Security) (section 3.7.20)	Yes	No	Yes	MK-92RD105
LUN Expansion (LUSE) (section 3.7.23)	Yes	No	Yes	MK-92RD104
Virtual LUN (section 3.7.24)	Yes	No	Yes	MK-92RD104
FlashAccess (section 3.7.25)	Yes	No	Yes	MK-92RD102
Priority Access (section 3.7.27)	Yes	No	Yes	MK-92RD117
Hitachi Dynamic Link Manager™ (section 3.7.29)	No	Yes	Yes	For AIX®: MK-92DLM111 For HP-UX®: MK-92DLM112 For Solaris™: MK-92DLM114 For Windows®: MK-92DLM129 For Linux®: MK-92DLM113
DB Validator (section 3.7.6)	No	Yes	Yes	MK-92RD140
Open LDEV Guard (section 3.7.7)	Yes	Yes	Yes	MK-93RD158 (using Storage Navigator) MK-90RD011 (using CCI)

Table 3.12 Data Management Functions for Open-System Users (continued)

Feature Name	Controlled by:		Licensed Software?	User Document(s)
	Storage Navigator?	Host OS?		
Storage utilities:				
Hitachi Performance Monitor (section 3.7.30)	Yes	No	Yes	MK-92RD133
Hitachi CruiseControl (section 3.7.31)	Yes	No	Yes	MK-92RD106
Hitachi Graph-Track (section 3.7.32)	Yes	No	Yes	MK-90RD032
HiCommand™ Tuning Manager (section 3.7.18)	No	No	Yes	User Guide: MK-92HC013 Admin Guide: MK-92HC021 Ref Guide: MK-92HC022
Network solutions:				
Hitachi Freedom SAN™ (section 1.1.5)	N/A	N/A	N/A	N/A
Hitachi Freedom NAS™ (section 1.1.6)	N/A	N/A	N/A	Docs from Network Appliance

Table 3.13 Data Management Functions for Mainframe Users

Feature Name	Controlled by:		Licensed Software?	User Document(s)
	Storage Navigator?	Host OS?		
Replication and migration:				
Hitachi TrueCopy – S/390® (section 3.7.2)	Yes	Yes	Yes	MK-92RD107
Hitachi ShadowImage – S/390® (section 3.7.4)	Yes	Yes	Yes	MK-92RD109
Hitachi Extended Remote Copy (HXRC) (section 3.7.9)	No	Yes	No	Planning for IBM Remote Copy, SG24-2595; OS/390 Advanced Copy Services, SC35-0395; DFSMS MVS V1 Remote Copy Guide and Reference, SC35-0169
Hitachi Copycentral™ (section 3.7.11)	N/A	N/A	N/A	MK-93RD154, Service Offering
Data Migration (section 3.7.12)	Yes	No	No	Service Offering
Backup/restore and sharing:				
Hitachi RapidXchange (HRX) (section 3.7.13)	No	Yes	Yes	MK-90RD020
Resource management:				
Virtual LVI (section 3.7.24)	Yes	No	Yes	MK-92RD104
FlashAccess (section 3.7.25)	Yes	Yes – Cache Manager	Yes	MK-92RD102
Cache Manager (section 3.7.26)	Yes – FlashAccess	Yes	No	MK-92RD103
Hitachi Parallel Access Volume (HPAV) (section 3.7.28)	Yes	Yes	Yes	MK-92RD118
Hitachi SANTinel – S/390® (section 3.7.21)	Yes	No	Yes	MK-92RD115
LDEV Guard (section 3.7.22)	Yes	Yes	Yes	MK-92RD146
Storage utilities:				
Hitachi Performance Monitor (section 3.7.30)	Yes	No	Yes	MK-92RD133
Hitachi CruiseControl (section 3.7.31)	Yes	No	Yes	MK-92RD106
Hitachi Graph-Track™ (section 3.7.32)	Yes	No	Yes	MK-90RD032

3.7.1 Hitachi TrueCopy

Hitachi TrueCopy enables open-system users to perform synchronous and/or asynchronous remote copy operations between 9900V subsystems. The user can create, split, and resynchronize LU pairs. TrueCopy also supports a “takeover” command for remote host takeover (with the appropriate middleware support). Once established, TrueCopy operations continue unattended and provide continuous, real-time data backup. Remote copy operations are nondisruptive and allow the primary TrueCopy volumes to remain online to all hosts for both read and write I/O operations. TrueCopy operations can be performed between 9900V subsystems and between 9900V and 9900 subsystems.

Hitachi TrueCopy supports both fibre-channel and serial (ESCON®)* interface connections between the main and remote 9900V subsystems. For fibre-channel connection, TrueCopy operations can be performed across distances of up to 30 km (18.6 miles) using single-mode longwave optical fibre cables in a switch configuration. For serial interface connection, TrueCopy operations can be performed across distances of up to 43 km (26.7 miles) using standard ESCON® support. Long-distance solutions are provided, based on user requirements and workload characteristics, using approved channel extenders and communication lines.

Note: For further information on Hitachi TrueCopy, please see the *Hitachi Lightning 9900™ V Series Hitachi TrueCopy User and Reference Guide* (MK-92RD108), or contact your Hitachi Data Systems account team.

3.7.2 Hitachi TrueCopy – S/390®

Hitachi TrueCopy - S/390® enables mainframe (S/390®, z/OS®) users to perform synchronous and asynchronous remote copy operations between 9900V subsystems. Hitachi TrueCopy - S/390® can be used to maintain copies of data for backup or duplication purposes. Once established, TrueCopy - S/390® operations continue unattended and provide continuous, real-time data backup. Remote copy operations are nondisruptive and allow the primary TrueCopy volumes to remain online to all hosts for both read and write I/O operations.

Hitachi TrueCopy - S/390® also supports both serial (ESCON®) and fibre-channel interface connections between the main and remote 9900V subsystems. Remote copy operations can be performed between 9900V subsystems and between 9900V and 9900 subsystems.

Note: For further information on Hitachi TrueCopy - S/390®, please see the *Hitachi Lightning 9900™ V Series Hitachi TrueCopy - S/390® User and Reference Guide* (MK-92RD107), or contact your Hitachi Data Systems account team.

3.7.3 Hitachi ShadowImage

Hitachi ShadowImage enables open-system users to maintain subsystem-internal copies of LUs for purposes such as data backup or data duplication. The RAID-protected duplicate LUs (up to nine) are created within the same 9900V subsystem as the primary LU at hardware speeds. Once established, ShadowImage operations continue unattended to provide asynchronous internal data backup. ShadowImage operations are nondisruptive; the primary LU of each ShadowImage pair remains available to all hosts for both read and write operations during normal operations. Usability is further enhanced through a resynchronization capability that reduces data duplication requirements and backup time, thereby increasing user productivity. ShadowImage also supports reverse resynchronization for maximum flexibility.

ShadowImage operations can be performed in conjunction with Hitachi TrueCopy operations (see section 3.7.1) to provide multiple copies of critical data at both primary and remote sites. ShadowImage also supports the Virtual LVI/LUN and FlashAccess features of the 9900V subsystem, ensuring that all user data can be duplicated by ShadowImage operations.

Note: For further information on Hitachi ShadowImage, please see the *Hitachi Lightning 9900™ V Series ShadowImage User's Guide* (MK-92RD110), or contact your Hitachi Data Systems account team.

3.7.4 Hitachi ShadowImage – S/390®

Hitachi ShadowImage - S/390® enables mainframe (S/390®, z/OS®) users to create high-performance copies of source LVIs for testing or modification while benefiting from full RAID protection for the ShadowImage copies. The ShadowImage copies can be available to the same or different logical partitions (LPARs) as the original volumes for read and write I/Os. ShadowImage allows the user to create up to three copies of a single source LVI and perform updates in either direction, either from the source LVI to the ShadowImage copy or from the copy back to the source LVI. When used in conjunction with either TrueCopy - S/390® or HXRC, ShadowImage - S/390® enables users to maintain multiple copies of critical data at both primary and remote sites. ShadowImage also supports the Virtual LVI/LUN and FlashAccess features, ensuring that all user data can be duplicated by ShadowImage operations.

The **ShadowImage - FlashCopy®** option provides support for and compatibility with the IBM® FlashCopy® data replication feature. The ShadowImage - FlashCopy® option establishes pairs so that the copy of the S-VOL data can be virtually or physically created on the T-VOL. Once the pairs have been established, it is possible to specify Read/Write operation from the host to virtual data on the T-VOL or physical data on the S-VOL.

Note: For further information on Hitachi ShadowImage - S/390®, please see the *Hitachi Lightning 9900™ V Series ShadowImage - S/390® User's Guide* (MK-92RD109), or contact your Hitachi Data Systems account team.

3.7.5 Command Control Interface (CCI)

Hitachi Command Control Interface (CCI) enables users to perform Hitachi TrueCopy and Hitachi ShadowImage operations on the Lightning 9900™ V Series subsystem by issuing commands from the UNIX®/PC server host to the 9900V subsystem. The CCI software interfaces with the system software and high-availability (HA) software on the UNIX®/PC server host as well as the TrueCopy/ShadowImage software on the 9900V subsystem. The CCI software provides failover and other functions such as backup commands to allow mutual hot standby in cooperation with the failover product on the UNIX®/PC server (e.g., MC/ServiceGuard®, FirstWatch®, HACMP).

CCI also supports a scripting function that allows users to define multiple TrueCopy and/or ShadowImage operations in a script (text) file. Using CCI scripting, you can set up and execute a large number of TrueCopy and/or ShadowImage commands in a short period of time while integrating host-based high-availability control over remote copy operations.

DB Validator. CCI is used to configure Oracle® data validation checking (see section 3.7.6).
Open LDEV Guard. CCI can be used for Open LDEV Guard operations (see section 3.7.7).

Note: For further information on CCI, please see the *Hitachi Lightning 9900™ V Series Command Control Interface (CCI) User and Reference Guide* (MK-90RD011), or contact your Hitachi Data Systems account team.

3.7.6 DB Validator

The DB Validator feature is designed for the Oracle® database platform to prevent data corruption between the database and the storage subsystem. DB Validator prevents corrupted data blocks generated in the database-to-storage system infrastructure from being written onto the storage disk. The combination of networked storage and database management software has a risk of data corruption while writing data on the storage. This data corruption rarely occurs; however, once corrupted data is written into storage, it can be difficult and time-consuming to detect the underlying cause, restore the system, and recover the database. DB Validator helps prevent corrupted data environments and minimizes risk and potential costs in backup, restore, and recovery operations. DB Validator combined with the Oracle9i Database product provides a resilient system that can operate for 24 hours a day, 365 days a year to provide the uptime required by enterprises today.

The 9900V supports parameters for validation checking at the volume level, and these parameters are set through the 9900V command device using the Command Control Interface (CCI) software. CCI supports commands to set and verify these parameters for validation checking. Once validation checking is turned on, all write operations to the specified volume must have valid Oracle® checksums. CCI reports a validation check error to the syslog file each time an error is detected.

The DB Validator feature requires the 9900V fibre-channel adapter(s) (-8HSF, -16HSF, or -8HLF, see section 5.8), the CCI software product, and a separate license key.

Note: DB Validator is not controlled via the 9900V Storage Navigator remote console software. For further information on DB Validator, please see the *Hitachi Lightning 9900™ V Series Hitachi DB Validator Reference Guide* (MK-92RD140), or contact your Hitachi Data Systems account team.

3.7.7 Open LDEV Guard

The Open LDEV Guard feature enables you to prevent writing to specified volumes by the 9900V subsystem guarding the volumes. Open LDEV Guard is similar to the DB Validator feature, setting a guarding attribute to the specified LU.

The 9900V supports parameters for guarding at the volume level. You can set and verify these parameters for guarding of open volumes using either the 9900V Storage Navigator software or the Command Control Interface (CCI) software on the host. Once guarding is enabled, the 9900V conceals the target volumes from SCSI commands (e.g., SCSI Inquiry, SCSI Read Capacity), prevents reading and writing to the volume, and protects the volume from being used as a copy volume (i.e., TrueCopy and ShadowImage paircreate operation fails).

Note: For further information on Open LDEV Guard, please see the *Hitachi Lightning 9900™ V Series Open LDEV Guard User's Guide* (MK-93RD158), or contact your Hitachi Data Systems account team. For information on performing Open LDEV Guard operations using CCI, see the *Hitachi Lightning 9900™ V Series Command Control Interface (CCI) User and Reference Guide* (MK-90RD011).

3.7.8 Extended Copy Manager (ECM)

Extended Copy Manager (ECM), together with the backup application on the open-system host server, provides server-free backup solutions between the 9900V subsystem and backup devices such as tape devices. Extended Copy Manager enables non-disruptive backup directly from disk to tape in storage-area network (SAN) environments, eliminating server CPU and I/O overhead during movement of data and decreasing the time required for backup. Users can perform copy (backup) operations on the data (in units of block) stored on the multiplatform 9900 subsystem via fibre-channel interfaces directly to the backup devices.

Extended Copy Manager supports the SCSI Extended Copy command issued from the host server to the 9900V subsystem. The 9900V subsystem receives the Extended Copy commands issued by the server, and then copies the data directly to the specified backup device. ECM operations are configured using the 9900V LUN Manager remote console software. To implement ECM operations, you need a backup application on the host server to issue the Extended Copy commands to the 9900V subsystem.

Note: For further information on Extended Copy Manager, please see the *Hitachi Lightning 9900™ V Series Extended Copy Manager User's Guide* (MK-92RD137), or contact your Hitachi Data Systems account team.

3.7.9 Hitachi Hi-Copy

Hitachi Hi-Copy enables you to copy data stored on the Thunder 9500V subsystem to the Lightning 9900V subsystem, and to copy open-systems data on the 9900V to one or more 9500V subsystems. The 9900V subsystem can be connected to the 9500V subsystem(s) either directly or via a switch (or hub) using a fibre-channel interface.

Hitachi Hi-Copy enables you to:

- Consolidate data from multiple 9500V subsystems onto the Lightning 9900V
- Migrate data from the 9500V subsystem onto the Lightning 9900V
- Distribute data on the 9900V subsystem to one or more 9500V subsystems
- Back up the data on the 9900V to one or more 9500V subsystems
- Back up the data on the 9500V subsystem to the Lightning 9900V

Note: For further information on Hitachi Hi-Copy, please see the *Hitachi Lightning 9900™ V Series Hitachi Hi-Copy User's Guide* (MK-93RD159), or contact your Hitachi Data Systems account team.

3.7.10 Hitachi Extended Remote Copy (HXRC)

The HXRC asynchronous remote copy feature of the 9900V subsystem is functionally compatible with IBM® Extended Remote Copy (XRC, XRC3). HXRC provides asynchronous remote copy operations for maintaining duplicate copies of mainframe data for data backup purposes. Once established, HXRC operations continue unattended to provide continuous data backup. HXRC operations are nondisruptive and allow the primary HXRC volumes to remain online to the host(s) for both read and write I/O operations. For HXRC operations, there is no distance limit between the primary and remote disk subsystems. HXRC is also compatible with the DFSMS data mover that is common to the XRC environment.

HXRC operations are performed in the same manner as XRC operations. The user issues standard XRC TSO commands from the mainframe host system directly to the 9900V subsystem. The 9900V remote console software is not used to perform HXRC operations. HXRC can be used as an alternative to Hitachi TrueCopy - S/390® for mainframe data backup and disaster recovery planning. However, HXRC requires host processor resources that may be significant for volumes with high-write activity. The Data Mover utility may run in either the primary host or the optional remote host.

Note: For 9900V-specific information on HXRC (e.g. SVP modes), please see the *Hitachi Lightning 9900™ V Series Hitachi TrueCopy - S/390® User and Reference Guide* (MK-92RD107), or contact your Hitachi Data Systems account team.

Note: For further information on XRC, please refer to the following IBM® publications: *Planning for IBM Remote Copy* (SG24-2595), *OS/390 Advanced Copy Services* (SC35-0395), and *Remote Copy Administrator's Guide and Reference* (SC35-0169).

3.7.11 Hitachi Copycentral™

Hitachi Copycentral™ is the storage industry's first hardware-based solution which enables customers to make Point-in-Time (PiT) copies without quiescing the application or causing any disruption to end-user operations. Copycentral™ is based on Hitachi TrueCopy - S/390® Asynchronous, which is used to move large amounts of data over any distance with complete data integrity and minimal impact on performance. Hitachi TrueCopy - S/390® Asynchronous can be integrated with third-party channel extender products to address the “access anywhere” goal of data availability. Hitachi TrueCopy - S/390® Asynchronous enables production data to be duplicated via ESCON® or communication lines from a main (primary) site to a remote (secondary) site that can be thousands of miles away.

Copycentral™ copies data between any number of primary subsystems and any number of secondary subsystems, located any distance from the primary subsystem, without using valuable server processor cycles. The copies may be of any type or amount of data and may be recorded on subsystems anywhere in the world.

Copycentral™ enables customers to quickly generate copies of production data for such uses as application testing, business intelligence, and disaster recovery for business continuance. For disaster recovery operations, Copycentral™ will maintain a duplicate of critical data, allowing customers to initiate production at a backup location immediately following an outage. This is the first time an asynchronous hardware-based remote copy solution, with full data integrity, has been offered by any storage vendor.

Hitachi TrueCopy - S/390® Asynchronous with Hitachi Copycentral™ support is offered as an extension to Hitachi Data Systems' data movement options and software solutions for the Hitachi Lightning 9900™ V Series subsystem. Hitachi ShadowImage - S/390® can also operate in conjunction with Hitachi TrueCopy - S/390® Synchronous and Asynchronous to provide volume-level backup and additional image copies of data. This delivers an additional level of data integrity to assure consistency across sites and provides flexibility in maintaining volume copies at each site.

Note: For further information on Hitachi Copycentral™, please see the *Hitachi Lightning 9900™ V Series Hitachi Copycentral™ User's Guide* (MK-93RD154), or contact your Hitachi Data Systems account team.

3.7.12 Data Migration

The Lightning 9900™ V Series subsystem supports data migration operations from other disk array subsystems, including older Hitachi subsystems as well as other vendors' subsystems. Data can be moved to a new location either temporarily or as part of a data relocation process. During normal migration operations, the data being migrated can be online to the host(s) for both read and write I/O operations during data migration operations.

Note: Data migration is available as a Hitachi Data Systems service offering. For further information on data migration, please contact your Hitachi Data Systems account team.

3.7.13 Hitachi RapidXchange (HRX)

Hitachi RapidXchange (HRX) enables the user to transfer data between mainframe and open-system platforms using the ExSA™ channels. HRX enables high-speed data transfer without requiring network communication links or tape. Data transfer is performed via the HRX volumes, which are shared devices that appear to the mainframe host as 3390-3 LVIs and to the open-system host as OPEN-3 LUs. To provide the greatest platform flexibility for data transfer, the HRX volumes are accessed from the open-system host using SCSI raw device mode.

HRX allows the open-system host to read from and write to mainframe sequential datasets using the HRX volumes. The HRX volumes must be formatted as 3390-3A/B/C LVIs. The -A LVIs can be used for open-to-mainframe and/or mainframe-to-open HRX, the -B LVIs are used for mainframe-to-open HRX, and the -C LVIs are used for open-to-mainframe HRX. HRX also supports OPEN-x-HRX devices to provide open-to-open HRX operations for all-open 9900V subsystems.

The HRX software enables the open-system host to read from and write to individual mainframe datasets. The HRX software is installed on the open-system host and includes the File Conversion Utility (FCU) and the File Access Library (FAL). FCU allows the user to set up and perform file conversion operations between mainframe sequential datasets and open-system flat files. The FAL is a library of C-language functions that allows open-system programmers to read from and write to mainframe sequential datasets on the HRX volumes.

Note: For further information on HRX, please see the *Hitachi Lightning 9900™ RapidXchange (HRX) User's Guide* (MK-91RD052), or contact your Hitachi Data Systems account team.

3.7.14 Hitachi Multiplatform Backup/Restore (HMBR)

HMBR allows the user to implement mainframe-based backup procedures and standards for the open-system data stored on the multiplatform 9900V subsystem. HMBR enables standard mainframe backup/restore utilities such as DFDSS, Fast Dump/Restore (FDR), and VSE FASTWRITE to perform volume-level backup and restore operations on OPEN-3 and OPEN-9 LUs. Using these mainframe-based utilities as well as mainframe-based media and high-speed backup devices, the user can use the same procedures and achieve the same standards for both mainframe and open-system backup/restore operations. Before HMBR operations can begin, an offline utility such as ICKDSF must be used to create a volume table of contents (VTOC) to enable the mainframe host to use the OPEN-x LUs as mainframe volumes, which contain a single file. HMBR supports only full-volume backup/restore operations.

Note: For further information on HMBR, please see the *Hitachi Lightning 9900™ V Series Hitachi Multiplatform Backup/Restore User's Guide* (MK-92RD136), or contact your Hitachi Data Systems account team.

3.7.15 HARBOR® File-Level Backup/Restore

Tantia™ Technologies HARBOR® File-Level Backup/Restore features an integrated architecture and includes:

- A host component on MVS
- Integrated clients for desktops and servers
- LAN-based distributed storage servers
- High-speed HRX file-level backup of open-system data
- Transparent network support

Note: For further information on HARBOR® File-Level Backup/Restore, please contact your Hitachi Data Systems account team.

3.7.16 HARBOR® File Transfer

Tantia™ Technologies HARBOR® File Transfer adds automation to the process of transferring large data files at ultra-high channel speeds in either direction between open systems and mainframe servers. After automatically breaking large data files into more manageable pieces, HARBOR® File Transfer offers increased transfer speeds by directing data in multiple streams through the Lightning 9900™ V Series storage subsystem.

Note: For further information on HARBOR® File Transfer, please contact your Hitachi Data Systems account team.

3.7.17 HiCommand™ Device Manager

HiCommand™ Device Manager is ideal for organizations that need to implement unified management of multiple, heterogeneous storage systems. Device Manager enables administrators to manage storage quickly and easily by splitting storage resources logically while maintaining independent physical management capabilities. As a result, Device Manager offers a continuously available view of actual storage usage and configurations, delivering centralized management and control for more efficient storage utilization.

Device Manager provides a single platform for centrally managing Hitachi Lightning 9900™ V Series, Lightning 9900™, Thunder 9500™ V Series, Thunder 9200™, Sun™ StorEdge™ 9900 Series, and T3 systems. To optimize storage utilization, Hitachi Data Systems provides “link and launch” capabilities for access between the Sun StorEdge Resource Management Suite and additional HiCommand™ software modules (e.g., Tuning Manager).

HiCommand™ Device Manager provides a web interface for real-time interaction with the storage arrays being managed. An efficient command line interface (CLI) is also available. The HiCommand™ open storage management framework enables seamless integration with third-party products from companies such as VERITAS®, Sun™, BMC Software™, Tivoli® and Computer Associates®.

Note: For further information on HiCommand™ Device Manager, please refer to the HiCommand™ Device Manager user documentation (see Table 3.12), or contact your Hitachi Data Systems account team.

3.7.18 HiCommand™ Tuning Manager

For organizations that have a large storage infrastructure and need to implement consolidated management of their storage environment, HiCommand™ Tuning Manager is the HiCommand™ software component that provides intelligent and proactive performance and capacity monitoring. Tuning Manager also provides reporting and forecasting capabilities of storage resources, integrated with key business applications, such as Oracle®, so that organizations can optimize capacity and performance of their storage resources.

With HiCommand™ Tuning Manager, customers can:

- Establish proactive monitoring of overall storage resources capacity and performance, responding to capacity crises and predicting storage capacity
- Prepare/plan resources for new database instance or file system
- Set up periodic reporting for storage charge-back costing
- Identify the source of slow application performance
- Prepare storage resources for implementation of a new enterprise application or storage consolidation

Fully integrated with the HiCommand™ Management Framework and Device Manager and compliant with industry standards, the Tuning Manager module can be used with Hitachi Lightning 9900™ V Series, Lightning 9900™, Thunder 9500™ V Series, and Thunder 9200™ storage systems.

Note: For further information on HiCommand™ Tuning Manager, please refer to the HiCommand™ Tuning Manager user documentation (see Table 3.12), or contact your Hitachi Data Systems account team.

3.7.19 LUN Manager

LUN Manager enables users to set and define the port modes for fibre-channel ports and to set the fibre topology (e.g., FC-AL, fabric). Please connect your Hitachi Data Systems account team for further details on this feature.

Note: For further information on LUN Manager, please see the *Hitachi Lightning 9900™ V Series LUN Manager User's Guide* (MK-92RD105), or contact your Hitachi Data Systems account team.

3.7.20 Hitachi SANTinel (LUN Security)

Hitachi SANTinel allows users to restrict LU accessibility to an open-systems host using the host's World Wide Name (WWN). You can set an LU to communicate only with one or more specified WWNs, allowing you to limit access to that LU to specified open-system host(s). This feature prevents other open-systems hosts from either seeing the secured LU or accessing the data contained on it. The LUN Manager remote console software enables you to configure LUN security operations on the 9900V subsystem.

LUN security can be activated on any installed fibre-channel port, and can be turned on or off at the port level. If you enable LUN security on a particular port, that port will be restricted to a particular host or group of hosts. You can assign a WWN to as many ports as you want, and you can assign more than one WWN to each port. You can also change the WWN access for any port without disrupting the settings of that port.

Because up to 255 WWNs can access each port and the same WWNs may go to additional ports in the same subsystem, the LUN Manager software allows you to create host groups (host storage domains), so you can more easily manage your 9900V storage subsystem. You assign the hosts (WWNs) to host groups (host storage domains) and then associate the desired LUs with each host group. Each host in the host group has access to the LU(s) associated with that group.

Note: For further information on LUN security and the LUN Manager software, please see the *Hitachi Lightning 9900™ V Series LUN Manager User's Guide* (MK-92RD105), or contact your Hitachi Data Systems account team.

3.7.21 Hitachi SANTinel – S/390®

Hitachi SANTinel - S/390® allows users to restrict mainframe (S/390®, z/OS®) host access to the logical devices (LDEVs) on the 9900V subsystem. Each LDEV can be set to communicate only with user-selected host(s). Hitachi SANTinel - S/390® prevents other hosts from seeing the secured LDEV and from accessing the data contained on the secured LDEV. The licensed Hitachi SANTinel - S/390® software on the 9900V Storage Navigator displays the Hitachi SANTinel - S/390® information and allows you to perform Hitachi SANTinel - S/390® operations.

Note: For further information on Hitachi SANTinel - S/390®, please see the *Hitachi Lightning 9900™ V Series Hitachi SANTinel - S/390® User's Guide* (MK-92RD115), or contact your Hitachi Data Systems account team.

3.7.22 LDEV Guard

The LDEV Guard feature allows you to protect your data from I/O operations performed by mainframe hosts. LDEV Guard enables you to assign an access attribute to each logical volume to restrict read and/or write operations. Using LDEV Guard, you can prevent unauthorized access to your sensitive data.

Note: For further information on LDEV Guard, please see the *Hitachi Lightning 9900™ V Series LDEV Guard User's Guide* (MK-92RD146), or contact your Hitachi Data Systems account team.

3.7.23 LUN Expansion (LUSE)

LUN Expansion allows users to create virtual LUs that are larger than standard OPEN LUs, by expanding the size of a selected LU up to 36 times its normal size. The maximum size depends on the type of configuration. For example, you can expand an OPEN-9 LU to a maximum size of 265 GB (7.3 GB × 36). This capability enables open-system hosts to access the data on the entire 9900V subsystem using fewer logical units. LUSE allows host operating systems that have restrictions on the number of LUs per interface to access larger amounts of data.

Note: For further information on LUSE, please see the *Hitachi Lightning 9900™ V Series LUN Expansion and Virtual LVI/LUN User's Guide* (MK-92RD104), or contact your Hitachi Data Systems account team.

3.7.24 Virtual LVI/LUN

Virtual LVI/LUN allows users to convert fixed-size volumes into several smaller variable custom-sized volumes. Using the Virtual LVI/LUN remote console software, users can configure custom-size volumes by assigning a logical address and a specific number of cylinders/tracks (for mainframe data) or MB (for open-systems data) to each custom LVI/LU.

Virtual LVI/LUN improves data access performance by reducing logical device contention as well as host I/O queue times, which can occur when several frequently accessed files are located on a single volume. Multiple LVI/LU types can be configured within each array group. Virtual LVI/LUN enables the user to more fully utilize the physical storage capacity of the 9900V, while reducing the amount of administrative effort required to balance I/O workloads. When Virtual LVI/LUN is used in conjunction with FlashAccess, the user can achieve even better data access performance than when either Virtual LVI/LUN or FlashAccess is used alone.

Note: For further information on Virtual LVI/LUN, please see the *Hitachi Lightning 9900™ V Series LUN Expansion and Virtual LVI/LUN User's Guide* (MK-92RD104), or contact your Hitachi Data Systems account team.

3.7.25 FlashAccess

FlashAccess allows users to store specific data in cache memory. FlashAccess increases the data access speed for the cache-resident data by enabling read and write I/Os to be performed at front-end host data transfer speeds. The FlashAccess cache areas (called cache extents) are dynamic and can be added and deleted at any time. The 9900V subsystem supports up to 1024 addressable cache extents.

FlashAccess operations can be performed for open-system LUs (e.g., OPEN-3, OPEN-9) as well as mainframe LVIs (e.g., 3390-3, 3390-9), including custom-size volumes. Use of FlashAccess in conjunction with the Virtual LVI/LUN feature will achieve better performance improvements than when either of these options is used individually.

Note: For further information on FlashAccess, please see the *Hitachi Lightning 9900™ V Series FlashAccess User's Guide* (MK-92RD102), or contact your Hitachi Data Systems account team.

3.7.26 Cache Manager

Cache Manager enables users to perform FlashAccess operations on mainframe LVIs by issuing commands from the mainframe host system to the 9900V subsystem. For further information on Cache Manager, please see the *Hitachi Freedom Storage™ Cache Manager User's Guide* (MK-92RD103), or contact your Hitachi Data Systems account team.

3.7.27 Priority Access

Priority Access allows open-system users to designate prioritized ports (e.g., for production servers) and non-prioritized ports (e.g., for development servers) and set thresholds and upper limits for the I/O activity of these ports. Priority Access enables users to tune the performance of the development server without affecting production server performance.

Note: For further information on Priority Access, please see the *Hitachi Lightning 9900™ V Series Priority Access User's Guide* (MK-92RD117), or contact your Hitachi Data Systems account team.

3.7.28 Hitachi Parallel Access Volume (HPAV)

Hitachi Parallel Access Volume (HPAV) enables the mainframe host system to issue multiple I/O requests in parallel to single logical devices (LDEVs) in the Lightning 9900™ V Series subsystem. HPAV can provide substantially faster host access to the mainframe data stored in the 9900V subsystem. The Workload Manager (WLM) host software function enables the mainframe host to utilize the HPAV functionality of the Lightning 9900™ V Series subsystem. The 9900V supports both static and dynamic HPAV functionality.

Note: For further information on HPAV, please see the *Hitachi Lightning 9900™ V Series Hitachi Parallel Access Volume (HPAV) User and Reference Guide* (MK-92RD118), or contact your Hitachi Data Systems account team.

3.7.29 Hitachi Dynamic Link Manager™ (HDLM)

Hitachi Dynamic Link Manager™ (HDLM) provides automatic load balancing, path failover, and recovery capabilities in the event of a path failure. HDLM helps guarantee that no single path becomes overloaded while others are underutilized.

Note: For further information on HDLM, please see the *Hitachi Lightning 9900™ V Series Hitachi Dynamic Link Manager™ User's Guide* for your host platform (see Table 3.12), or contact your Hitachi Data Systems account team.

3.7.30 Hitachi Performance Monitor

Hitachi Performance Monitor provides detailed monitoring and collection of 9900V subsystem usage and performance statistics. Hitachi CruiseControl and Priority Access use the data collected by Performance Monitor to identify and resolve bottlenecks of activity.

Note: For further information on Hitachi Performance Monitor, please see the *Hitachi Lightning 9900™ V Series Hitachi Performance Monitor User's Guide* (MK-92RD133), or contact your Hitachi Data Systems account team.

3.7.31 Hitachi CruiseControl

Hitachi CruiseControl enables users to optimize their data storage and retrieval on the 9900V subsystem. Hitachi CruiseControl analyzes detailed information on the usage of 9900V subsystem resources and tunes the 9900V automatically by migrating logical volumes within the subsystem according to detailed user-specified parameters. CruiseControl tuning operations can be used to resolve bottlenecks of activity and optimize volume allocation. CruiseControl operations are completely nondisruptive - the data being migrated can remain online to all hosts for read and write I/O operations throughout the entire volume migration process. CruiseControl also supports manual volume migration operations and estimates performance improvements prior to migration to assist you in tuning the 9900V subsystem for your operational environment.

Hitachi CruiseControl provides the following major benefits for the user:

- Load balancing of subsystem resources
- Optimizing disk drive access patterns
- Analysis of subsystem usage using GraphTool (provided with CruiseControl)

Note: For further information on Hitachi CruiseControl, please see the *Hitachi Lightning 9900™ V Series Hitachi CruiseControl User's Guide* (MK-92RD106), or contact your Hitachi Data Systems account team.

3.7.32 Hitachi Graph-Track™

Hitachi Graph-Track™ (GT) allows users to monitor and collect detailed subsystem performance and usage statistics for the 9900V subsystem. GT monitors the hardware performance, cache usage, and I/O statistics of the attached subsystems and displays real-time and historical data as graphs that highlight key information such as peaks and trends. GT displays the following data for each attached subsystem:

- Subsystem configuration, including controller name, serial number, controller emulation, channel address(s), SSIDs, and cache size
- LDEV configuration, including total storage capacity and RAID implementation for each array domain; hard disk drive capacity, LDEV type (e.g., 3390-3R, OPEN-3), and LDEV IDs for each array group
- Subsystem usage, including percent busy versus time for the front-end microprocessors (CHIPs) and back-end microprocessors (ACPs)
- Cache statistics, including percent cache in use and percent write-pending data in cache
- I/O statistics at the subsystem, array group, and LDEV levels: I/O rates, read/write ratio, read and write hits, backend transfer rates (drive-to-cache and cache-to-drive I/O rates)

In addition to displaying performance and usage data, Hitachi Graph-Track™ manages the collection and storage of the GT data automatically according to user-specified preferences. GT also allows the user to export GT data for use in reports or in other data analysis programs.

Note: For further information on Hitachi Graph-Track™, please see the *Hitachi Freedom Storage™ Hitachi Graph-Track™ User's Guide* (MK-90RD032), or contact your Hitachi Data Systems account team.

Chapter 4 Configuring and Using the 9900V Subsystem

4.1 Mainframe Configuration

The first step in configuring the Lightning 9900™ V Series subsystem is to define the subsystem to the mainframe (S/390®, z/OS®) host(s). The three basic areas requiring definition are:

- Subsystem ID (SSIDs) (section 4.1.1)
- Hardware definitions, including I/O Configuration Program (IOCP) or Hardware Configuration Definition (HCD) (section 4.2)
- Operating system definitions (HCD or OS commands) (section 4.3)

Note: The missing interrupt handler (MIH) value for the 9900V subsystem is 45 seconds without TrueCopy, and 60 seconds when TrueCopy operations are in progress. (The MIH value for data migration operations is 120 seconds.)

Note: For details on FICON™ connectivity, FICON™/Open intermix configurations, and supported HBAs, switches, and directors (e.g., McDATA, CNT) for the 9900V subsystem, please contact your Hitachi Data Systems account team.

4.1.1 Subsystem IDs (SSIDs)

Subsystem IDs (SSIDs) are used for reporting information from the CU (or controller) to the operating system. The SSIDs are assigned by the user and must be unique to all connected host operating environments. Each group of 64 or 256 volumes requires one SSID, so there are one or four SSIDs per CU image. The user-specified SSIDs are assigned during subsystem installation. Table 4.1 lists the SSID requirements.

Table 4.1 SSID Requirements

Controller Emulation	SSID Requirements	LVI Support
3990-6, 3990-6E	0004 - FFFD	3390-x, OPEN-3, -9, -E, -L
2105*	0004 - FFFD	3390-x, OPEN-3, -9, -E, -L

***Note:** HPAV operations require that one SSID be set for each set of 256 LDEVs.

4.2 Mainframe Hardware Definition

This section covers the following topics:

- Hardware Definition Using IOCP (MVS, VM, or VSE) (section 4.2.1)
- Hardware Definition Using HCD (MVS/ESA) (section 4.2.2)
- Defining the 9900V to VM/ESA[®] Systems (section 4.2.3)
- Defining the 9900V to TPF (section 4.2.4)
- Defining the 9900V to Linux[®] for mainframe (section 4.2.5)

4.2.1 Hardware Definition Using IOCP (MVS, VM, or VSE)

The I/O Configuration Program (IOCP) can be used to define the 9900V subsystem in MVS, VM, and VSE environments (wherever HCD cannot be used). The 9900V subsystem supports up to thirty-two logical CU (LCU) images and 8192 LDEVs. Each LCU can hold up to 256 LDEV addresses. An LCU is the same as an IBM[®] logical sub-system (LSS). The CUADD parameter defines the CU images by number (0-F for ESCON[®], 00-1F for FICON[™]). The unit type can be 3990 or 2105.

Note: FICON[™] channel interface requires 2105-F20 emulation.

The following are cautions when using IOCP or HCD:

- Use FEATURE=SHARE for the devices if multiple LPARs/mainframes can access the volumes.
- 16,384 addresses per physical interface are allowed by MVS with FICON[™] channels.
- Only 1024 addresses per physical interface are allowed by MVS with ExSA[™] (ESCON[®]) channels. (This includes PAV base and alias addresses.)

Note: FICON[™] interface supports 8192 device addressing and 32 CU images using CUADD=00 through CUADD=1F in the CNTLUNIT statement.

Note: ESCON[®] interface supports 4096 device addressing and 16 CU images using CUADD=0 through CUADD=F in the CNTLUNIT statement.

Figure 4.1 shows a sample IOCP definition for a 9900V configured with:

- 2105 ID
- Four FICON[™] channel paths. Two channels paths are connected to a FICON[™] switch. Two channel paths are directly connected to the 9900V subsystem.
- Six LCUs (00, 01, 02, 03, 04, 05) with 256 LVIs per control unit
- 64 base addresses and 128 alias addresses per CU 00, 01, 02, and 03
- 128 base addresses and 128 alias addresses per CU 04 and 05

```

*****
**** Sample FICON CHPID / CNTLUNIT and IODEVICE ****
*****

CHPID PATH=(F9),TYPE=FC,SWITCH=07
CHPID PATH=(FB),TYPE=FC
CHPID PATH=(FD),TYPE=FC
CHPID PATH=(FF),TYPE=FC,SWITCH=07          *

CNTLUNIT CUNUMBR=8100,PATH=(F9,FB,FD,FF),
LINK=(04,**,**,05),                        *
UNIT=2105,CUADD=00,UNITADD=((00,256))      *
CNTLUNIT CUNUMBR=8200,PATH=(F9,FB,FD,FF),
LINK=(04,**,**,05),                        *
UNIT=2105,CUADD=01,UNITADD=((00,256))      *
CNTLUNIT CUNUMBR=8300,PATH=(F9,FB,FD,FF),
LINK=(04,**,**,05),                        *
UNIT=2105,CUADD=02,UNITADD=((00,256))      *
CNTLUNIT CUNUMBR=8400,PATH=(F9,FB,FD,FF),
LINK=(04,**,**,05),                        *
UNIT=2105,CUADD=03,UNITADD=((00,256))      *
CNTLUNIT CUNUMBR=8500,PATH=(F9,FB,FD,FF),
LINK=(04,**,**,05),                        *
UNIT=2105,CUADD=04,UNITADD=((00,256))      *
CNTLUNIT CUNUMBR=8600,PATH=(F9,FB,FD,FF),
LINK=(04,**,**,05),                        *
UNIT=2105,CUADD=05,UNITADD=((00,256))

IODEVICE ADDRESS=(8100,064),CUNUMBR=(8100),STADET=Y,UNIT=3390B
IODEVICE ADDRESS=(8180,128),CUNUMBR=(8100),STADET=Y,UNIT=3390A*
,UNITADD=80
IODEVICE ADDRESS=(8200,064),CUNUMBR=(8200),STADET=Y,UNIT=3390B
IODEVICE ADDRESS=(8280,128),CUNUMBR=(8200),STADET=Y,UNIT=3390A*
,UNITADD=80
IODEVICE ADDRESS=(8300,064),CUNUMBR=(8300),STADET=Y,UNIT=3390B
IODEVICE ADDRESS=(8380,128),CUNUMBR=(8300),STADET=Y,UNIT=3390A*
,UNITADD=80
IODEVICE ADDRESS=(8400,064),CUNUMBR=(8400),STADET=Y,UNIT=3390B
IODEVICE ADDRESS=(8480,128),CUNUMBR=(8400),STADET=Y,UNIT=3390A*
,UNITADD=80
IODEVICE ADDRESS=(8500,128),CUNUMBR=(8500),STADET=Y,UNIT=3390B
IODEVICE ADDRESS=(8580,128),CUNUMBR=(8500),STADET=Y,UNIT=3390A
IODEVICE ADDRESS=(8600,128),CUNUMBR=(8600),STADET=Y,UNIT=3390B
IODEVICE ADDRESS=(8680,128),CUNUMBR=(8600),STADET=Y,UNIT=3390A

```

Figure 4.1 IOCP Definition for FICON™ Channels (direct connect and via FICON™ switch)

Note: FICON™ interface supports 8192 device addressing and 32 CU images using CUADD=00 through 1F.

Figure 4.2 shows a sample IOCP hardware definition for a 9900V configured with:

- 3990 ID
- Two (2) LPARs called PROD and TEST sharing 4 ExSA™ (ESCON®) channels connected via 2 ESCDs to the 9980V
- Each switch has ports C0 and C1 attached to the 9980V.
- Four (4) logical control units (0, 1, 2, 3) with 256 LVIs per control unit
- Two (2) cu statements per logical control unit
- To protect data integrity due to multiple operating systems sharing these volumes, these devices require FEATURE=SHARED.

CHPID	PATH=(B0,B1),TYPE=CNC,PARTITION=(PROD,TEST,SHR),SWITCH=01
CHPID	PATH=(B2,B3),TYPE=CNC,PARTITION=(PROD,TEST,SHR),SWITCH=02
CNTLUNIT	CUNUMBR=A000,PATH=(B0,B1),UNITADD=((00,256)),LINK=(C0,C1),CUADD=0,UNIT=3990
CNTLUNIT	CUNUMBR=A001,PATH=(B2,B3),UNITADD=((00,256)),LINK=(C0,C1),CUADD=0,UNIT=3990
CNTLUNIT	CUNUMBR=A100,PATH=(B0,B1),UNITADD=((00,256)),LINK=(C0,C1),CUADD=1,UNIT=3990
CNTLUNIT	CUNUMBR=A101,PATH=(B2,B3),UNITADD=((00,256)),LINK=(C0,C1),CUADD=1,UNIT=3990
CNTLUNIT	CUNUMBR=A200,PATH=(B0,B1),UNITADD=((00,256)),LINK=(C0,C1),CUADD=2,UNIT=3990
CNTLUNIT	CUNUMBR=A201,PATH=(B2,B3),UNITADD=((00,256)),LINK=(C0,C1),CUADD=2,UNIT=3990
CNTLUNIT	CUNUMBR=A300,PATH=(B0,B1),UNITADD=((00,256)),LINK=(C0,C1),CUADD=3,UNIT=3990
CNTLUNIT	CUNUMBR=A301,PATH=(B2,B3),UNITADD=((00,256)),LINK=(C0,C1),CUADD=3,UNIT=3990
IODEVICE	ADDRESS=(A000,256),CUNUMBR=(A000,A001),UNIT=3390,FEATURE=SHARED
IODEVICE	ADDRESS=(A100,256),CUNUMBR=(A100,A101),UNIT=3390,FEATURE=SHARED
IODEVICE	ADDRESS=(A200,256),CUNUMBR=(A200,A201),UNIT=3390,FEATURE=SHARED
IODEVICE	ADDRESS=(A300,256),CUNUMBR=(A300,A301),UNIT=3390,FEATURE=SHARED

Figure 4.2 IOCP Definition for 1024 LVIs (9900V connected to host CPU(s) via ESCD)

Note: ESCON® interface supports 4096 device addressing and 16 CU images using CUADD=0 through CUADD=F.

Figure 4.3 shows a sample IOCP hardware definition for a 9980V with:

- 2105 ID
- Eight (8) ExSA™ (ESCON®) channels directly connected to the 9980V
- Four (4) logical control units with 256 LVIs per control unit
- One (1) cu statement per logical control unit
- One hundred twenty-eight (128) 3390 base addresses per CU 0 and 1
- One hundred twenty-eight (128) 3390 alias addresses per CU 0 and 1
- Sixty-four (64) 3390 base addresses in CU 2
- One hundred ninety-two (192) 3390 alias addresses in CU 2
- One hundred twenty-eight (128) 3390 addresses in CU 3
- Sixty-four (64) 3390 base addresses per CU 3
- Sixty-four (64) 3390 alias addresses per CU 3
- To protect data integrity due to multiple operating systems sharing these volumes, these devices require FEATURE=SHARED.

Note: If you maintain separate IOCP definitions files and create your SCDS or IOCDS manually by running the IZP IOCP program, you must define each LCU on a 9900V subsystem using one CNTLUNIT statement in IOCP. While it is possible to define an LCU on a 9900V subsystem using multiple CNTLUNIT statements in IOCP, the resulting input deck cannot be migrated to HCD due to an IBM® restriction allowing only one CNTLUNIT definition.

```
CHPID PATH=(60,61,62,63,64,65,66,67),TYPE=CNC
CNTLUNIT CUNUMBR=8000,PATH=(60,61,62,63,64,65,66,67),          *
        UNITADD=((00,256)),CUADD=0,UNIT=2105
CNTLUNIT CUNUMBR=8100,PATH=(60,61,62,63,64,65,66,67),          *
        UNITADD=((00,256)),CUADD=1,UNIT=2105
CNTLUNIT CUNUMBR=8200,PATH=(60,61,62,63,64,65,66,67),          *
        UNITADD=((00,256)),CUADD=2,UNIT=2105
CNTLUNIT CUNUMBR=8300,PATH=(60,61,62,63,64,65,66,67),          *
        UNITADD=((00,256)),CUADD=3,UNIT=2105
IODEVICE ADDRESS=(8000,128),CUNUMBR=(8000),STADET=Y,UNIT=3390B,FEATURE=SHARED
IODEVICE ADDRESS=(8080,128),CUNUMBR=(8000),STADET=Y,UNIT=3390A,FEATURE=SHARED
IODEVICE ADDRESS=(8100,128),CUNUMBR=(8100),STADET=Y,UNIT=3390B,FEATURE=SHARED
IODEVICE ADDRESS=(8180,128),CUNUMBR=(8100),STADET=Y,UNIT=3390A,FEATURE=SHARED
IODEVICE ADDRESS=(8200,064),CUNUMBR=(8200),STADET=Y,UNIT=3390B,FEATURE=SHARED
IODEVICE ADDRESS=(8240,192),CUNUMBR=(8200),STADET=Y,UNIT=3390A,FEATURE=SHARED
IODEVICE ADDRESS=(8300,128),CUNUMBR=(8300),STADET=Y,UNIT=3390,FEATURE=SHARED
IODEVICE ADDRESS=(8380,064),CUNUMBR=(8300),STADET=Y,UNIT=3390B,FEATURE=SHARED
IODEVICE ADDRESS=(83C0,064),CUNUMBR=(8300),STADET=Y,UNIT=3390A,FEATURE=SHARED
```

Figure 4.3 IOCP Definition for 1024 LVIs (9900V directly connected to CPU)

The 9980V subsystem can be configured with up to 32 connectable physical paths to provide up to 32 concurrent host data transfers. The 9970V subsystem can be configured with up to 24 connectable physical paths to provide up to 24 concurrent host data transfers.

Since only 16 channel interface IDs are available (due to 16 physical channel interfaces for IBM® systems), the 9900V uses one channel interface ID for each pair of physical paths. For example, link control processors (LCPs) 1A and 1B correspond to channel interface ID 08 (00), and LCPs 1C and 1D correspond to channel interface ID 09 (01). Table 4.2 illustrates the correspondence between physical paths and channel interface IDs on Cluster 1 (upper). Table 4.3 illustrates the same for Cluster 2 (upper).

Note: Please contact the Hitachi Data Systems Support Center for assistance with mainframe definition of 9900V serial channel interfaces.

Table 4.2 Correspondence between Physical Paths & Channel Interface IDs (C11-Upper)

Channel Interface ID (used in commands)	08 (00)	09 (01)	0A (02)	0B (03)	0C (04)	0D (05)	0E (06)	0F (07)
LCP ID	1A & 1B	1C & 1D	1E & 1F	1G & 1H	1J & 1K	1L & 1M	1N & 1P	1Q & 1R

Table 4.3 Correspondence between Physical Paths & Channel Interface IDs (C12-Upper)

Channel Interface ID (used in commands)	18 (10)	19 (11)	1A (12)	1B (13)	1C (14)	1D (15)	1E (16)	1F (17)
LCP ID	2A & 2B	2C & 2D	2E & 2F	2G & 2H	2J & 2K	2L & 2M	2N & 2P	2Q & 2R

4.2.2 Hardware Definition Using HCD (MVS/ESA)

The Hardware Configuration Definition (HCD) utility can be used to define the 9900V subsystem in an MVS/ESA environment. The HCD procedures for 3990 and 2105 controller emulation types are described below. FICON™ interface requires 2105-F20 emulation.

3990 Controller Emulation. To define a 9900V subsystem with 64 or fewer LVIs, use the same procedure as for an IBM® 3990-6/6E subsystem (see Table 4.4). The hardware definition for a 9900V subsystem with more than 64 LVIs (see Table 4.5) is different than that for an IBM® 3990 subsystem.

Table 4.4 HCD Definition for 64 LVIs

Parameter	Value
Control Frame:	
Control unit number	Specify the control unit number.
Control unit type	3990-6 or 3990-6E (using 3990-6 emulation)
Channel path IDs	Specify ExSA™ or FICON™
Unit address	00 (ExSA™ or FICON™)
Number of units	64
Array Frame:	
Device number	Specify the first device number.
Number of devices	64
Device type	3390
Connected to CUs	Specify the control unit number(s).

Table 4.5 HCD Definition for 256 LVIs

Parameter	Value
Control Frame:	
Control unit number	Specify the control unit number.
Control unit type	NOCHECK* Use UIM 3990 for more than 128 logical paths Use UIM 3990-6 for 128 or fewer logical paths
Channel path IDs	Specify ExSA™ or FICON™
Unit address	00 (ExSA™ or FICON™)
Number of units	256
Array Frame:	
Device number	Specify the first device number.
Number of devices	256
Device type	3390
Connected to CUs	Specify the control unit number(s).

* The NOCHECK function was introduced by APAR OY62560. Defining the 9900V as a single control unit allows all channel paths to access all DASD devices.

2105 Controller Emulation. To define a 9980V logical control unit (LCU) and the base and alias address range that it will support, please use the following example for HCD.

Note: The following HCD steps correspond to the 2105 IOCP definition shown in Figure 4.3.

Note: The HCD PAV definitions must match the configurations in the 9900V subsystem. If not, error messages will occur when the HOSTs are IPL'd or the devices are varied online.

1. From an ISPF/PDF primary options menu, select the HCD option to display the basic HCD panel (see Figure 4.4). On this panel you must verify the name of the IODF or IODF.WORK I/O definition file to be used.
2. On the basic HCD panel (see Figure 4.5), select the proper I/O definition file, and then select option 1 to display the Define, Modify, or View Configuration Data panel.
3. On the Define, Modify, or View Configuration Data panel (see Figure 4.6), select option 4 to display the Control Unit List panel.
4. On the Control Unit List panel (see Figure 4.7), if a 2105 type of control unit already exists, then an 'Add like' operation can be used by inputting an 'A' next to the 2105 type control unit and pressing the return key. Otherwise press F11 to add a new control unit.
5. On the Add Control Unit panel (see Figure 4.8), input the following new information, or edit the information if preloaded from an 'Add like' operation, and then press enter key:
Control unit number
Control unit type - 2105
Switch information only if a switch exists. Otherwise leave switch and ports blank.
6. On the Select Processor / Control Unit panel (see Figure 4.9), input an S next to the PROC. ID, and then press return key.
7. On the Add Control Unit panel (see Figure 4.10), enter chpids that attach to the control unit, the logical control unit address, the device starting address, and the number of devices supported, and then press return key.
8. Verify that the data is correct on the Select Processor / Control Unit panel (see Figure 4.11), and then press F3.
9. On the Control Unit List panel (see Figure 4.12), add devices to the new Control Unit, input an S next to CU 8000, and then press enter.
10. On the I/O Device List panel (see Figure 4.13), press F11 to add new devices.
11. On the Add Device panel (see Figure 4.14), enter the following, and then press return:
Device number
Number of devices
Device type: 3390, 3390B for HPAV base device, or 3390A for HPAV alias device.
12. On the Device / Processor Definition panel (see Figure 4.15), add this device to a specific Processor/System-ID combination by inputting an S next to the Processor and then pressing the return key.
13. On the Define Device / Processor panel, enter the values shown in Figure 4.16, and press the return key.

14. On the Define Processor / Definition panel (see Figure 4.17), verify that the proper values are displayed, and press the return key.
15. On the Define Device to Operating System Configuration panel, input an S next to the Config ID (see Figure 4.18), and then press the return key.
16. The Define Device Parameters / Features panel displays the default device parameters (see Figure 4.19). **Note:** The WLMPIV parameter defaults to “YES”. Set the desired parameters, and then press return key.
17. This returns to the Define Device to Operating System Configuration Panel. Press F3.
18. The Update Serial Number, Description and VOLSER panel now displays the desired device addresses (see Figure 4.20). To add more control units or device addresses, repeat the previous steps.

```

San Diego OS/390 R2.8 Master MENU
OPTION ==> HC                                SCROLL ==> PAGE

                                USERID - HDS
                                TIME   - 20:23

IS  ISMF      - Interactive Storage Management Facility
P   PDF       - ISPF/Program Development Facility
IP  IPCS      - Interactive Problem Control Facility
R   RACF      - Resource Access Control Facility
SD  SDSF      - System Display and Search Facility
HC  HCD       - Hardware Configuration Definition
BMB BMR BLD   - BookManager Build (Create Online Documentation)
BMR BMR READ  - BookManager Read (Read Online Documentation)
BMI BMR INDX  - BookManager Read (Create Bookshelf Index)
SM  SMP/E     - SMP/E Dialogs
IC  ICSF      - Integrated Cryptographic Service Facility
OS  SUPPORT   - OS/390 ISPF System Support Options
OU  USER     - OS/390 ISPF User Options
S   SORT     - DF/SORT Dialogs
X   EXIT      - Terminate ISPF using list/log defaults

F1=HELP      F2=SPLIT    F3=END      F4=RETURN   F5=RFIND    F6=RCHANGE
F7=UP        F8=DOWN     F9=SWAP    F10=LEFT    F11=RIGHT   F12=RETRIEVE

```

Figure 4.4 Master MENU (Step 1)

```

OS/390 Release 5 HCD
Command ==> _____

Hardware Configuration

Select one of the following.

1_ 1. Define, modify, or view configuration data
   2. Activate or process configuration data
   3. Print or compare configuration data
   4. Create or view graphical configuration report
   5. Migrate configuration data
   6. Maintain I/O definition files
   7. Query supported hardware and installed UIMs
   8. Getting started with this dialog
   9. What's new in this release

For options 1 to 5, specify the name of the IODF to be used.

I/O definition file . . . 'HDS.IODF06.WORK' +
-----
| (C) Copyright IBM Corp. 1990, 1998. All rights reserved. |
-----
F1=Help   F2=Split   F3=Exit   F4=Prompt   F9=Swap   F12=Cancel

```

Figure 4.5 Basic HCD Panel (Step 2)

```

OS/390 Release 5 HCD
----- Define, Modify, or View Configuration Data -----
|
| Select type of objects to define, modify, or view data.
|
| 4_ 1. Operating system configurations
|     consoles
|     system-defined generics
|     EDTs
|     esoterics
|     user-modified generics
| 2. Switches
|     ports
|     switch configurations
|     port matrix
| 3. Processors
|     partitions
|     channel paths
| 4. Control units
| 5. I/O devices
|
| F1=Help   F2=Split   F3=Exit   F9=Swap   F12=Cancel
|-----

```

Figure 4.6 Define, Modify, or View Configuration Data (Step 3)


```

Goto Filter Backup Query Help
----- Select Processor / Control Unit -----
|                                     Row 1 of 1 More:  > |
| Command ==> _____ Scroll ==> PAGE |
|
| Select processors to change CU/processor parameters, then press Enter.
|
| Control unit number . . : 8000      Control unit type . . . : 2105
|
|                                     Log. Addr. -----Channel Path ID . Link Address + -----
| / Proc. ID Att. (CUADD) + 1---- 2---- 3---- 4---- 5---- 6---- 7---- 8----
| _ PROD      Yes 0          60    61    62    63    64    65    66    67
| ***** Bottom of data *****
|
|
|
|
| F1=Help      F2=Split      F3=Exit      F4=Prompt      F5=Reset
| F6=Previous  F7=Backward   F8=Forward  F9=Swap        F12=Cancel
|-----

```

Figure 4.11 Select Processor / Control Unit Panel (Step 8)

```

Goto Filter Backup Query Help
-----
|                                     Control Unit List                                     Row 40 of 41
| Command ==> _____ Scroll ==> PAGE |
|
| Select one or more control units, then press Enter.  To add, use F11.
|
| / CU   Type +      Serial-# + Description
| _ 7001 3990
| S 8000 2105      _____ add 2105 type for 80xx devices
| ***** Bottom of data *****
|
|
|
|
| F1=Help      F2=Split      F3=Exit      F4=Prompt      F5=Reset      F7=Backward
| F8=Forward   F9=Swap      F10=Actions F11=Add        F12=Cancel
|-----

```

Figure 4.12 Control Unit List (Step 9)

```

Goto Filter Backup Query Help
-----
I/O Device List
Command ==> _____ Scroll ==> PAGE

Select one or more devices, then press Enter. To add, use F11.

Control unit number : 8000      Control unit type . : 2105

-----Device----- --#-- -----Control Unit Numbers + -----
/ Number Type +          PR OS 1--- 2--- 3--- 4--- 5--- 6--- 7--- 8--- Base
*****Bottom of data *****
_____

F1=Help      F2=Split      F3=Exit      F4=Prompt      F5=Reset      F7=Backward
F8=Forward   F9=Swap      F10=Actions F11=Add       F12=Cancel

```

Figure 4.13 I/O Device List Panel (Step 10)

```

Goto Filter Backup Query Help
----- Add Device -----
|
| Specify or revise the following values.
|
| Device number . . . . . 8000 (0000 - FFFF)
| Number of devices . . . . . 128
| Device type . . . . . 3390B _____ +
|
| Serial number . . . . . _____
| Description . . . . . 3390 Base addresses 8000-807F____
|
| Volume serial number . . . . . _____ (for DASD)
|
| Connected to CUs . . 8000 _____ +
|
| F1=Help      F2=Split      F3=Exit      F4=Prompt      F5=Reset      F9=Swap
| F12=Cancel
|

```

Figure 4.14 Add Device Panel (Step 11)

```

.----- Device / Processor Definition -----
|                                                                 Row 1 of 1 |
| Command ==> _____ Scroll ==> PAGE |
| Select processors to change device/processor definitions, then press |
| Enter. |
| Device number . . : 8100          Number of devices . . : 128 |
| Device type . . . : 3390B |
| |
| / Processor ID  UA + Time-Out STADET CHPID + Candidate List | *****
| s PROD        _ No      Yes    _ No |
| ***** Bottom of data ***** |
| |
| |
| |
| |
| F1=Help      F2=Split    F3=Exit    F4=Prompt    F5=Reset |
| F6=Previous  F7=Backward F8=Forward F9=Swap     F12=Cancel |
|-----

```

Figure 4.15 Device / Processor Definition Panel – Selecting the Processor ID (Step 12)

```

.----- Define Device / Processor -----
|
| Specify or revise the following values. |
| Device number . . : 8000          Number of devices . . . . : 128 |
| Device type . . . : 3390B |
| Processor ID . . . : PROD |
| |
| Unit address . . . . . 00 + (Only necessary when different from |
|                           the last 2 digits of device number) |
| Time-Out . . . . . No (Yes or No) |
| STADET . . . . . Yes (Yes or No) |
| |
| Preferred CHPID . . . . . _ + |
| Explicit device candidate list . No (Yes or No) |
| |
| F1=Help      F2=Split    F3=Exit    F4=Prompt    F5=Reset    F9=Swap |
| F12=Cancel |
|-----

```

Figure 4.16 Define Device / Processor Panel (Step 13)

```

----- Device / Processor Definition -----
|                                     Row 1 of 1 |
| Command ==> _____ Scroll ==> PAGE |
| Select processors to change device/processor definitions, then press |
| Enter. |
| Device number . . : 8000          Number of devices . : 128 |
| Device type . . . : 3390B |
|                                     Preferred Explicit Device |
| / Processor ID  UA + Time-Out  STADET  CHPID +  Candidate List |
| _ PROD          00   No         Yes    _      No |
| ***** Bottom of data ***** |
|                                     |
|                                     |
|                                     |
| F1=Help      F2=Split    F3=Exit    F4=Prompt  F5=Reset |
| F6=Previous  F7=Backward F8=Forward F9=Swap   F12=Cancel |
|-----

```

Figure 4.17 Device / Processor Definition Panel (Step 14)

```

----- Define Device to Operating System Configuration -----
|                                     Row 1 of 1 |
| Command ==> _____ Scroll ==> PAGE |
| Select OSs to connect or disconnect devices, then press Enter. |
| Device number . . : 8100          Number of devices : 128 |
| Device type . . . : 3390B |
|                                     |
| / Config. ID  Type  Description          Defined |
| s PROD        MVS |
| ***** Bottom of data ***** |
|                                     |
|                                     |
|                                     |
| F1=Help      F2=Split    F3=Exit    F4=Prompt  F5=Reset |
| F6=Previous  F7=Backward F8=Forward F9=Swap   F12=Cancel |
|-----

```

Figure 4.18 Define Device to Operating System Configuration (Step 15)

```

----- Define Device Parameters / Features -----
|                                                                 Row 1 of 6 |
| Command ==> _____ Scroll ==> PAGE |
|
| Specify or revise the values below.
|
| Configuration ID . : PROD
| Device number . . : 8000          Number of devices : 128
| Device type . . . : 3390B
|
| Parameter/
| Feature   Value   P Req.  Description
| OFFLINE   No      |         Device considered online or offline at IPL
| DYNAMIC   Yes     |         Device supports dynamic configuration
| LOCANY    No      |         UCB can reside in 31 bit storage
| WLMPAV    Yes     |         Device supports work load manager
| SHARED     Yes     |         Device shared with other systems
| SHAREDUP   No      |         Shared when system physically partitioned
| ***** Bottom of data *****
|
| F1=Help      F2=Split    F3=Exit    F4=Prompt    F5=Reset
| F7=Backward  F8=Forward  F9=Swap    F12=Cancel
|
-----

```

Figure 4.19 Define Device Parameters / Features Panel (Step 16)

```

----- Update Serial Number, Description and VOLSER -----
|                                                                 Row 1 of 128 |
| Command ==> _____ Scroll ==> PAGE |
|
| Device number . . : 8000          Number of devices : 128
| Device type . . . : 3390B
|
| Specify or revise serial number, description and VOLSER.
|
| Device Number Serial-#  Description                               VOLSER
| 8000                _____ 3390 Base addresses 8000-807F    _____
| 8001                _____ 3390 Base addresses 8000-807F    _____
| 8002                _____ 3390 Base addresses 8000-807F    _____
| 8003                _____ 3390 Base addresses 8000-807F    _____
| 8004                _____ 3390 Base addresses 8000-807F    _____
| 8005                _____ 3390 Base addresses 8000-807F    _____
| 8006                _____ 3390 Base addresses 8000-807F    _____
| 8007                _____ 3390 Base addresses 8000-807F    _____
| 8008                _____ 3390 Base addresses 8000-807F    _____
| 8009                _____ 3390 Base addresses 8000-807F    _____
| 800A                _____ 3390 Base addresses 8000-807F    _____
| F1=Help      F2=Split    F3=Exit    F5=Reset    F7=Backward
| F8=Forward  F9=Swap      F12=Cancel
|
-----

```

Figure 4.20 Update Serial Number, Description and VOLSER Panel (Step 18)

4.2.3 Defining the 9900V to VM/ESA® Systems

64 or Fewer LVIs: To define a 9900V with less than or equal to 64 LVIs to a VM/ESA® system, use the same procedure as for an IBM® 3990-6E subsystem. To define a 9900V with more than 64 LVIs to VM/ESA®, enter the LVI address range, storage type, and sharing option for the subsystem as shown below (the address range varies for each installation).

[Address Range] TYPE DASD SHARED YES

More than 64 LVIs: To define a 9900V with more than 64 LVIs to VSE/ESA, use the same procedure as for an IBM® 3990-6E subsystem. For 9900V subsystems with more than 64 LVIs, the **ADD cuu:cuu ECKD** statements are the same as for the IBM® 3390.

CAUTION: There may be APAR requirements at different versions of the VM software. In addition, certain requirements apply when VM is supporting guests (e.g., OS/390®) that can run 2105 native. For further information, please refer to the IBM® documentation.

4.2.4 Defining the 9900V to TPF

The 9900V supports the IBM® Transaction Processing Facility (TPF) and Multi-Path Locking Facility (MPLF) functions in either native mode or under VM. MPLF support requires TPF version 4.1 or higher, and RAID-5+ and 3390-3/3R LVIs are supported. The 9900V's TPF/MPLF capability enables high levels of concurrent data access across multiple channel paths. For further information on TPF and MPLF operations, please refer to the following IBM® documentation:

- *Storage Subsystem Library, 3390 Transaction Processing Facility Support RPQs*, IBM® document number GA32-0134-03.
- *Storage Subsystem Library, 3990 Storage Control Reference for Model 6*, IBM® document number GA32-0274-03.

Note on 2105 emulation: There are available PTFs to implement exploitation mode for TPF version 4.1. For further information, please refer to the IBM® documentation.

4.2.5 Defining the 9900V to Mainframe Linux®

The 9900V supports attachment to the following mainframe Linux® operating systems:

- SuSE Linux Enterprise Server 8 for IBM zSeries™ (Linux® Kernel 2.4)
- Red Hat® Linux® 7.2 for S/390® and zSeries™ (Linux® Kernel 2.4)

For details on FICON™ connectivity, FICON™/Open intermix configurations, and supported HBAs, switches, and directors (e.g., McDATA, CNT) for the 9900V subsystem, please contact your Hitachi Data Systems account team.

For information on preparing the 9900V subsystem for Linux® host attachment, please refer to the following IBM® publication:

- *Implementing Linux with IBM Disk Storage, SG24-6261*

The following links (current at time of document publication) will enable the reader to understand the details on the different methods for using Linux® on mainframe hosts:

- ESS library link:
<http://www-1.ibm.com/servers/storage/support/disk/2105.html>
- Linux® on S/390® hosts:
<http://publib-b.boulder.ibm.com/Redbooks.nsf/RedbookAbstracts/sg244987.html?Open>
- FCP use on zSeries™ hosts:
<http://publib-b.boulder.ibm.com/Redbooks.nsf/RedbookAbstracts/sg244987.html?Open>

4.3 Mainframe Operations

4.3.1 Initializing the LVIs

The 9900V LVIs require only minimal initialization before being brought online. Figure 4.21 shows an MVS ICKDSF JCL example of a minimal init job to write a volume ID (VOLID) and volume table of contents (VTOC).

Note: HPAV base and alias devices require additional definition. For further information, please refer to the *Hitachi Lightning 9900™ V Series Hitachi Parallel Access Volume (HPAV) User and Reference Guide* (MK-92RD118).

```
// EXAMPLE JOB
//          EXEC      PGM=ICKDSF
//SYSPRINT DD      SYSOUT=A
//SYSIN    DD      *
INIT UNITADDRESS (XXXX) NOVERIFY VOLID(YYYYYY) -
          OWNERID(ZZZZZZZ)
/*
```

Note: X = physical install address, Y = new volume ID, Z = volume ID owner.

Figure 4.21 LVI Initialization for MVS: ICKDSF JCL

4.3.2 Device Operations: ICKDSF

The 9900V subsystem supports the ICKDSF media maintenance utility. The ICKDSF utility can also be used to perform service functions, error detection, and media maintenance. Since the 9900V is a RAID device, there are only a few differences in operation from conventional DASD or other RAID devices. Table 4.6 lists ICKDSF commands that are specific to the 9900V, as contrasted to RAMAC.

Table 4.6 ICKDSF Commands for 9900V Contrasted to RAMAC

Command	Argument	Subsystem	Return Code
INSPECT	KEEPIT	RAMAC	CC = 12 Invalid parameter(s) for device type.
		9900V	CC = 12, F/M = 04 (EC=66BB).
	PRESERVE	RAMAC	CC = 4 Parameter ignored for device type.
		9900V	CC = 12, F/M = 04 (EC=66BB) Unable to establish primary and alternate track association for track CCHH=xxxx.
	SKIP	RAMAC	CC = 4 Parameter ignored for device type - skip.
		9900V	CC = 12, F/M = 04 (EC=66BB) Primary track CCHH=xxxx found unrecoverable.
	NOPRESERVE, NOSKIP,	RAMAC	CC = 0, ALT information not displayed.
	NOCHECK	9900V	CC = 0
INSTALL	SETMODE (3390)	RAMAC	CC = 12 Invalid parameter(s) for device type.
		9900V	In case of PRESERVE: CC = 12, In case of NO PRESERVE: CC = 0.
	SETMODE (3380)	RAMAC	CC = 0 (but not recommended by IBM).
		9900V	CC = 0
		RAMAC	CC = 12, Invalid parameter(s) for device type.
		9900V	CC = 12, Function not supported for nonsynchronous DASD.
	ANALYZE	RAMAC	CC = 0
		9900V	CC = 0
BUILD		RAMAC	CC = 0
		9900V	CC = 0
REVAL	REFRESH	RAMAC	CC = 12 Device not supported for the specified function.
		9900V	CC = 12, F/M = 04 (EC=66BB) Error, not a data check. Processing terminated.
	DATA, NODATA	RAMAC	CC = 0, Data/Nodata parameter not allowed.
		9900V	CC=0
CONTROL		RAMAC	CC = 0, ALT information not displayed.
		9900V	CC = 0, ALT information not displayed.
INIT		RAMAC	CC = 0, ALT information not displayed.
		9900V	CC = 0
REFORMAT		RAMAC	CC = 0, ALT information not displayed.
		9900V	CC=0
CPVOLUME		RAMAC	CC = 0, Readcheck parameter not allowed.
		9900V	CC=0
AIXVOL		RAMAC	Readcheck parameter not allowed.
		9900V	CC = 0

4.3.3 MVS Cache Operations

To display the 9900V cache statistics under MVS DFSMS, use the following operator command: **D SMS, CACHE**. Figure 4.22 shows the cache statistics reported by the 9900V. The 9900V reports cache statistics for each SSID in the subsystem. Because the dynamic cache management algorithm has been enhanced, the read and write percentages for the 9900V are displayed as **N/A**. For further information on MVS DFSMS cache reporting, please refer to the IBM® document *DFSMSdfp Storage Administrator Reference* (SC28-4920).

SSID	DEVS	READ	WRITE	HIT RATIO	FW BYPASSES
0004	15	N/A	N/A	50%	0
0005	11	N/A	N/A	0%	0
0006	11	N/A	N/A	87%	0
0007	10	N/A	N/A	87%	0

SSID=SUBSYSTEM IDENTIFIER					
DEVS=NUMBER OF MANAGED DEVICES ATTACHED TO SUBSYSTEM					
READ=PERCENT OF DATA ON MANAGED DEVICES ELIGIBLE FOR CACHING					
WRITE=PERCENT OF DATA ON MANAGED DEVICES ELIGIBLE FOR FAST WRITE					
HIT RATIO=PERCENT OF READS WITH CACHE HITS					
FW BYPASSES=NUMBER OF FAST WRITE BYPASSES DUE TO NVS OVERLOAD					

Figure 4.22 Displaying Cache Statistics Using MVS DFSMS

The 9900V supports the following MVS cache operations:

- **IDCAMS LISTDATA COUNTS.** When the <subsystem> parameter is used with the LISTDATA command, the user must issue the command once for each SSID to view the entire 9900V image. Figure 4.23 shows a JCL example of the LISTDATA COUNTS command.

```
//LIST JOB. . . . .
//COUNT1 EXEC PGM=IDCAMS
//SYSPRINT DD SYSOUT=A
//SYSIN DD *
LISTDATA    COUNTS  VOLUME (VOL000)  UNIT (3390)    SUBSYSTEM
LISTDATA    COUNTS  VOLUME (VOL064)  UNIT (3390)    SUBSYSTEM
LISTDATA    COUNTS  VOLUME (VOL128)  UNIT (3390)    SUBSYSTEM
LISTDATA    COUNTS  VOLUME (VOL192)  UNIT (3390)    SUBSYSTEM
/*
```

Figure 4.23 IDCAMS LISTDATA COUNTS (JCL example)

- **Subsystem counter reports.** The cache statistics reflect the logical caching status of the volumes. For the 9900V, Hitachi Data Systems recommends that you set the nonvolatile storage (NVS) ON and the DASD fast write (DFW) ON for all logical volumes. This will not affect the way the 9900V caches data for the logical volumes. The default caching status for the 9900V is:

CACHE ON for the subsystem

CACHE ON for all logical volumes

CACHE FAST WRITE ON for the subsystem

NVS OFF for the subsystem

← Change NVS to **ON** for the 9900V.

DFW OFF for all volumes

← Change DFW to **ON** for the 9900V.

Note: In normal cache replacement, bypass cache, or inhibit cache loading mode, the 9900V performs a special function to determine whether the data access pattern from the host is sequential. If the access pattern is sequential, the 9900V transfers contiguous tracks from the disks to cache ahead of time to improve cache hit rate. Due to this advance track transfer, the 9900V shows the number of tracks transferred from the disks to the cache slot at DASD/CACHE of the SEQUENTIAL in TRANSFER OPERATIONS field in the subsystem counters report, even though the access mode is not sequential.

IDCAMS LISTDATA STATUS. The LISTDATA STATUS command generates status information for a specific device within the subsystem. The 9900V reports two storage sizes:

- **Subsystem storage.** This field shows capacity in bytes of cache. For a 9900V with more than one SSID, the cache is shared among the SSIDs instead of being logically divided. This strategy ensures backup battery power for all cache in the 9900V. For the 9900V, this field shows three-fourths (75%) of the total cache size.
- **Nonvolatile storage.** This field shows capacity in bytes of random access cache with a backup battery power source. For the 9900V, this field shows one-fourth (25%) of the total cache size.

IDCAMS SETCACHE. The 9900V supports the IDCAMS SETCACHE commands, which manage caching for subsystem storage through the use of one command (except for **REINITIALIZE**). The following SETCACHE commands work for the subsystem storage across multiple SSIDs:

SETCACHE SUBSYSTEM ON|OFF

SETCACHE CACHEFASTWRITE ON|OFF

SETCACHE NVS ON|OFF

SETCACHE DESTAGE

Note: The SETCACHE REINITIALIZE command reinitializes only the logical subsystem specified by the SSID. You must issue the REINITIALIZE command once for each defined SSID.

DEVSERV PATHS. The DEVSERV PATHS command is defined as the number of LVIs that can be specified by an operator (from 1 through 99). To display an entire 9900V subsystem, enter the DEVSERV command for several LVIs, as follows:

DEVSERV PATHS,100,64

DEVSERV PATHS,140,64

DEVSERV PATHS,180,64

DEVSERV PATHS,1C0,64

4.3.4 VM/ESA® Cache Operations

When the 9900V is managed under VM/ESA®, the following SET CACHE commands are effective across multiple SSIDs:

```
SET CACHE SUBSYSTEM ON|OFF
SET NVS SUBSYSTEM ON|OFF
SET CACHEFW SUBSYSTEM ON|OFF
DESTAGE SUBSYSTEM
```

4.3.5 VSE/ESA Cache Operations

When using VSE/ESA to manage the 9900V, the following CACHE commands are effective across multiple SSIDs:

```
CACHE SUBSYS=cuu,ON|OFF|STATUS
CACHE SUBSYS=cuu,FAST,ON|OFF
CACHE SUBSYS=cuu,NVS,ON|OFF
CACHE SUBSYS=cuu,REINIT
```

Note: SIMs indicating a drive failure may not be reported to the VSE/ESA console (reference IBM® document GA32-0253). Since the RAID technology and dynamic spare drives ensure non-stop processing, a drive failure may not be noticed by the console operator. If Hi-Track® is not installed, the user should run and read an EREP SIM report on a regular basis. Since all SIMs are also logged on the SVP, the user can also use the 9900V Remote Console to monitor the SIMs.

4.4 Open-Systems Configuration

After physical installation of the 9900V subsystem has been completed, the user configures the 9900V subsystem for open-system operations with assistance as needed from the Hitachi Data Systems representative. For specific information and instructions on configuring the 9900V disk devices for open-system operations, please refer to the 9900V configuration guide for the connected platform. Table 4.7 lists the currently supported platforms and the corresponding 9900V configuration guides. Please contact your Hitachi Data Systems account team for the latest information on platform and operating system version support.

Table 4.7 9900V Open-System Platforms and Configuration Guides

Platform	Configuration Guide Document Number
UNIX®-based platforms:	
IBM® AIX®	MK-92RD119
HP-UX®	MK-92RD122
Sun™ Solaris™	MK-92RD123
HP Tru64™ UNIX®	MK-92RD124
SGI™ IRIX®	MK-92RD125
HP OpenVMS™	MK-92RD128
Sequent® DYNIX/ptx®	<i>Please use the IBM® documentation.</i>
PC server platforms:	
Windows NT®	MK-92RD120
Windows® 2000	MK-92RD121
Windows® 2003	MK-93RD153
Novell® NetWare®	MK-92RD126
Linux® platforms:	
Red Hat® Linux®	MK-92RD127
SuSE® Linux®	MK-93RD148

4.4.1 Configuring the Fibre-Channel Ports

The LUN Manager remote console software enables users to configure the fibre-channel ports for the connected operating system and operational environment (e.g., FC-AL or fabric). If desired, Hitachi Data Systems can configure the fibre-channel ports as a fee-based service. For further information on LUN Manager, see *Hitachi Lightning 9900™ V Series LUN Manager User's Guide* (MK-92RD105), or contact your Hitachi Data Systems account team.

The 9980V subsystem supports a maximum of 64 fibre-channel ports, and the 9970V supports up to 48 fibre-channel ports. Each fibre-channel port is assigned a unique target ID (from 0 to EF). Each 9900V fibre-channel port supports addressing capabilities for up to a total of 512 LUNs across up to 128 host storage domains, each with its own LUN 0 and its own host mode. Each host storage domain may have up to 256 LUNs. Multiple host storage domains are supported using LUN Security. Figure 4.24 illustrates fibre port-to-LUN addressing.

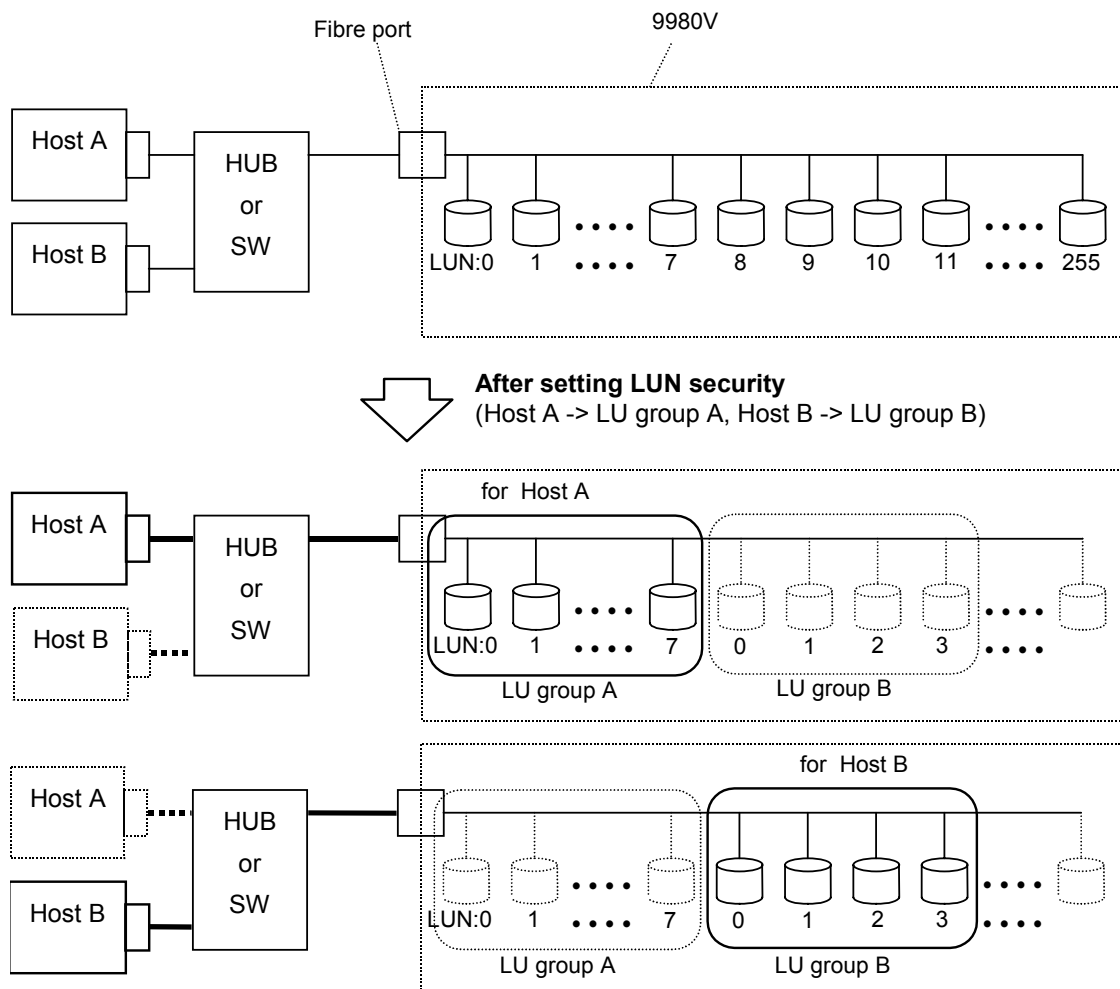


Figure 4.24 Fibre Port-to-LUN Addressing

4.4.2 Virtual LVI/LUN Devices

The Virtual LVI/LUN remote console software enables users to configure custom-size LUs which are smaller than standard-size LUs. Open-system users define Virtual LVI/LUN devices by size in MB (minimum device size = 35 MB). Mainframe users define Virtual LVI/LUN devices by number of cylinders.

4.4.3 LUN Expansion (LUSE) Devices

The LUSE remote console software enables users to configure size-expanded LUs which are from 2 to 36 times larger than standard-size LUs. LUSE devices are identified by the type and number of LUs which have been joined to form the LUSE device. For example, an OPEN-9*36 LUSE device is composed of 36 OPEN-9 LUs.

4.5 Open-Systems Operations

4.5.1 Command Tag Queuing

The 9900V supports command tag queuing for open-system devices. Command tag queuing enables hosts to issue multiple disk commands to the fibre-channel adapter without having to serialize the operations. Instead of processing and acknowledging each disk I/O sequentially as presented by the applications, the 9900V subsystem processes requests in the most efficient order to minimize head seek operations and disk rotational delay.

Note: The queue depth parameter may need to be adjusted for the 9900V devices. Please refer to the appropriate 9900V configuration guide for queue depth requirements and instructions on changing queue depth and other related system and device parameters (refer to Table 4.7 for a list of the 9900V open-system configuration guides).

4.5.2 Host/Application Failover Support

The 9900V supports many industry-standard products which provide host and/or application failover capabilities (e.g., Hitachi Dynamic Link Manager™, VERITAS® Cluster Server, Sun™ Cluster, VERITAS® Volume Manager/DMP, HP® MC/ServiceGuard, HACMP, Microsoft® Cluster Server). For the latest information on failover and LVM product releases, availability, and compatibility, please contact your Hitachi Data Systems account team.

4.5.3 Path Failover Support

The user should plan for path failover (alternate pathing) to ensure the highest data availability. In the open-system environment, alternate pathing can be achieved by host failover and/or I/O path failover software. The 9980V provides up to 64 fibre ports to accommodate alternate pathing for host attachment (9970V provides up to 48 fibre ports). Figure 4.25 shows an example of alternate pathing. The LUs can be mapped for access from multiple ports and/or multiple target IDs. The number of connected hosts is limited only by the number of fibre-channel ports installed and the requirement for alternate pathing within each host. If possible, the alternate path(s) should be attached to different channel card(s) than the primary path.

The 9900V subsystem supports industry-standard I/O path failover products such as Hitachi Dynamic Link Manager™ and VERITAS® Volume Manager/DMP. Hitachi Dynamic Link Manager™ provides load balancing in addition to path failover. For the latest information on failover product releases, availability, and compatibility, please contact your Hitachi Data Systems account team.

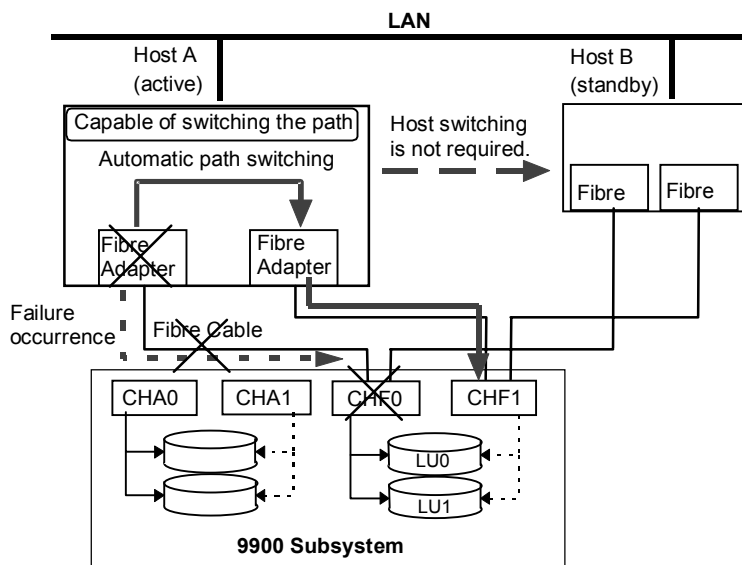


Figure 4.25 Alternate Pathing

4.5.4 SIM Reporting

The 9900V subsystem logs all SIMs on the SVP. When the user accesses the 9900V subsystem using the Storage Navigator remote console software, the SIM log is displayed. This enables open-system users to monitor 9900V operations from any 9900V Remote Console PC. The Storage Navigator software allows the user to view the SIMs by date/time or by controller.

4.5.5 SNMP Remote Subsystem Management

The 9900V subsystem supports the industry-standard simple network management protocol (SNMP) for remote subsystem management from the UNIX®/PC server host. SNMP is used to transport management information between the 9900V subsystem and the SNMP manager on the host. The SNMP agent on the 9900V sends status information to the host(s) when requested by a host or when a significant event occurs. Notification of error conditions is made in real time, providing UNIX®/PC server users with the same level of monitoring and support available to mainframe users. The SIM reporting via SNMP enables users to monitor the 9900V subsystem without having to check the Remote Console for SIMs.

4.5.6 NAS and SAN Operations

The Hitachi Lightning 9900™ V Series subsystem supports NAS and SAN configurations. For further information on 9900V NAS and SAN operations, please see section 1.1.5, refer to the *Hitachi Freedom NAS™ NSS Configuration Guide (MK-91RD053)*, or contact your Hitachi Data Systems account team.

4.6 Control Panel

Figure 4.26 shows the 9980V operator control panel. The 9970V control panel is the same except that the interfaces are A-M (not A-R). Table 4.8 describes the items on the operator control panel. To open the control panel cover, push and release on the point marked PUSH.

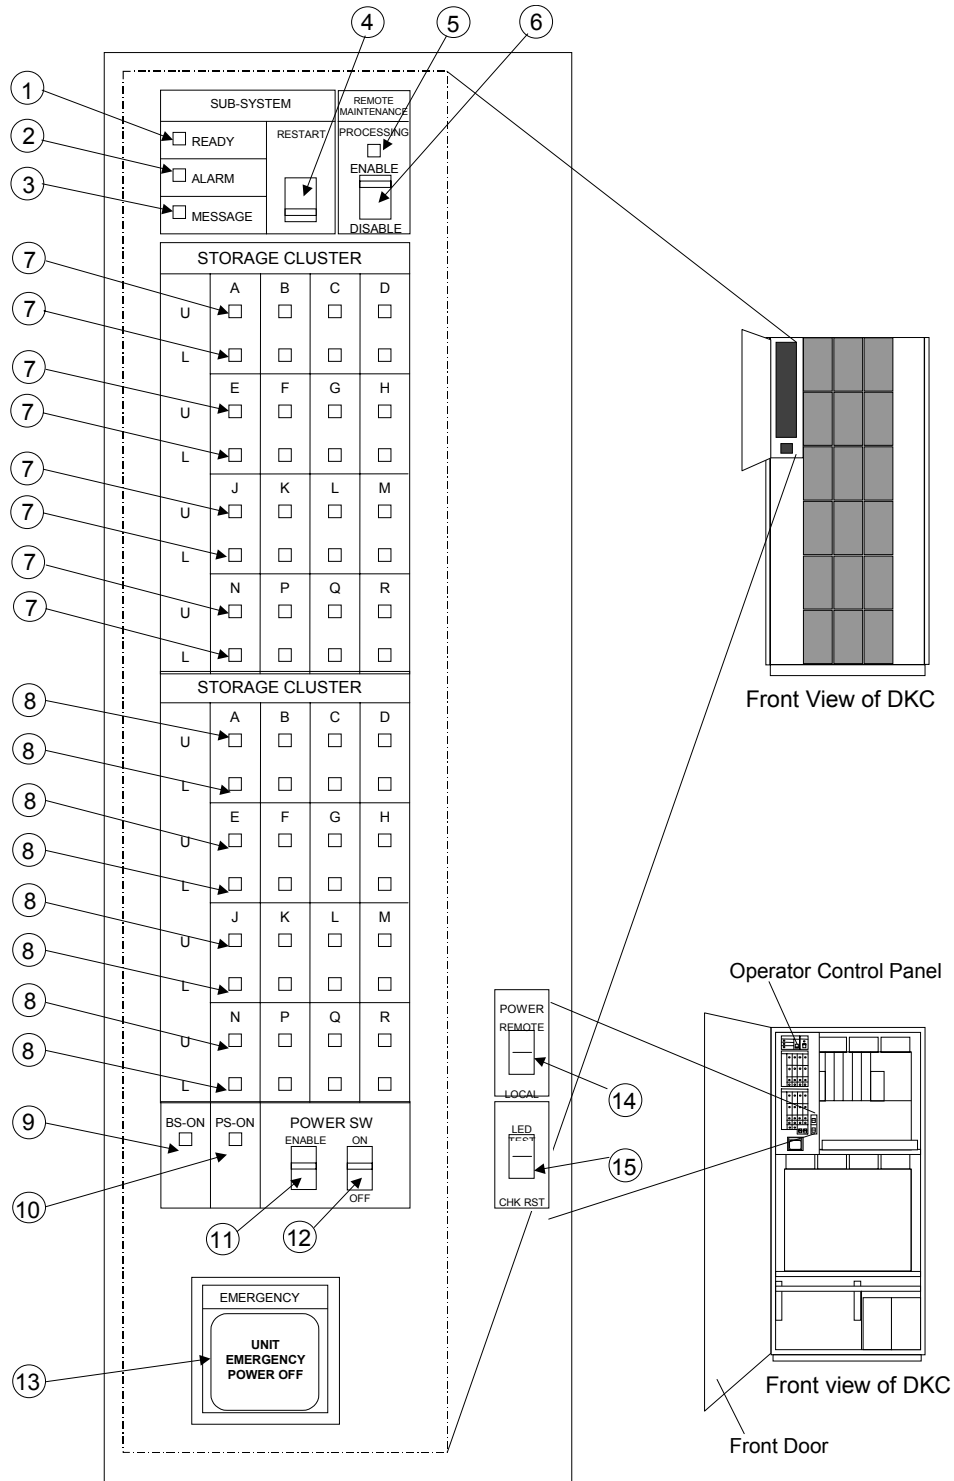


Figure 4.26 9980V Control Panel

Table 4.8 9980V Control Panel

Item	Name	Type	Description
1	SUBSYSTEM READY	LED (Green)	When lit, indicates that input/output operation on the channel interface is possible. Applies to both storage clusters.
2	SUBSYSTEM ALARM	LED (Red)	When lit, indicates that low DC voltage, high DC current, abnormally high temperature, or a failure has occurred. Applies to both storage clusters.
3	SUBSYSTEM MESSAGE	LED (Amber)	On: Indicates that a SIM (message) was generated from either of the clusters. Applies to both storage clusters. Blinking: Indicates that the SVP failure has occurred.
4	SUBSYSTEM RESTART	Switch	Used to unfence a fenced drive path and to release the Write Inhibit command. Applies to both storage clusters.
5	REMOTE MAINTENANCE PROCESSING	LED (Amber)	When lit, indicates that remote maintenance activity is in process. If remote maintenance is not in use, this LED is not lit. Applies to both storage clusters.
6	REMOTE MAINTENANCE ENABLE/DISABLE	Switch	Used for remote maintenance. While executing remote maintenance (the REMOTE MAINTENANCE PROCESSING LED in item 5 is blinking), when switching from ENABLE to DISABLE, remote maintenance is interrupted. If the remote maintenance function is not used, this switch is ineffective. Applies to both storage clusters.
7	STORAGE CLUSTER 1 CHANNEL A-R* ENABLE U: Upper L: Lower	LED (Green)	On: Indicates some of the logical paths are established. Fast blinking (Only Serial Channel): Indicates that the corresponding channel paths are executing the channel command. Slow blinking: Indicates none of the logical path is established. Off: Indicates that the corresponding channel paths are not enabled. When the 16-port CHA is installed, LED of the L side is effective.
8	STORAGE CLUSTER 2 CHANNEL A-R* ENABLE U: Upper L: Lower	LED (Green)	On: Indicates some of the logical paths are established. Fast blinking (Only Serial Channel): Indicates that the corresponding channel paths are executing the channel command. Slow blinking: Indicates none of the logical path is established. Off: Indicates that the corresponding channel paths are not enabled. When the 16-port CHA is installed, LED of the L side is effective.
9	BS-ON	LED (Amber)	Indicates input power is available.
10	PS-ON	LED (Green)	Indicates that subsystem is powered on. Applies to both storage clusters.
11	POWER SW ENABLE	Switch	Used to enable the POWER SW ON/OFF switch. To enable the POWER SW ON/OFF switch, turn the POWER SW ENABLE switch to the ENABLE position.
12	POWER SW ON / OFF	Switch	Used to power subsystem on/off. This switch is valid when REMOTE/LOCAL switch (item 14) is set to LOCAL. Applies to both storage clusters.
13	EMERGENCY POWER OFF (EPO)	1-Way Locking Switch	Used to shut down power to both storage clusters in an emergency.
14	REMOTE/LOCAL	Switch	REMOTE position: Subsystem is powered on/off by instructions from CPU. LOCAL position: Subsystem is powered on/off via the POWER SW ON / OFF switch. Applies to both storage clusters.
15	LED TEST/CHK RESET	Switch	LED TEST position: The LEDs on Control Panel go on. CHK RESET position: The PS ALARM and TH ALARM are reset.

* The 9970V subsystem has channel interfaces A-M.

4.6.1 Emergency Power-Off (EPO)

The disk subsystem EMERGENCY POWER OFF (EPO) switch is located on the operator control panel (see Figure 4.27). Use this switch only in case of an emergency.

To power off the disk subsystem in case of an emergency:

1. Open the operator control panel cover by pushing on the point marked PUSH.
2. Pull the emergency power-off switch (item 13 in Figure 4.26) up and then out towards you as illustrated on the switch.
3. Call the technical support center. The EPO switch must be reset by service personnel before the disk subsystem can be powered on again.

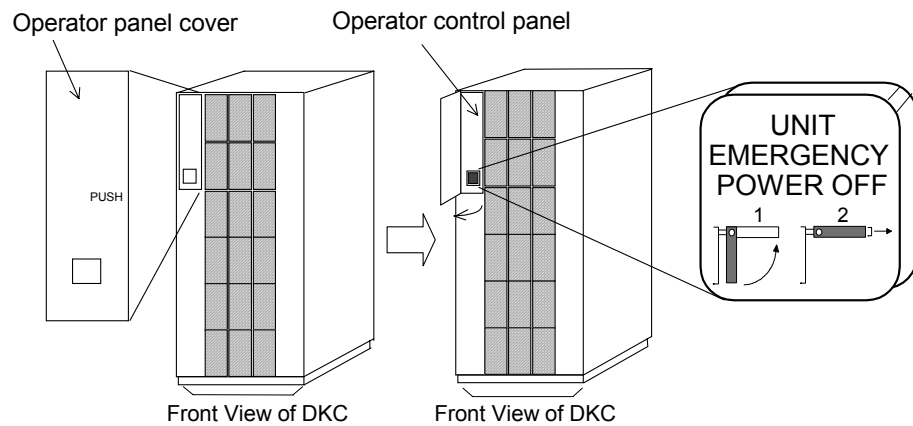


Figure 4.27 Emergency Power-Off (EPO)

Chapter 5 Planning for Installation and Operation

This chapter provides information for planning and preparing a site before and during installation of the Hitachi Lightning 9900™ V Series subsystem. Please read this chapter carefully before beginning your installation planning. Figure 5.1 shows a physical overview of the 9980V subsystem. Figure 5.2 shows a physical overview of the 9970V subsystem.

If you would like to use any of the Lightning 9900™ V Series features or software products (e.g., TrueCopy, ShadowImage), please contact your Hitachi Data Systems account team to obtain the appropriate license(s) and software license key(s).

Note: The general information in this chapter is provided to assist in installation planning and is not intended to be complete. The DKC460I/DKU455I and DKC465I (9980V and 9970V) installation and maintenance documents used by Hitachi Data Systems personnel contain complete specifications. The exact electrical power interfaces and requirements for each site must be determined and verified to meet the applicable local regulations. For further information on site preparation for Lightning 9900™ V Series subsystem installation, please contact your Hitachi Data Systems account team or the Hitachi Data Systems Support Center.

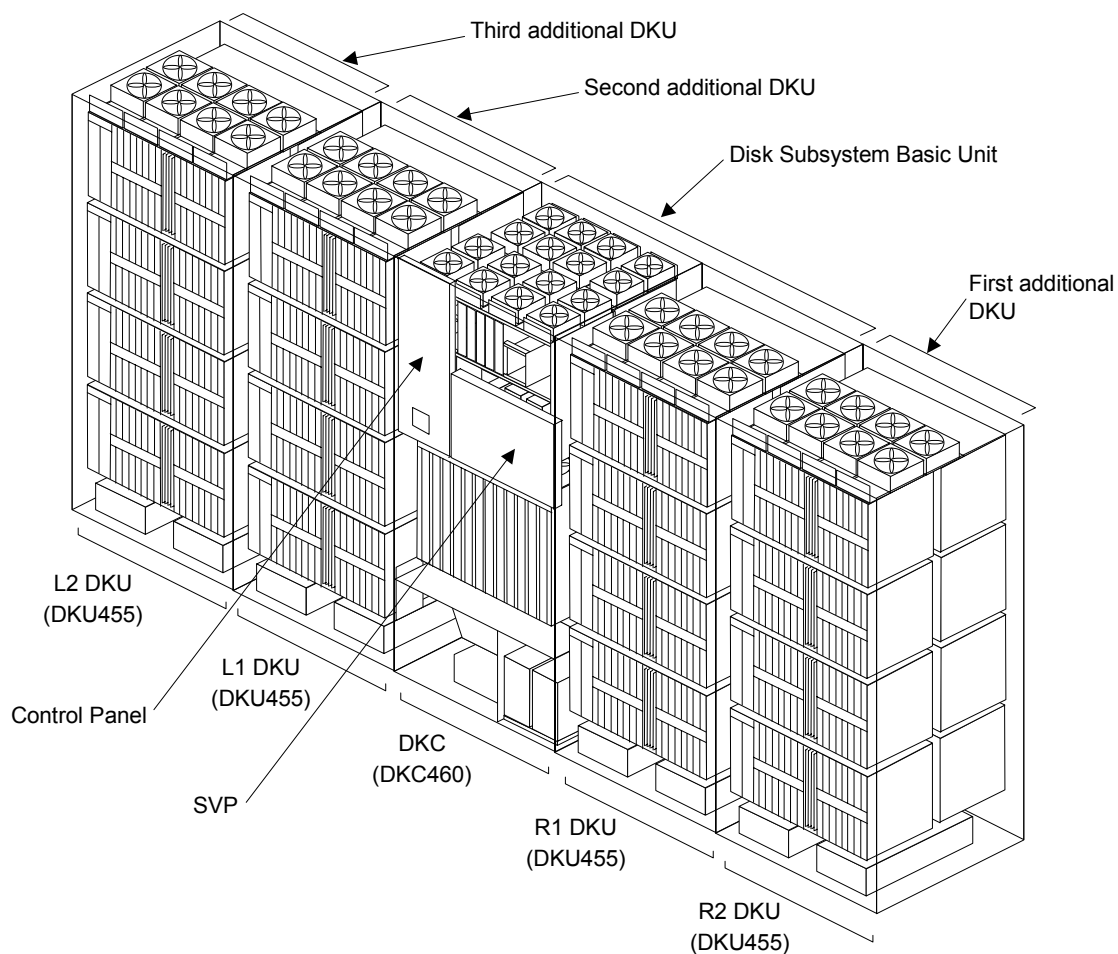


Figure 5.1 Physical Overview of 9980V Subsystem

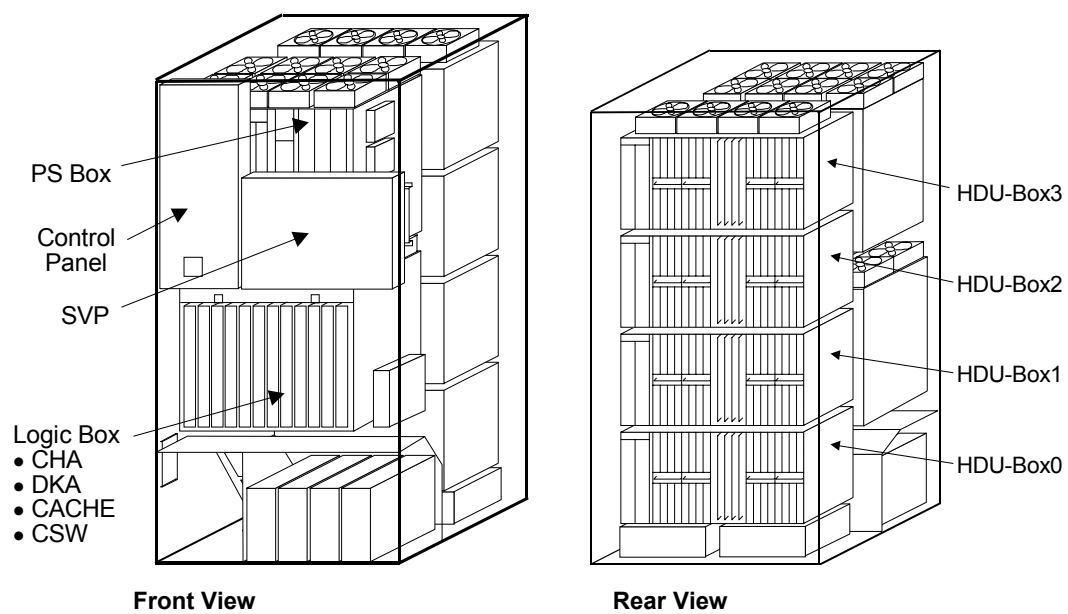


Figure 5.2 Physical Overview of the 9970V Subsystem

5.1 User Responsibilities and Safety Precautions

Before the 9900V subsystem arrives for installation, the user must provide the following items to ensure proper installation and configuration:

- Physical space necessary for proper subsystem function and maintenance activity
- Electrical input power
- Connectors and receptacles
- Air conditioning
- Floor ventilation areas (recommended but not required)
- Cable access holes
- RJ-11 analog phone line (for Hi-Track® support)

5.1.1 Safety Precautions

For safe operation of the 9980V and 9970V disk subsystems, please observe the following precautions:

- Use the subsystems with the front and rear doors closed. The doors are designed for safety and protection from noise, static electricity, and EMI emissions.
- Make sure that all front and rear doors are closed before operating the subsystem. The only exceptions are during the power-up or power-down processes. Perform only the procedures described in this manual when the front and rear doors must be opened for operation.
- Before performing power-down or power-up, make sure that the disk subsystem is not undergoing any maintenance and is not being used online.
- Do not place objects on top of the frames, as this is where air is exhausted. This interferes with the flow of cooling air.
- For troubleshooting, perform only the instructions described in this manual. If you need further information, please contact Hitachi Data Systems maintenance personnel.
- In case of a problem with the subsystem, please report the exact circumstances surrounding the problem and provide as much detail as possible to expedite problem isolation and resolution.

5.2 Dimensions, Physical Specifications, and Weight

Figure 5.3 and Figure 5.4 show the physical dimensions of the 9980V and 9970V subsystems. Table 5.1 and Table 5.2 lists the physical specifications of the 9980V and 9970V subsystems.

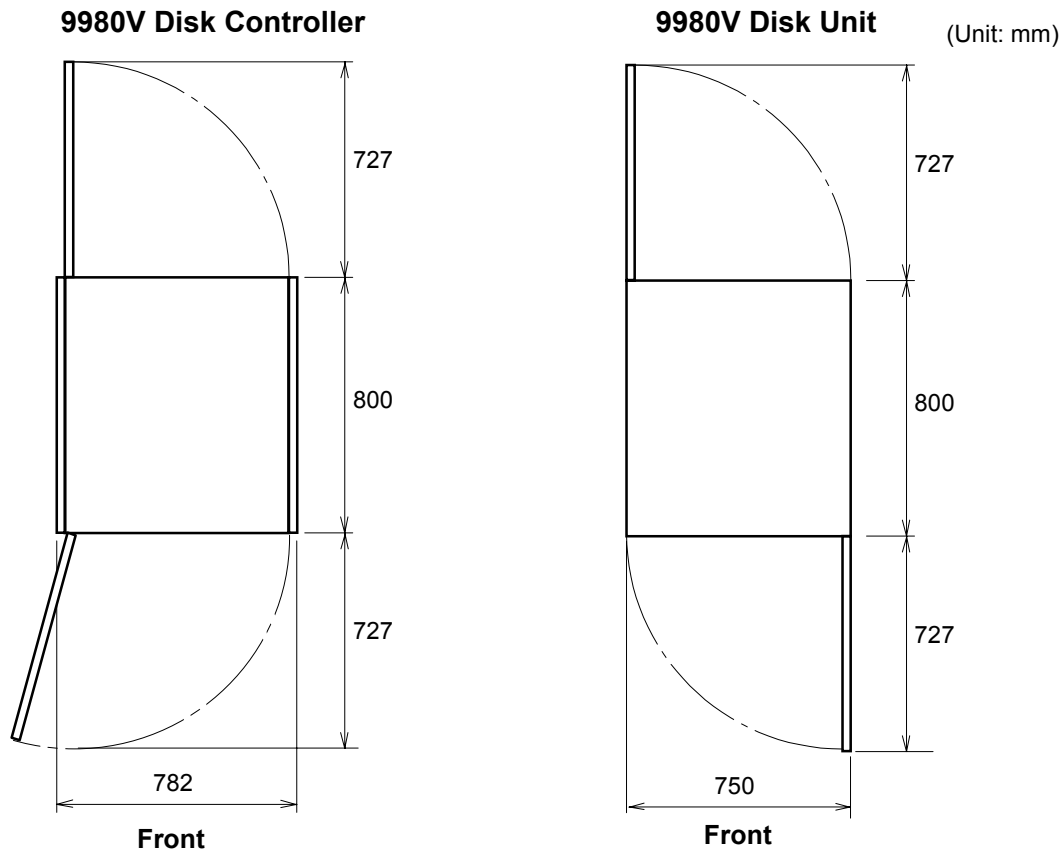


Figure 5.3 9980V DKC and DKU Physical Dimensions

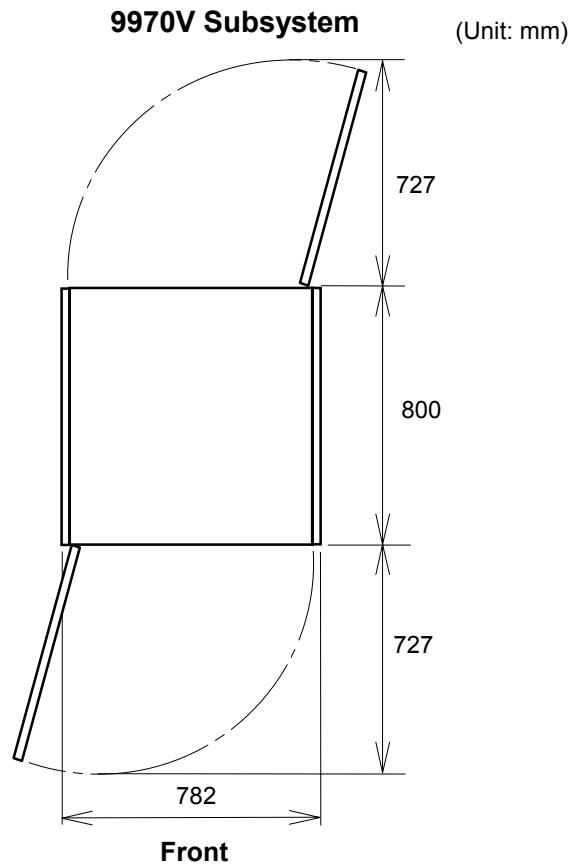


Figure 5.4 9970V Physical Dimensions

Table 5.1 9980V Physical Specifications

Item		9980V Controller (DKC460I)			9980V Disk Unit (DKC455I)	
Weight (kg)		499 ^{*1}	575 ^{*2}	575 ^{*3}	752 ^{*4}	752 ^{*5}
Heat Output (kW)		1.57 ^{*1}	2.68 ^{*2}	3.08 ^{*3}	6.14 ^{*4}	6.40 ^{*5}
Power Consumption (kVA)		1.65 ^{*1}	2.83 ^{*2}	3.27 ^{*3}	6.68 ^{*4}	6.94 ^{*5}
Air Flow (m ³ /min.)		18			32	
Dimensions (mm)	Width	782 ^{*6}			750	
	Depth	800			800	
	Height	1860			1860	

*1: These values are used when DKC460I has 16 GB cache, two fibre 8-port CHA options, and two DKA pairs.

*2: These values are used when DKC460I has 64 GB cache, four fibre 8-port CHA options, and four DKA pairs.

*3: These values are used when DKC460I has 64 GB cache, four MF fibre 8-port CHA options, and four DKA pairs.

*4: These values are used when DKU455I is fully configured with 36-GB (15K rpm) HDDs.

*5: These values are used when DKU455I is fully configured with 73-GB or 146-GB (10K rpm) HDDs.

*6: This includes the thickness of side covers (16 mm × 2).

Table 5.2 9970V Physical Specifications

Item		Configured with 1 DKA Pair		Configured with 2 DKA Pairs	
		36 GB	73 or 146 GB	36 GB	73 or 146 GB
Weight (kg)		770 ^{*1}	770 ^{*2}	770 ^{*1}	770 ^{*2}
Heat Output (kW)		4.89 ^{*1}	5.02 ^{*2}	4.81 ^{*1}	4.94 ^{*2}
Power Consumption (kVA)		5.28 ^{*1}	5.41 ^{*2}	5.19 ^{*1}	5.32 ^{*2}
Air Flow (m ³ /min.)		25			
Dimensions (mm)	Width	782 ^{*3}			
	Depth	800			
	Height	1860			

*1: These values are used when DKC465I is fully configured with all CHA options and 36-GB (15K rpm) HDDs.

*2: These values are used when DKC465I is fully configured with all CHA options and 73-GB (10K rpm) HDDs.

*3: This includes the thickness of side covers (16 mm × 2).

5.3 Service Clearance, Floor Cutout, and Floor Load Rating Requirements

This section specifies the 9980V and 9970V service clearance requirements (a + b) based on the floor load rating and the clearance (c).

- Figure 5.5 shows the service clearance and floor cutout for the 9980V disk controller (DKC) frame. Figure 5.6 shows the service clearance and floor cutout for the 9980V disk unit (DKU) frame.
- Figure 5.7 shows the service clearance and floor cutouts for the 9980V subsystem minimum configuration (one DKC, one DKU). Table 5.3 shows the floor load rating requirements for the 9980V subsystem minimum configuration.
- Figure 5.8 shows the service clearance and floor cutouts for the 9980V subsystem maximum configuration (one DKC, four DKUs). Table 5.4 shows the floor load rating requirements for the 9980V subsystem maximum configuration.
- Figure 5.9 shows the service clearance and floor cutouts for the 9970V subsystem (all configurations). Table 5.5 shows the floor load rating requirements for the 9970V.
- See section 5.4.1 for the service clearance, floor cutout, and floor load rating requirements for 9980V-9900 subsystem intermix configurations.

Note: The service clearance is required for service work. Do not use this space for storage of any article to prevent damage.

Note: Actual clearances for installation should be decided after consulting with construction specialist responsible for installation building, as clearances could vary depending on the size/layout of the system and building conditions.


Note: When various configurations of subsystems are arranged in a row, use the clearance values based on the maximum subsystem configuration.

Note: For efficient maintenance operations, it is recommended that clearance (c) be made as large as possible.

The following formula can be used to calculate floor loading to ensure that the weight of all equipment to be installed is adequately supported. Total area is defined as machine area plus half the service clearance.


$$\frac{\text{machine weight} + (15 \text{ lb/ft}^2 \times 0.5 \text{ service clearance}) + (10 \text{ lb/ft}^2 \times \text{total area})}{\text{total area}}$$

The additional weight of the raised floor and the weight of the cables is 10 lb/ft² (50 kg/m²) uniformly across the total area used in the calculations. When personnel and equipment traffic occur in the service clearance area, a distributed weight of 15 lb/ft² (75 kg/m²) is allowed. This distributed weight is applied over half of the service clearance area up to a maximum of 760 mm (30 inches) from the machine.

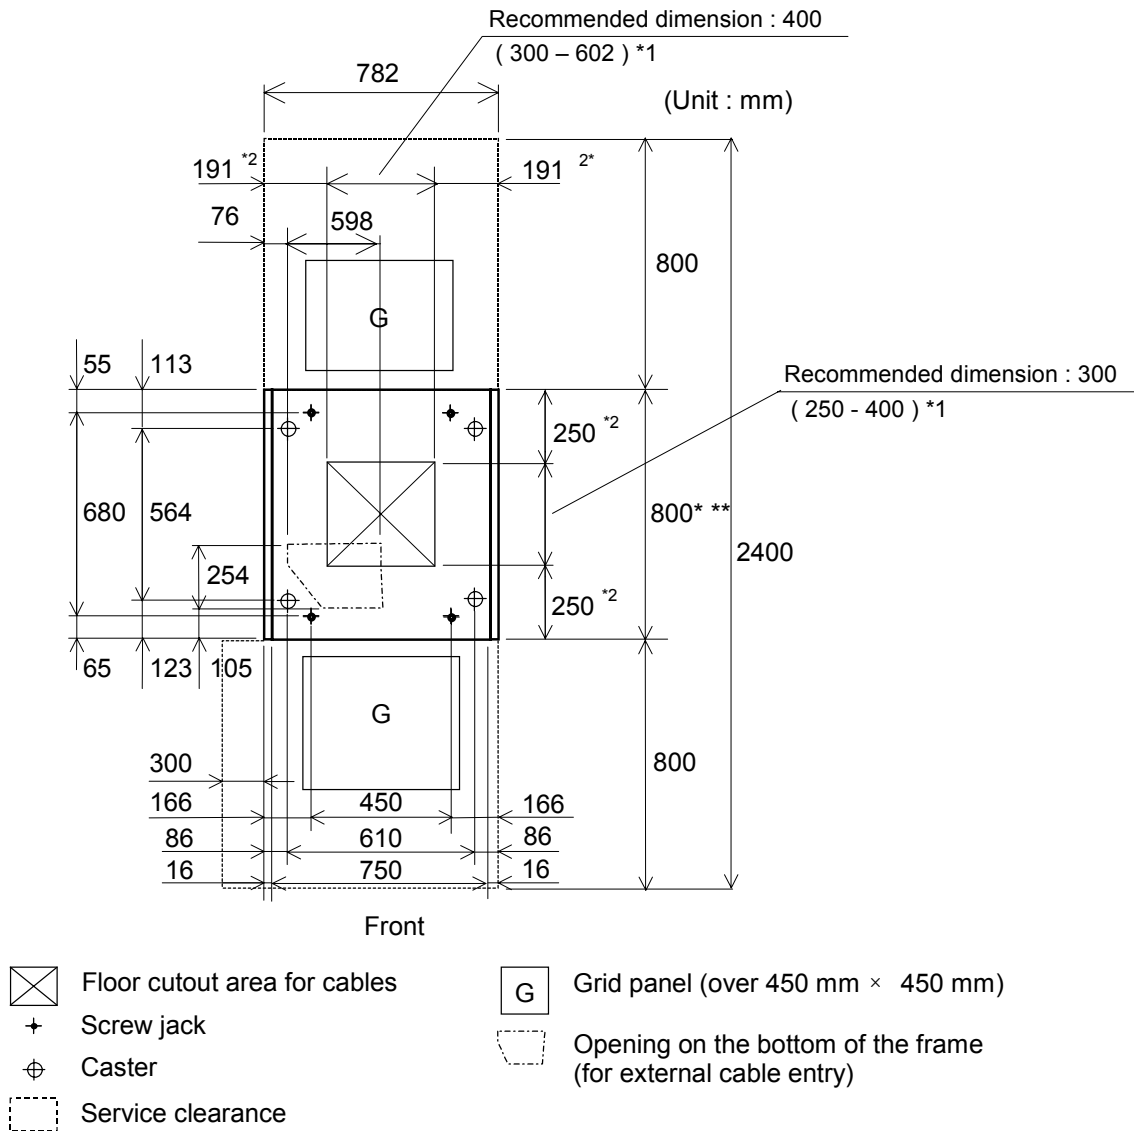

- *1 Values in parentheses show the allowable range of the floor cutout dimension.
The floor cutout should be in the center of the DKC. In case that the floor cutout is in the right position for the external cable work and is within the allowable range, the cutout position may be off-center. In this case, check the relation between the positions of the cutout and the opening on the bottom of the frame. If the floor cutout width is more than 552 mm, be careful about the restriction of the movable direction so that the caster wheels do not fall down into the cutout.
- *2 These dimensions vary with the floor cutout dimension.
- * The thickness of the door is different in the FRONT (35 mm) than in the REAR (25 mm).
- ** Overhang of the MOSAIC (LOUVER) of the FRONT DOOR (7 mm) is not included.

Figure 5.5 Service Clearance and Floor Cutout for the 9980V DKC

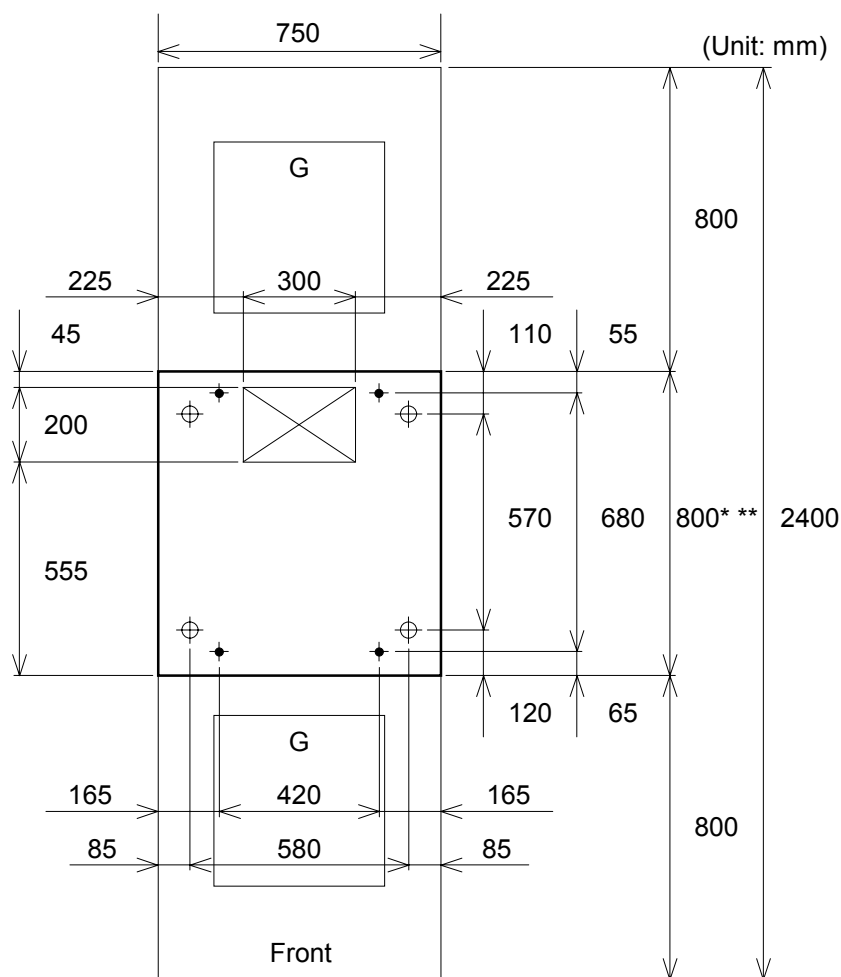


-  Floor cutout area for cables
-  Screw jack
-  Caster
-  Service clearance
-  Grid panel (over 450mm x 450mm)

* The thickness of the door is different in the FRONT (35 mm) than in the REAR (25 mm).

** Overhang of the MOSAIC (LOUVER) of the FRONT DOOR (7 mm) is not included.

Figure 5.6 Service Clearance and Floor Cutout for the 9980V DKU

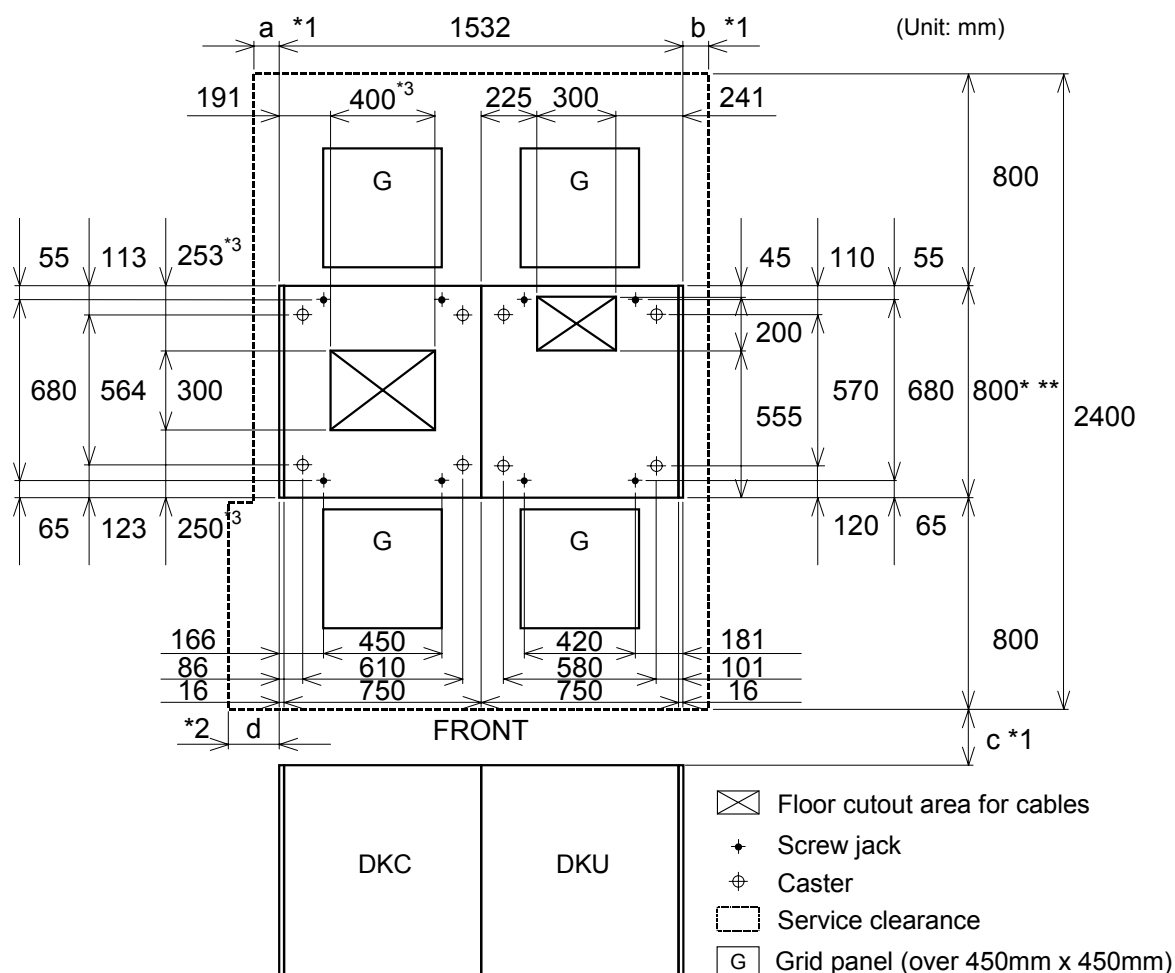

*1 Clearance (a+b) depends on floor load rating and clearance (c). Floor load rating and required clearances are in Table 5.3.

*2 Clearance (d) must be over 0.3 m so as to open the DKC front door (refer to Figure 5.5). In case that clearance (d) is less than clearance (a), give priority to clearance (a).

*3 See Figure 5.5 for details on the DKC floor cutout.


* The thickness of the door is different in the FRONT (35 mm) than in the REAR (25 mm).

** Overhang of the MOSAIC (LOUVER) of the FRONT DOOR (7 mm) is not included.

Figure 5.7 Service Clearance and Floor Cutouts for the 9980V Minimum Configuration

Table 5.3 Floor Load Rating and Required Clearances for 9980V Minimum Config.

Floor Load Rating kg/m ² (lb/ft ²)	Required Clearance (a+b) in meters				
	Clearance (c) in meters (feet)				
	c = 0	c = 0.2 (0.66)	c = 0.4 (1.31)	c = 0.6 (1.97)	c = 1.0 (3.28)
500 (102.4)	0.6	0.4	0.2	0	0
450 (92.2)	0.9	0.7	0.4	0.3	0
400 (81.9)	1.4	1.0	0.8	0.6	0.3
350 (71.7)	2.0	1.6	1.3	1.0	0.7
300 (61.4)	3.0	2.5	2.1	1.8	1.3

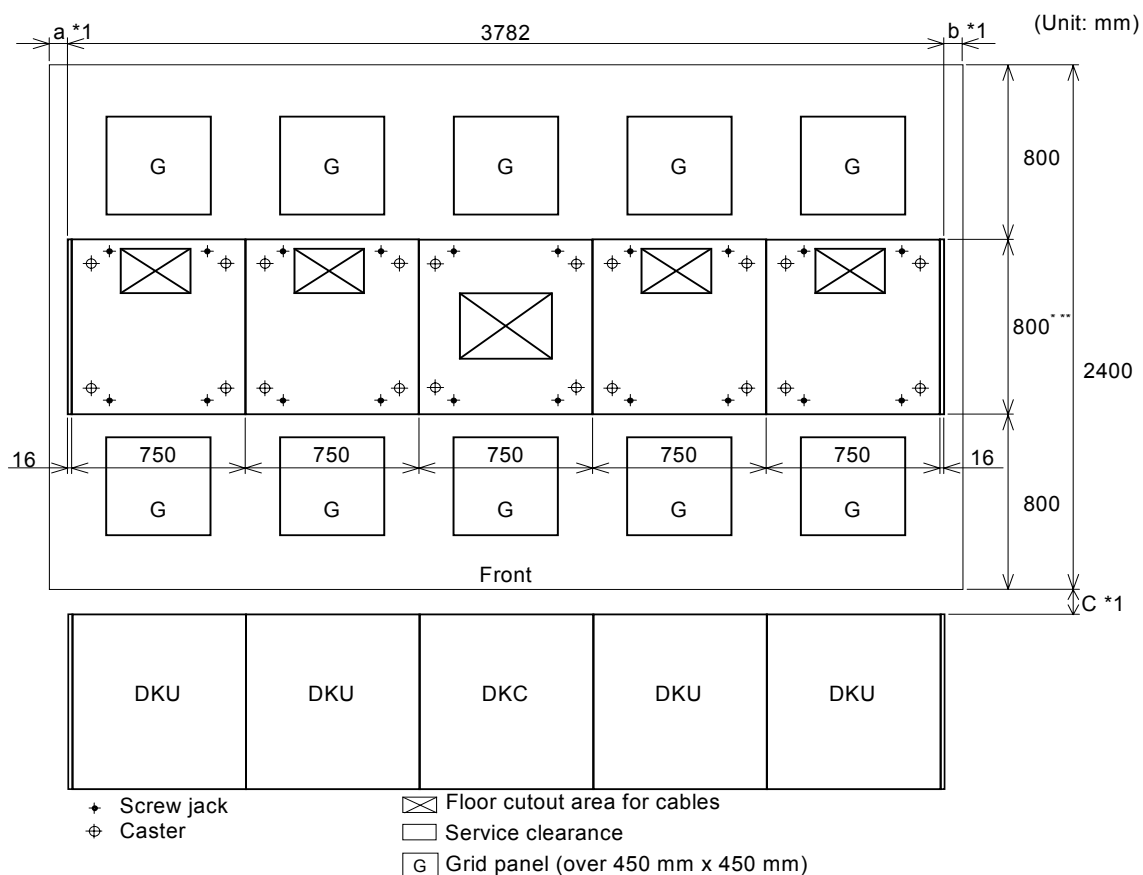


* The thickness of the door is different in the FRONT (35 mm) than in the REAR (25 mm).

** Overhang of the MOSAIC (LOUVER) of the FRONT DOOR (7 mm) is not included.

Figure 5.8 Service Clearance and Floor Cutouts for 9980V Maximum Configuration

Table 5.4 Floor Load Rating and Required Clearances for 9980V Maximum Config.

Floor Load Rating kg/m ² (lb/ft ²)	Required Clearance (a+b)				
	Clearance (c) in meters (feet)				
	c = 0	c = 0.2 (0.66)	c = 0.4 (1.31)	c = 0.6 (1.97)	c = 1.0 (3.28)
500 (102.4)	1.9	1.2	0.8	0.3	0
450 (92.2)	2.7	2.0	1.4	1.0	0.2
400 (81.9)	3.9	3.1	2.4	1.8	1.0
350 (71.7)	5.6	4.6	3.7	3.1	2.0
300 (61.4)	8.3	6.9	5.9	5.0	3.7

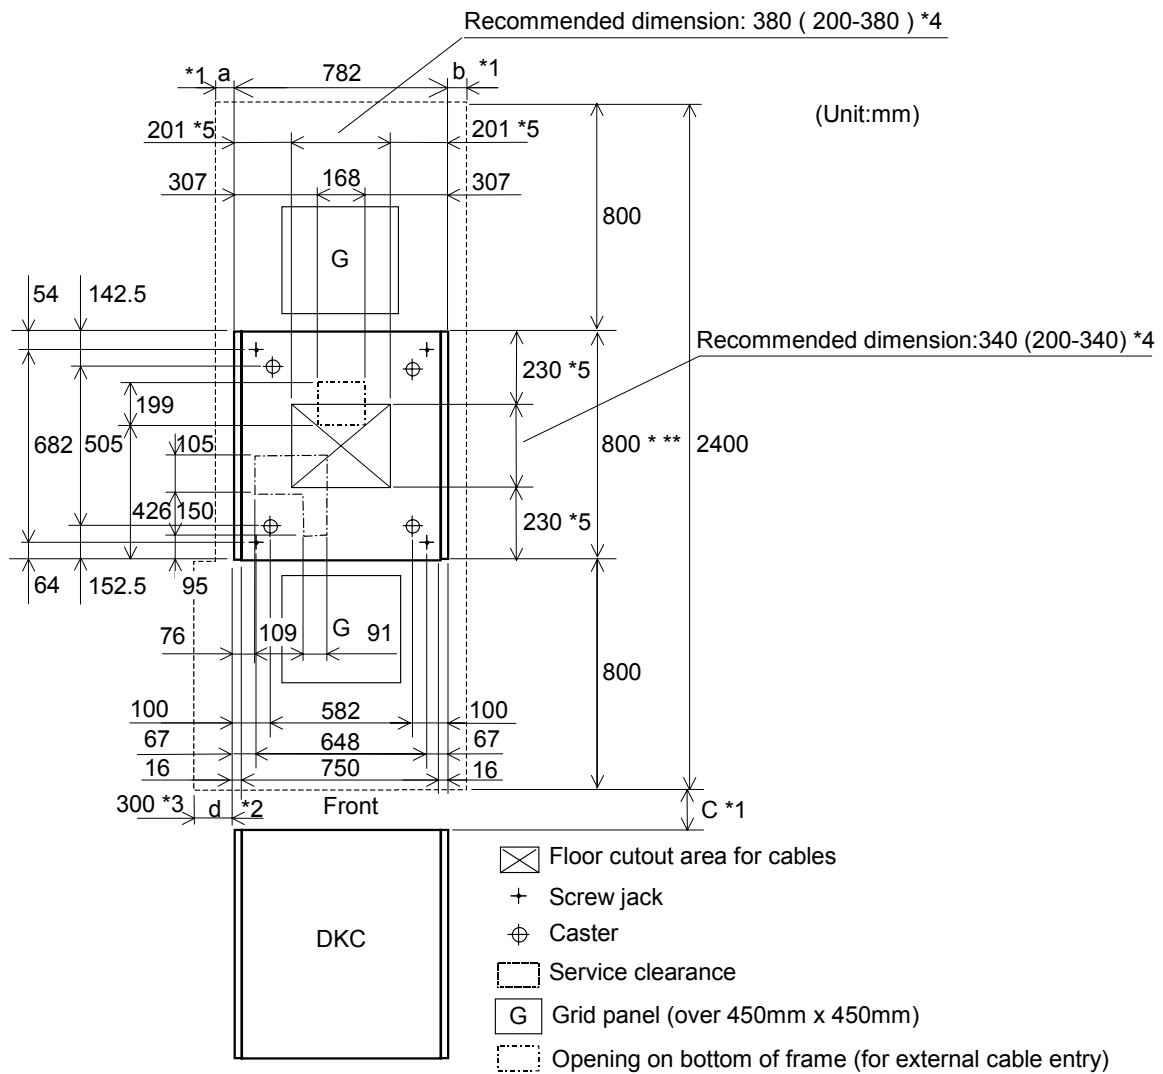

* The thickness of the door is different in the FRONT (35 mm) than in the REAR (25 mm).

** Overhang of the MOSAIC (LOUVER) of the FRONT DOOR (7 mm) is not included.

Figure 5.9 Service Clearance and Floor Cutout for the 9970V – All Configurations

Table 5.5 Floor Load Rating and Required Clearances for 9970V Subsystem

Floor Load Rating kg/m ² (lb/ft ²)	Required Clearance (a+b)				
	Clearance (c) in meters (feet)				
	c = 0	c = 0.2 (0.66)	c = 0.4 (1.31)	c = 0.6 (1.97)	c = 1.0 (3.28)
500 (102.4)	0.6 m (2 ft)	0.3 m (1 ft)	0.1 m (.3 ft)	0	0
450 (92.2)	0.8 m (2.6 ft)	0.5 m (1.6 ft)	0.3 m (1 ft)	0.1 m (.3 ft)	0
400 (81.9)	1.0 m (3.3 ft)	0.7 m (2.3 ft)	0.5 m (1.6 ft)	0.3 m (1 ft)	0
350 (71.7)	1.4 m (4.6 ft)	1.0 m (3.3 ft)	0.7 m (2.3 ft)	0.5 m (1.6 ft)	0.2 m (0.66 ft)
300 (61.4)	2.0 m (6.6 ft)	1.5 m (4.9 ft)	1.1 m (3.6)	0.9 m (3 ft)	0.5 m (1.6 ft)

5.4 9980V-9900 Intermix Configurations

The two types of 9980V-9900 intermix configurations are:

- **DKC swap.** The disk controller of an existing 9900 subsystem (DKC410I) is swapped for a 9980V disk controller (DKC460I) (see Figure 5.10). The 9980V and 9900 have different frame dimensions and breaker capacities, as shown in Table 5.6.

Important: Due to the different dimensions and breaker capacities, please pay special attention to physical installation planning, and make sure that the existing power facility has enough capacity to introduce the 9980V disk controller.

- **DKU addition.** One or more existing 9900 disk array units (DKU405I) are added to an existing 9980V subsystem (see Figure 5.11). In this case, the DKU405I unit(s) must be installed on the left side of the 9980V disk controller.

Note: The DKC-F460I-U405R and/or DKC-F460I-U405L options are required for 9980V-9900 intermix configurations.


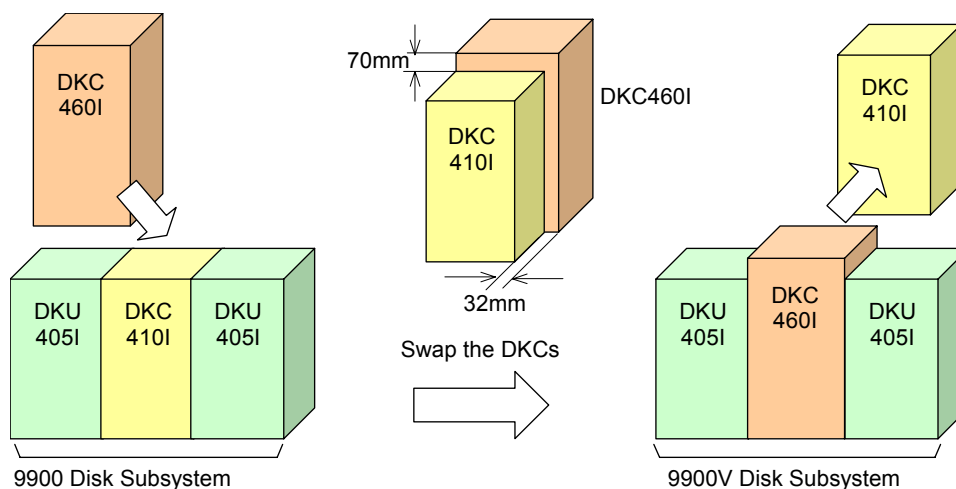


Figure 5.10 9900-to-9980V DKC Swap

Table 5.6 9980V and 9900 Frame Dimensions and Breaker Capacities

Item	Frame	9980V	9900
Dimensions W / D / H (mm)	DKC	782 / 800 / 1,860	750 / 800 / 1,790
	DKU	750 / 800 / 1,860	600 / 800 / 1,790
Breaker Capacity	DKC	3-Phase: 60A* / 30A Single-Phase: 40A	3-Phase: 30A* Single-Phase: 20A
	DKU	3-Phase: 60A / 30A Single-Phase: 50A	3-Phase: 30A* Single-Phase: 20A

* The 3-phase AC power model receives power from the AC power supplier in the R1 DKU. When the 9900 DKC (DKC410I) is swapped for a 9980V DKC (DKC460I), the DKC460I must be the 3-phase/30A AC input model, or the DKC460I and DKU405I must both be single-phase AC input model. The DKC460I 3-phase/60A model cannot be used, because the R1 DKU (DKU405I) does not supply 60A power.

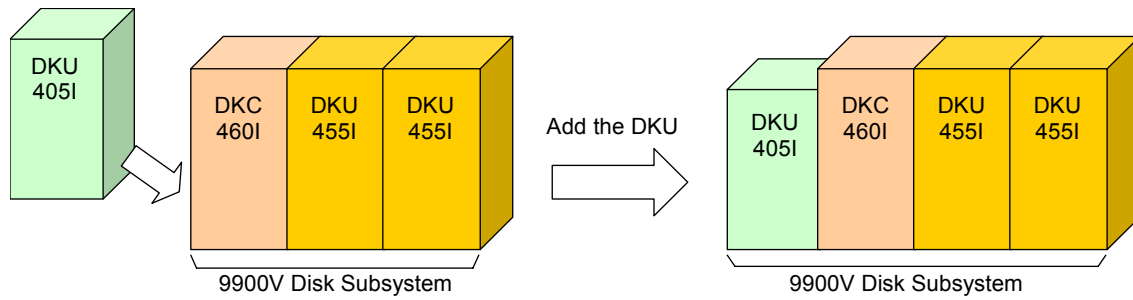

5.4.1 Service Clearance, Floor Cutout, and Floor Load Rating for 9980V-9900 Intermix

Figure 5.12 shows the service clearance and floor cutouts for 9900 (DKU405I) connection to the 9980V DKC. Figure 5.13 shows the service clearance and floor cutouts for the 9980V-9900 intermix configuration. Table 5.7 shows the floor load rating requirements for 9980V-9900.


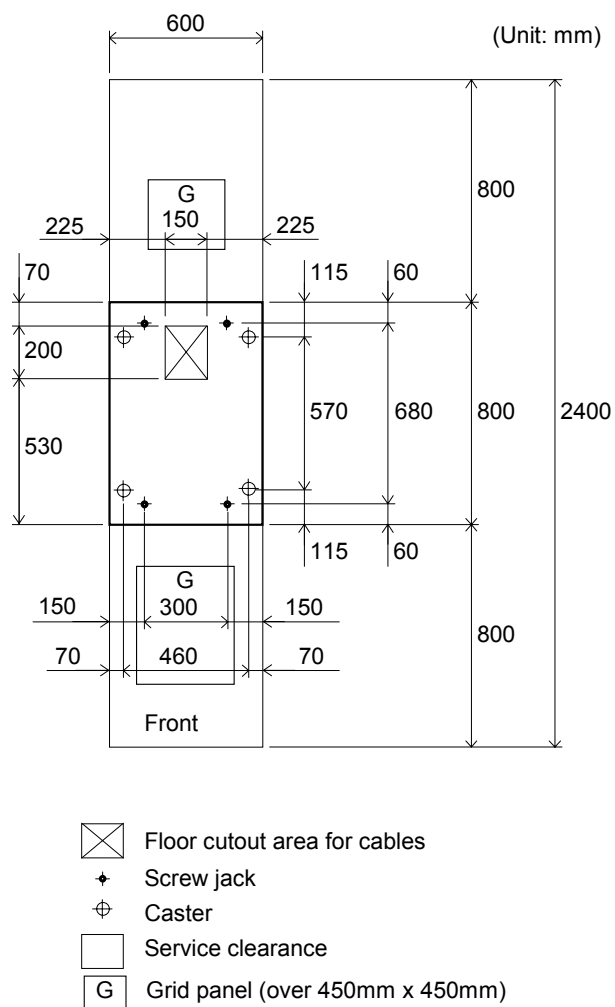


Figure 5.12 Service Clearance and Floor Cutout for 9900 (DKU405I) Connection

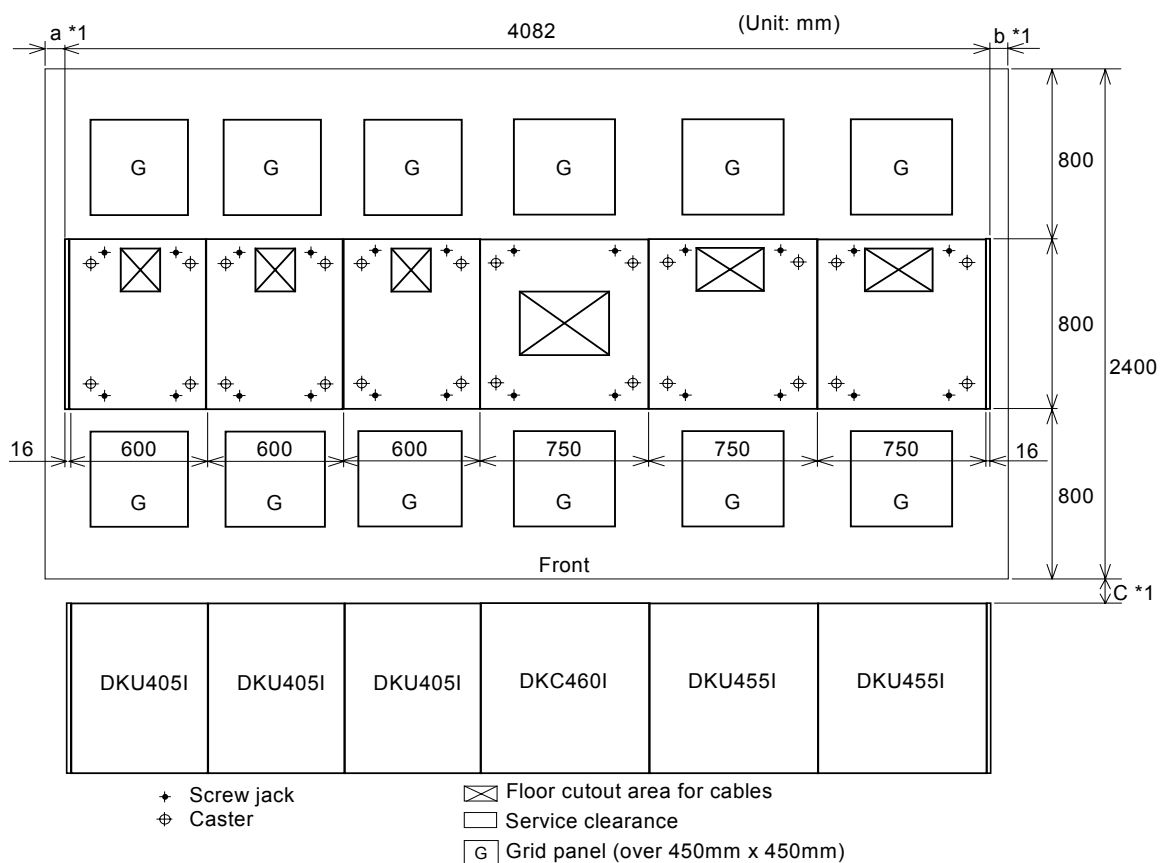

*1 Clearance (a+b) depends on the floor load rating and clearance c.

Figure 5.13 Service Clearance and Floor Cutout for 9980V-9900 Intermix Configuration

Table 5.7 Floor Load Rating, Required Clearances for 9980V-9900 Intermix Config.

Floor Load Rating kg/m ² (lb/ft ²)	Required Clearance (a+b)				
	Clearance (c) in meters (feet)				
	c = 0	c = 0.2 (0.66)	c = 0.4 (1.31)	c = 0.6 (1.97)	c = 1.0 (3.28)
500 (102.4)	1.7 m (5.6 ft)	1.0 m (3.3 ft)	0.5 m (1.6 ft)	0.1 (0.3 ft)	0
450 (92.2)	2.5 m (8.2 ft)	1.8 m (5.9 ft)	1.2 m (3.9 ft)	0.7 m (2.3 ft)	0
400 (81.9)	3.7 m (12.1 ft)	2.9 m (9.5 ft)	2.2 m (7.2 ft)	1.6 m (5.3 ft)	0.7 (2.3 ft)
350 (71.7)	5.5 m (18.1 ft)	4.4 m (14.4 ft)	3.6 m (11.8 ft)	2.9 m (9.5 ft)	1.8 m (5.9 ft)
300 (61.4)	8.2 m (26.9 ft)	6.8 m (22.3 ft)	5.7 m (18.7 ft)	4.8 m (15.7 ft)	3.5 m (11.5 ft)

5.4.2 Restrictions and Notes for 9980V-9900 Intermix

- The DKUs on each side of the DKC460I must be the same type (see Figure 5.14).
- The maximum number of DKU455I units on each side of a DKC460I is 2. The maximum number of DKU405I units on each side of a DKC460I is 3 (see Figure 5.14).
- The DKU405I unit cannot connect directly to a DKU455I unit (see Figure 5.15).
- When connecting existing DKU405I unit(s) with a DKC460I, do not change the location of the DKU405I unit(s) (see Figure 5.16).
- Three-phase and single-phase frames cannot be mixed in one disk subsystem.
- The RAID5 (7D+1P) and RAID1 (4D+4D) configurations are not supported for HDDs in a DKU405I unit controlled by a DKC460I.
- The spare disk in DKU405I cannot be used as an object for DKU455I. Similarly, the spare disk in DKU455I cannot be used as an object for DKU405I. Install the spare disk in the object for DKU405I, and DKU455I, respectively.
- The shared memory and cache memory capacity required when DKU405I units are connected to the DKC460I is the same as when DKU455I units are connected.

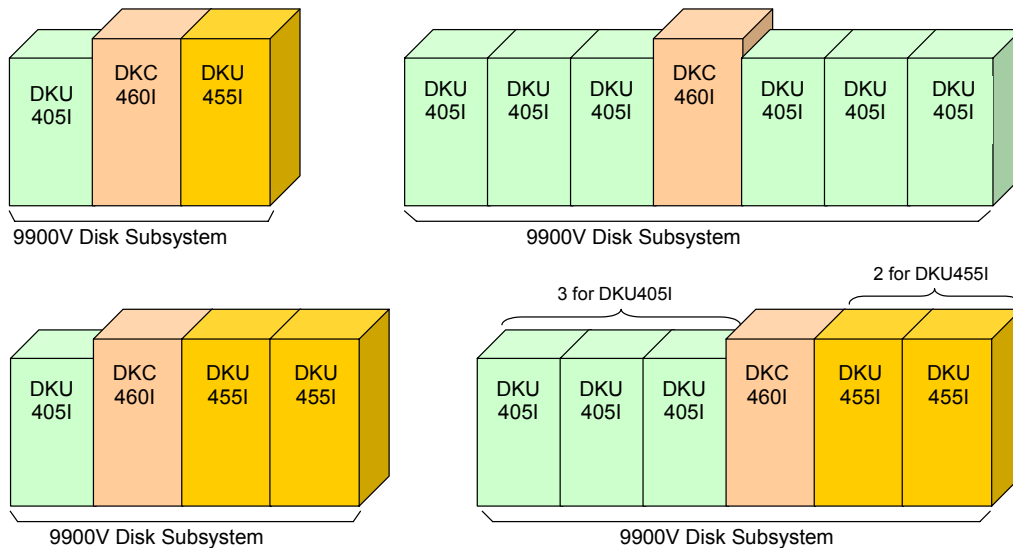


Figure 5.14 Acceptable 9900-9980V Intermix Configurations

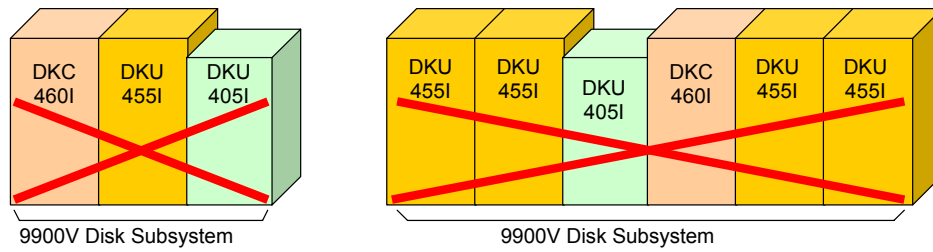


Figure 5.15 Prohibited 9900-9980V Intermix Configurations

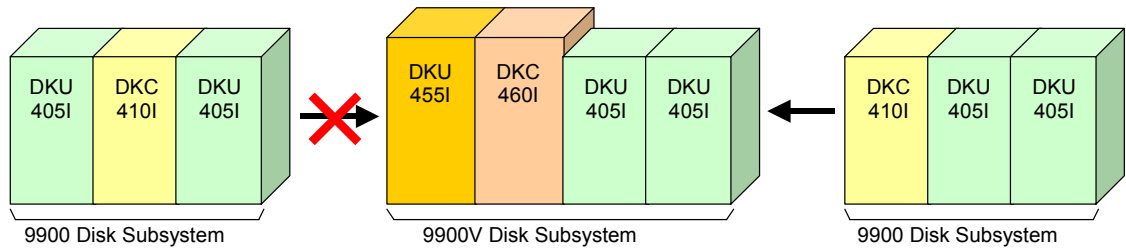


Figure 5.16 Same Location (R1, R2, L1, L2) Required for 9900 DKUs

5.5 Electrical Specifications and Requirements for Three-Phase Subsystems

The Lightning 9980V and 9970V subsystems support three-phase and single-phase power. This section applies to three-phase subsystems. For electrical specifications and requirements for single-phase subsystems, please see section 5.6.

Note: For information on three-phase UPS configurations for the 9900V, please contact your Hitachi Data Systems account team.

The section covers the following topics:

- Power plugs for three-phase (see section 5.5.1)
- Features for three-phase (see section 5.5.2)
- AC box intermix (three-phase) (see section 5.5.3)
- Current rating, power plugs, receptacles, and connectors for three-phase (60 Hz only) (see section 5.5.4)
- Input voltage tolerances for three-phase (see section 5.5.5)
- Cable dimensions for 50-Hz three-phase subsystems (see section 5.5.6)

5.5.1 Power Plugs for Three-Phase

- Figure 5.17 illustrates the power plugs for a three-phase 9980V disk array unit (Europe).
Figure 5.18 illustrates the power plugs for a three-phase 9980V disk array unit (USA).
- Figure 5.19 illustrates the power plugs for a three-phase 9970V subsystem (Europe).
Figure 5.20 illustrates the power plugs for a three-phase 9970V subsystem (USA).

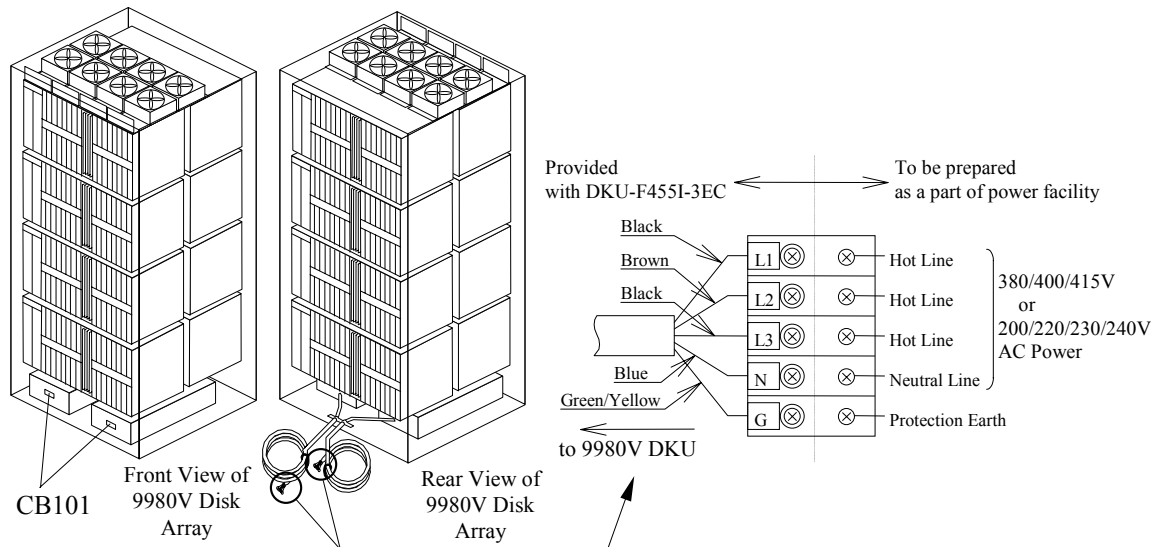


Figure 5.17 Power Plugs for Three-Phase 9980V Disk Array Unit (Europe)

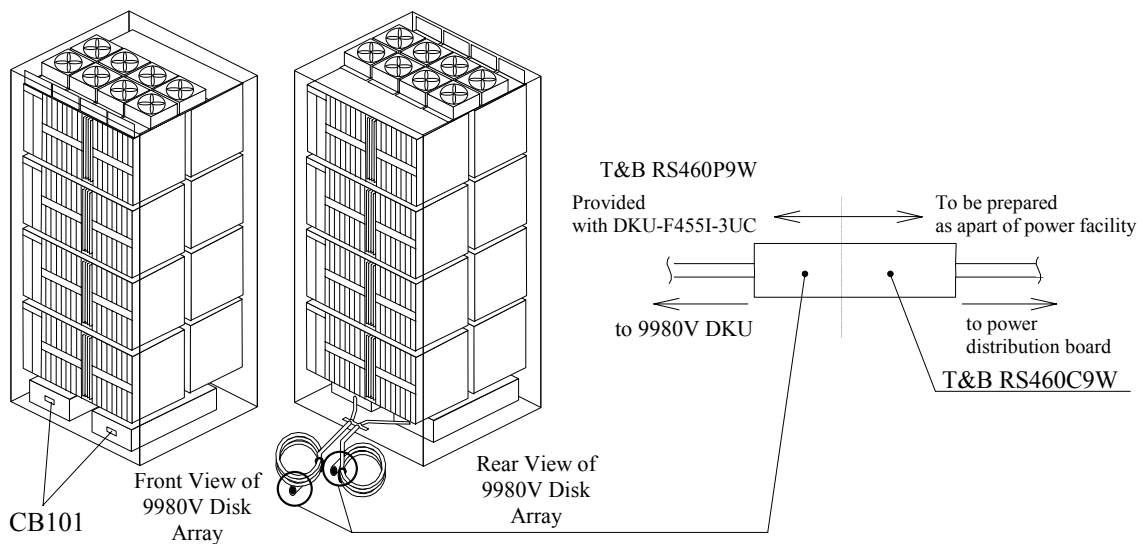


Figure 5.18 Power Plugs for Three-Phase 9980V Disk Array Unit (USA)

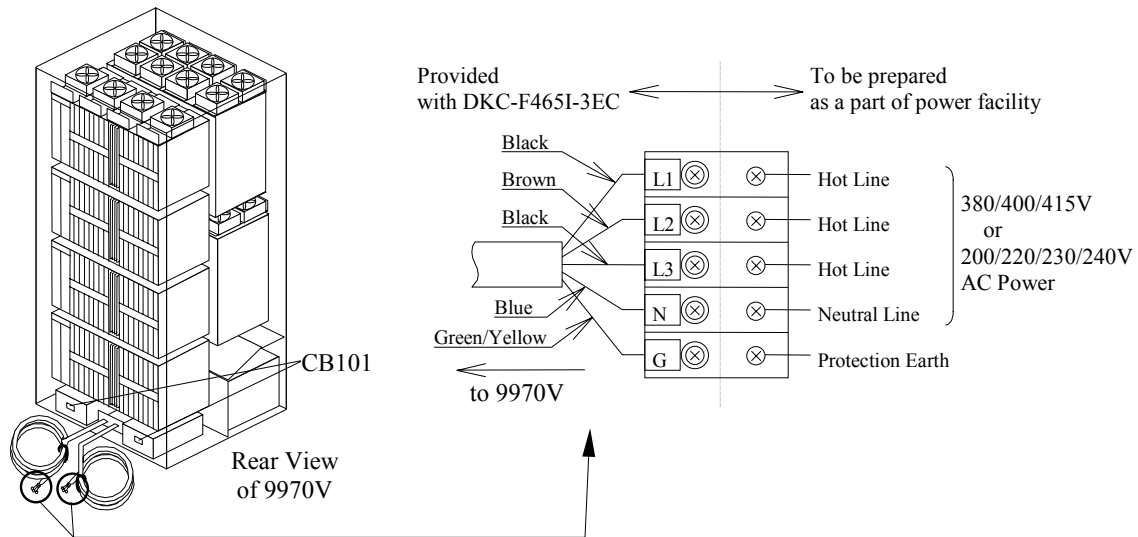


Figure 5.19 Power Plugs for Three-Phase 9970V Subsystem (Europe)

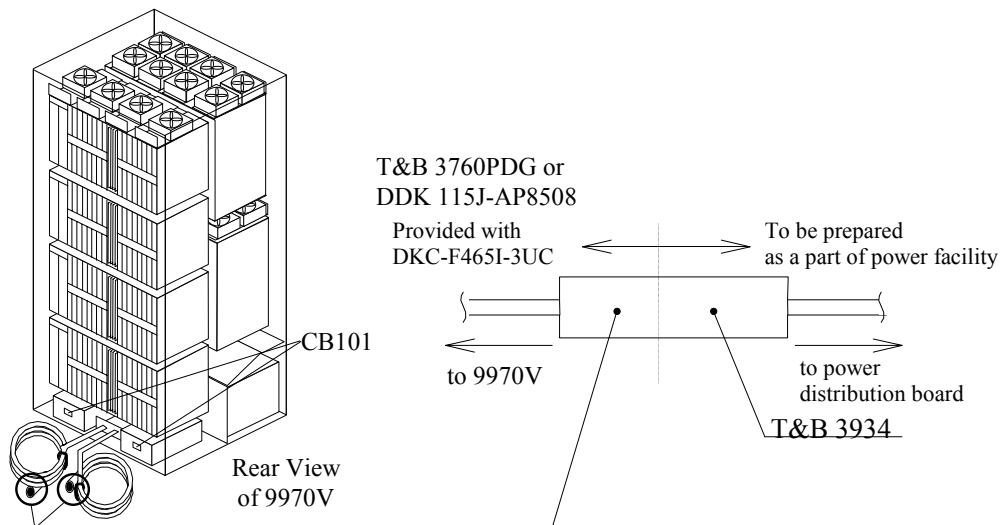


Figure 5.20 Power Plugs for Three-Phase 9970V Subsystem (USA)

5.5.2 Features for Three-Phase

Table 5.8 lists the features for three-phase 9980V and 9970V subsystems.

Note: For information on three-phase AC box intermix, see section 5.5.3.

Table 5.8 9980V and 9970V Three-Phase Features

Model	Frame	Feature Number	Description	Comments
9980V	Controller	DKC-F460I-3PS	Breaker Box Kit for 3-Phase/60A	For three-phase/60A power, the controller frame receives its input power from the first disk array frame. All controller single-phase features must be removed to allow three-phase power for the controller.
	Disk Array	DKU-F455I-3PS	AC Box Kit for 3-Phase/60A	Consists of two AC boxes.
	Disk Array	DKU-F455I-3EC	Power Cable Kit for 3-Phase/60A	50 Hz for Europe
	Disk Array	DKU-F455I-3UC	Power Cable Kit for 3-Phase/60A	60 Hz for USA
	Controller	DKC-F460I-3PSD	Breaker Box Kit for 3-Phase/30A	For three-phase/30A power, the controller frame receives its input power from the power distributor. Therefore it is necessary to attach one power cable kit, AC box kit, and two 3-phase/30A plugs.
	Disk Array	DKU-F455I-3PSD	AC Box Kit for 3-Phase/30A	Necessary when DKU455I is connected to 3-phase/30A power source.
	Disk Array	DKU-F455I-3ECD	Power Cable Kit for 3-Phase/30A	50 Hz for Europe, consists of two cables of 3-phase/30A
	Disk Array	DKU-F455I-3UCD	Power Cable Kit for 3-Phase/30A	60 Hz for USA, consists of two cables of 3-phase/30A
9970V	The 9970V consists of a single frame.	DKC-F465I-3PS	AC Box Kit for 3-Phase	Consists of two AC boxes.
		DKU-F465I-3EC	Power Cable Kit for 3-Phase	50 Hz for Europe
		DKU-F465I-3UC	Power Cable Kit for 3-Phase	60 Hz for USA

5.5.3 AC Box Intermix (Three-Phase)

WARNING: AC box intermix is supported **with restrictions**. Microcode modified to support the power intermix (21-07-27-00/00 and later) must be installed. The Hitachi Data Systems representative must refer to HDS alert: 9980V#34A XP1024#33A 9970V#34A XP128#33A

The 9900V subsystem provides two models for three-phase AC power, but these models do not equip the AC power cable and AC power supplier. Therefore, you have to choose AC box kits and AC power cables according to the electric power equipment of the location in which the subsystem is installed.

In addition, if AC input is the same phase, AC box option from which breaker specification differs can be intermixed within a subsystem as follows:

- **Three-phase / 60A.** In this case, DKC460I-5 receives power from the AC power supplier in the R1 DKU. Therefore it is necessary to attach the Breaker Box Kit.
 - DKC-F460I-3PS Breaker Box Kit for 3 phase

For the disk array frame (DKU455I-18), it is necessary to attach one of Power Cable Kits and AC Box Kit and two plugs of three-phase/60A.

 - DKU-F455I-3EC Power Cable Kit for 3 Phase/60A (50Hz for Europe), or
DKU-F455I-3UC Power Cable Kit for 3 Phase/60A (60Hz for USA)
 - DKU-F455I-3PS AC Box Kit for 3 Phase/60A
- **Three-phase / 30A.** In this case, DKC460I-5 receives power from the power distributor. Therefore it is necessary to attach one of Power Cable Kits and AC Box Kit and two plugs of three-phase/30A.
 - DKC-F460I-3ECD Power Cable Kit for 3 Phase/30A (50 Hz for Europe), or
DKC-F460I-3UCD Power Cable Kit for 3 Phase/30A (60 Hz for USA)
 - DKC-F460I-3PSD AC Box Kit for 3 Phase/30A

For the disk array frame (DKU455I-18), it is necessary to attach one of Power Cable Kits and AC Box Kit and two plugs of three-phase/60A.

 - DKU-F460I-3ECD Power Cable Kit for 3 Phase/30A (50Hz for Europe), or
DKU-F460I-3UCD Power Cable Kit for 3 Phase/30A (60Hz for USA)
 - DKU-F455I-3PSD AC Box Kit for 3 Phase/30A

5.5.4 Current Rating, Power Plugs, Receptacles, and Connectors for Three-Phase (60 Hz only)

Table 5.9 lists the current rating and AC power cable plug, receptacle, and connector requirements (part number or equivalent) for three-phase 60-Hz subsystems. In a three-phase 9980V subsystem, the controller frame (DKC) receives its AC input power from the first disk array frame (DKU) via internal cabling, so the subsystem will not require any customer outlets for the controller frame. The user must supply all power receptacles and connectors for 60-Hz subsystems. Thomas & Betts (T&B) (formerly R&S) type connectors (or Hubbell or Leviton) are recommended for 60-Hz subsystems.

Note: Each 9980V disk array frame requires two power connections for power redundancy. It is strongly recommended that the second power source be supplied from a separate power boundary to eliminate source power as a possible single (nonredundant) point of failure.

Note: If you are planning to provide power using 3/4-inch diameter flexible conduit, consider using box-type receptacle connectors. In some cases, inline connectors may be used with 3/4-inch flexible conduit if the appropriate adapter is available from the connector vendor.

Table 5.9 Current Rating, Power Plug, Receptacle, and Connector: 3-Phase 9900V

Item	9970V	9980V DKC	9980V DKU
Hitachi Base Unit	DKC465I-5	DKC460I-5	DKU455I-18
Circuit Current Rating (amps)	30A	(from DKU)	60A 30A
Hitachi Feature(s) Required for 60A	N/A	DKC-F460I-3PS	DKU-F455I-3PS DKU-F455I-3UC
Hitachi Feature(s) Required for 30A	DKC-F465I-3PS DKC-F465I-3UC	DKC-F460I-3PSD DKC-F460I-3UCD	DKU-F455I-3PSD DKC-F460I-3UCD
60-Hz Power Plug (or equiv.) Included with the product.	T&B 3760PDG, or DDK 115J-AP8508	For 60A: N/A For 30A: T&B 3760PDG, or DDK 115J-AP8508	For 60A: T&B RS460P9W For 30A: T&B 3760PDG, or DDK 115J-AP8508
Box-Type Receptacle (or equiv.) (not provided)	T&B 3754 (2 per single frame)	For 60A: N/A For 30A: T&B 3754 (2 per DKC)	For 60A: T&B RS460P9W (2 per DKU) (or Hubbell HBL460R9W, or Leviton 460R9W) For 30A: T&B 3754 (2 per DKU)
Inline Connector (or equiv.) (not provided)	T&B 3934 (2 per single frame)	For 60A: N/A For 30A: T&B 3934 (2 per DKC)	For 60A: T&B RS460C9W (2 per DKU) (or Hubbell HBL460C9W, or Leviton 460C9W) For 30A: T&B 3934 (2 per DKU)
Back Box for Receptacle Note: Use T&B back box with T&B receptacle, Hubbell back box with Hubbell receptacle, etc.	Included	For 60A: N/A For 30A: included	For 60A: T&B JB6-B125 plus T&B AA6L 20-degree-angle adapter (or Hubbell BB601W, Leviton BX60-V) For 30A: included

***Note:** For information on power connection specifications for locations outside the U.S., contact the Hitachi Data Systems Support Center for the specific country.

5.5.5 Input Voltage Tolerances for Three-Phase

Table 5.10 lists the input voltage tolerances for the three-phase 9980V. Transient voltage conditions must not exceed +15-18% of nominal and must return to a steady-state tolerance within of +6 to -8% of the normal related voltage in 0.5 seconds or less. Line-to-line imbalance voltage must not exceed 2.5%. Nonoperating harmonic contents must not exceed 5%.

Table 5.10 Input Voltage Specifications for Three-Phase AC Input

Frequency	Input Voltages (AC)	Wiring	Tolerance (%)
60 Hz $\pm$ 0.5 Hz	200V, 208V, or 230V	three-phase, three wire + ground	+6% / -8%
50 Hz $\pm$ 0.5 Hz	200V, 220V, 230V, or 240V	three-phase, three wire + ground	+6% / -8%
50 Hz $\pm$ 0.5 Hz	380V, 400V, or 415V	three-phase, four wire + ground	+6% / -8%

Note: For 9980V DKU, distribution board with circuit breaker or equivalent is rated 60 or 30 amps. For 9970V DKC, distribution board with circuit breaker or equivalent is rated 30 amps. This unit does not apply to IT power system.

5.5.6 Cable Dimensions for 50-Hz Three-Phase Subsystems

Table 5.11 and Figure 5.21 show the data required for 50-Hz three-phase cable installations.

Table 5.11 Cable and Terminal Dimensions for 50-Hz Three-Phase Subsystems

Model	Power Cable			Terminal		Screw Size
	Outer Sheath Overall Diameter A	Insulator Outer Diameter B	Electric Wire Cross-Section Area C	"Internal Diameter" D	"External Diameter" E	
DKU-F455I-3EC	24.0-30.5 mm	6.6 mm	10.0 mm ²	6.4 mm	12.0 mm	M6
DKC-F465I-3EC	18.0-24.5 mm	5.2 mm	6.0 mm ²	6.4 mm	12.0 mm	M6
DKC-F460I-3ECD	18.0-24.5mm	5.2 mm	6.0 mm ²	6.4 mm	12.0 mm	M6

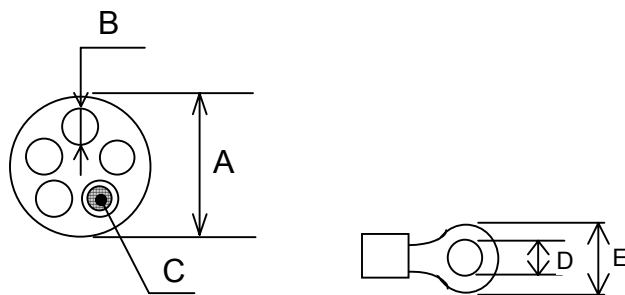


Figure 5.21 Cable and Terminal Dimensions for 50-Hz Three-Phase Subsystems

5.6 Electrical Specifications and Requirements for Single-Phase Subsystems

The Lightning 9980V and 9970V subsystems support three-phase and single-phase power. This section applies to single-phase subsystems. For electrical specifications and requirements for three-phase subsystems, please see section 5.5.

Note: For information on single-phase UPS configurations for the 9900V, please contact your Hitachi Data Systems account team.

The section covers the following topics:

- Power plugs for single-phase (see section 5.6.1)
- Features for single-phase (see section 5.6.2)
- AC box intermix (single-phase) (see section 5.6.3)
- Current rating, power plugs, receptacles, and connectors for single-phase (60 Hz only) (see section 5.6.4)
- Input voltage tolerances for single-phase (see section 5.6.5)
- Cable dimensions for 50-Hz single-phase subsystems (see section 5.6.6)

5.6.1 Power Plugs for Single-Phase

- Figure 5.22 illustrates the power plugs for a single-phase 9980V controller (Europe).
Figure 5.23 illustrates the power plugs for a single-phase 9980V controller (USA).
- Figure 5.24 illustrates the power plugs for a single-phase 9980V disk array unit (Europe).
Figure 5.25 illustrates the power plugs for a single-phase 9980V disk array unit (USA).
- Figure 5.26 illustrates the power plugs for a single-phase 9970V subsystem (Europe).
Figure 5.27 illustrates the power plugs for a single-phase 9970V subsystem (USA).

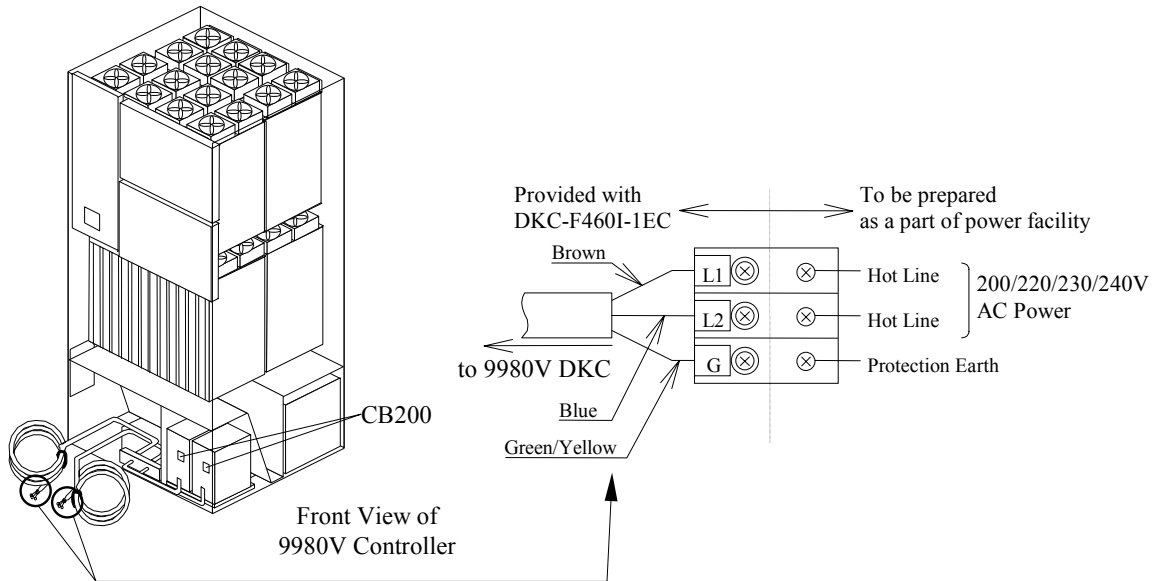


Figure 5.22 Power Plugs for Single-Phase 9980V Controller (Europe)

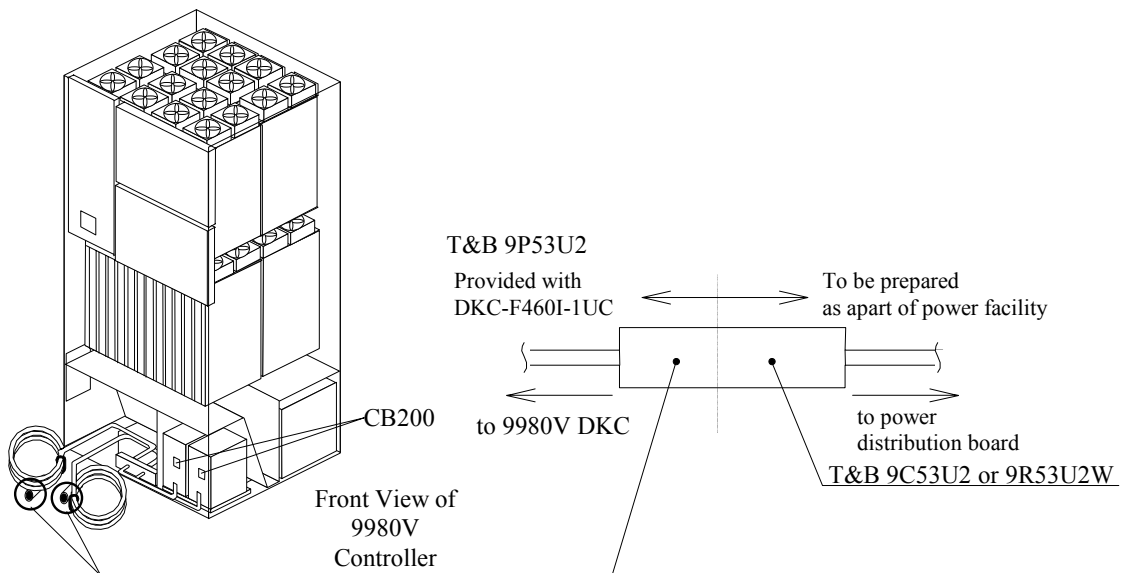


Figure 5.23 Power Plugs for Single-Phase 9980V Controller (USA)

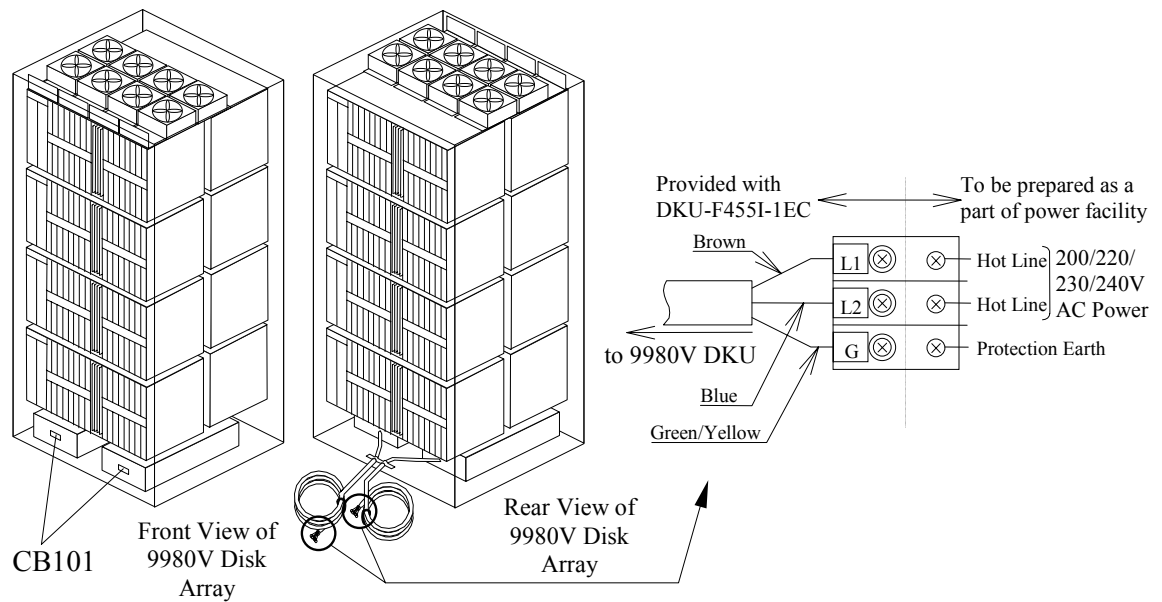


Figure 5.24 Power Plugs for a Single-Phase 9980V Disk Array Unit (Europe)

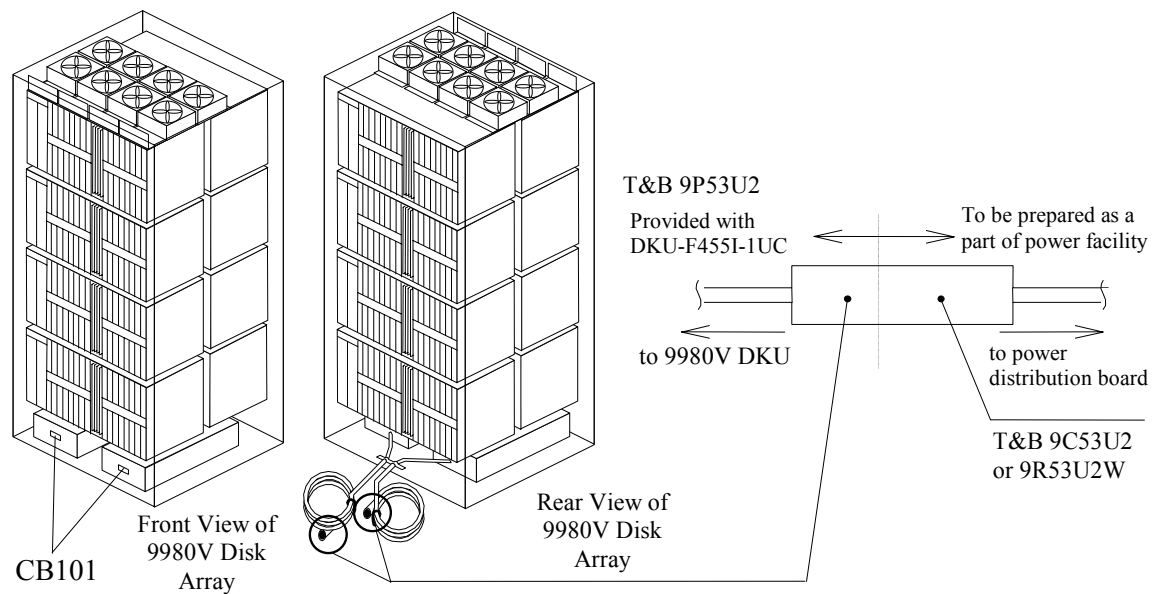


Figure 5.25 Power Plugs for a Single-Phase 9980V Disk Array Unit (USA)

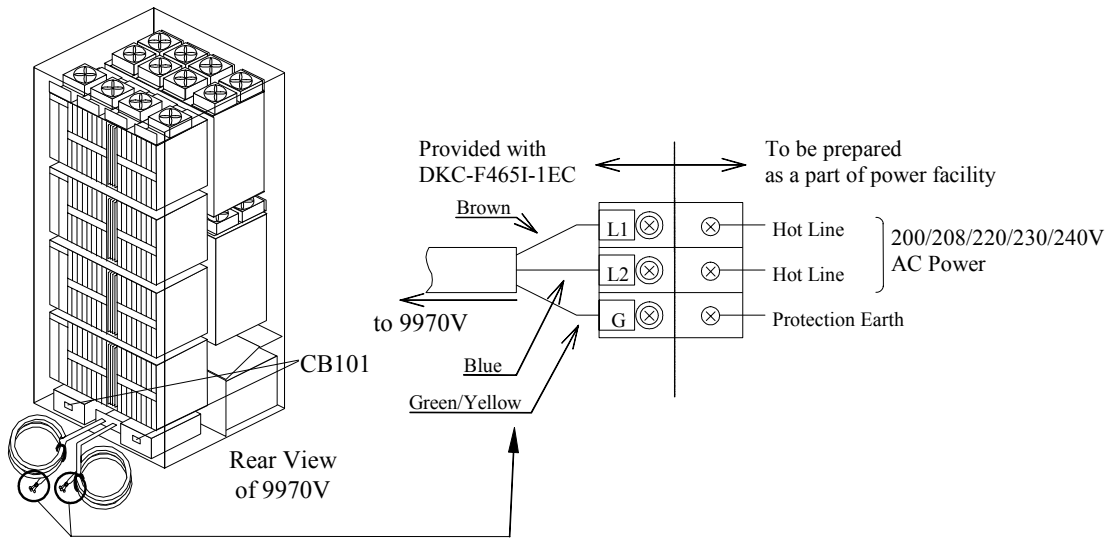


Figure 5.26 Power Plugs for a Single-Phase 9970V Subsystem (Europe)

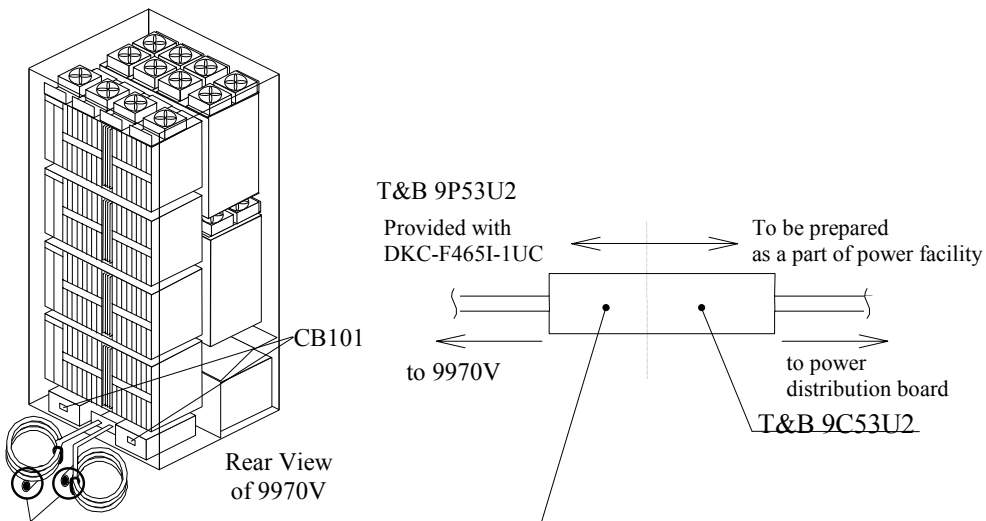


Figure 5.27 Power Plugs for a Single-Phase 9970V Subsystem (USA)

5.6.2 Features for Single-Phase

Note: For information on single-phase AC box intermix, see section 5.6.3.

Table 5.12 lists the features for single-phase 9980V and 9970V subsystems.

Note: For information on single-phase AC box intermix, see section 5.6.3.

Table 5.12 9900V Single-Phase Features

Model	Frame	Feature Number	Description
9980V	Controller	DKC-F460I-PS	AC Box Kit for Single Phase/40A
		DKC-F460I-EC	Power Cable Kit for Single Phase/50A, 50 Hz for Europe
		DKC-F460I-UC	Power Cable Kit for Single Phase/50A, 60 Hz for USA
	Disk Array	DKU-F455I-1PS	AC Box Kit for Single Phase/50A
		DKU-F455I-1EC	Power Cable Kit for Single Phase/50A, 50 Hz for Europe
		DKU-F455I-1UC	Power Cable Kit for Single Phase/50A, 60 Hz for USA
9970V	The 9970V consists of a single frame.	DKC-F465I-1EC	Power Cable Kit for Single Phase, 50 Hz for Europe
		DKC-F465I-1UC	Power Cable Kit for Single Phase, 60 Hz for USA

5.6.3 AC Box Intermix (Single-Phase)

WARNING: AC box intermix is supported **with restrictions**. Microcode modified to support the power intermix (21-07-27-00/00 and later) must be installed. The Hitachi Data Systems representative must refer to HDS alert: 9980V#34A XP1024#33A 9970V#34A XP128#33A

The 9900V subsystem provides one model for single-phase AC power, but this model does not equip the AC power cable and AC power supplier. Therefore, you have to choose AC box kits and AC power cables according to the electric power equipment of the location in which the subsystem is installed.

In addition, if AC input is the same phase, AC box option from which breaker specification differs can be intermixed within a subsystem as follows:

- Single phase / 40A

In this case, DKC460I received power from the power distributor. Therefore it is necessary to attach one of Power Cable Kits and AC Box Kit and two plugs of single phase/40A.

- DKC-F460I-1EC Power Cable Kit for Single Phase/50A (50Hz for Europe), or
DKC-F460I-1UC Power Cable Kit for Single Phase/50A (60Hz for USA)
- DKC-F460I-1PS AC Box Kit for Single Phase/40A

For the disk array frame (DKU455I-18), it is necessary to attach one of Power Cable Kits and AC Box Kit and two plugs of single-phase/50A.

- DKU-F455I-1EC Power Cable Kit for Single Phase/50A (50Hz for Europe), or
DKU-F455I-1UC Power Cable Kit for Single Phase/50A (60Hz for USA)
- DKU-F455I-1PS AC Box Kit for Single Phase/50A

5.6.4 Current Rating, Power Plugs, Receptacles, and Connectors for Single-Phase (60 Hz only)

Table 5.13 lists the current rating and power cable plug, receptacle, and connector requirements (part number or equivalent) for single-phase 60-Hz subsystems. Each disk array frame (DKU) and controller frame (DKC) has two input power cables with T&B FS 3720 plugs. The user must supply the outlets for the plugs.

Note: Each 9980V disk array frame requires two power connections for power redundancy. It is strongly recommended that the second power source be supplied from a separate power boundary to eliminate source power as a possible single (nonredundant) point of failure.

Note: If you are planning to provide power using 3/4-inch diameter flexible conduit, consider using box-type receptacle connectors. In some cases, inline connectors may be used with 3/4-inch flexible conduit if the appropriate adapter is available from the connector vendor.

Table 5.13 Current Rating, Power Plug, Receptacle, and Connector: Single-Phase 9900V

Item	9970V	9980V DKC	9980V DKU
Hitachi Base Unit	DKC465I-5	DKC460I-5	DKU455I-18
Circuit Current Rating	50 A	40 A	50 A
Hitachi Feature(s) Required	DKC-F465I-1PS DKC-F465I-1UC	DKC-F460I-1PS DKC-F460I-1UC	DKU-F455I-1PS DKU-F455I-1UC
60-Hz Power Plug (or equiv.) Included with the product.	T&B 9P53U2	T&B 9P53U2	T&B 9P53U2
Box-Type Receptacle (or equiv.) (not provided)	T&B 9R53U2W (2 per single frame)	T&B 9R53U2W (2 per DKC)	T&B 9R53U2W (2 per DKU)
Back Box for Receptacle	T&B 3781A	T&B 3781A	T&B 3781A
Inline Connector (or equiv.) (not provided)	T&B 9C53U2 (2 per single frame)	T&B 9C53U2 (2 per DKC)	T&B 9C53U2 (2 per DKU)

5.6.5 Input Voltage Tolerances for Single-Phase

Table 5.14 lists the input voltage tolerances for the single-phase 9980V and 9970V subsystems. Transient voltage conditions must not exceed +15-18% of nominal and must return to a steady-state tolerance of between +6 and -8% of the normal related voltage in 0.5 seconds or less. Line-to-line imbalance voltage must not exceed 2.5%. Nonoperating harmonic contents must not exceed 5%.

Table 5.14 Input Voltage Specifications for Single-Phase Power

Frequency	Input Voltages (AC)	Wiring	Tolerance(%)
60 Hz ± 0.5 Hz	200V, 208V or 230V	Single-phase, two wire + ground	+6% or -8%
50 Hz ± 0.5 Hz	200V, 220V, 230V or 240V	Single-phase, two wire + ground	+6% or -8%

Note: For 9980V DKC, distribution board with circuit breaker or equivalent is rated 40 amps. For 9980V DKU, distribution board with circuit breaker or equivalent is rated 50 amps. For 9970V DKC, distribution board with circuit breaker or equivalent is rated 50 amps.

5.6.6 Cable Dimensions for 50-Hz Single-Phase Subsystems

Table 5.15 and Figure 5.28 show the data required for 50-Hz single-phase cable installations.

Table 5.15 Cable and Terminal Dimensions for 50-Hz Single-Phase Subsystems

Model	Power Cable			Terminal		Screw Size
	Outer Sheath Overall Diameter A	Insulator Outer Diameter B	Electric Wire Cross-Section Area C	"Internal Diameter" D	"External Diameter" E	
DKU-F455I-1EC	20.0-25.5 mm	6.6 mm	10.0 mm ²	6.4 mm	12.0 mm	M6
DKC-F460I-1EC	20.0-25.5 mm	6.6 mm	10.0 mm ²	6.4 mm	12.0 mm	M6
DKC-F465I-1EC	20.0-25.5 mm	6.6 mm	10.0 mm ²	6.4 mm	12.0 mm	M6

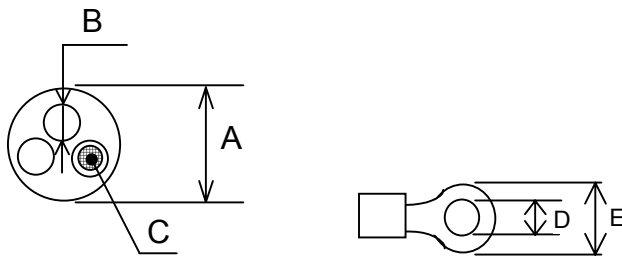


Figure 5.28 Cable and Terminal Dimensions for 50-Hz Single-Phase Subsystems

5.7 Cable Requirements

Table 5.16 lists the cables required for the 9900V control frame. These cables must be ordered separately, and the quantity depends on the type and number of channels and ports. ExSA™ (ESCON®), FICON™, and fibre-channel cables are available from Hitachi Data Systems.

Table 5.16 Cable Requirements

Cable	Function/Description
PCI cable	Connects 9900V to CPU power control interface.
FICON™ interface cables	Connects mainframe host systems, channel extenders, or FICON™ directors to 9900V ports. Single-mode cables: ■ Yellow in color with SC- and LC-type connectors. ■ 8-10 micron. Most common is 9-micron singlemode. Multimode cables: ■ Orange cables with SC- and LC-type connectors. ■ 50/125 micron and 62.5 micron multimode. Note: The mainframe fibre adapters require an LC-type connector. When one of these adapters is connected to a host or switch device with an SC-type connector, you must have a cable which has an LC-type connector plug at one end and an SC-type connector plug at the other end.
ExSA™ (ESCON®) interface cables	Connects mainframe host systems, channel extenders, or ESCON® directors to 9900V ports. Multimode cables: ■ Commonly called jumper cables. ■ Use LED light source. ■ Plug directly on CHA cards. ■ Orange cables with black duplex connectors. ■ Contain 2 fibers (transmit and receive). ■ 62.5 micron (up to 3 km per link). ■ 50 micron (up to 2 km per link). Mono/Single mode cables: ■ Required on XDF links between ESCDs or IBM® 9036 ESCON® remote control extenders. ■ Use laser light source. ■ Yellow in color with gray duplex connectors. ■ 8-10 micron. Most common is 9 micron.
Fibre cables	Connects open-system host to 9900V ports. Fibre cable types are 50 / 125 micron or 62.5 / 125 micron multimode. SC-type (standard) connector is required for 1-Gbps port. LC-type (little) connector is required for 2-Gbps port. Note: When a 2-Gbps port is connected to a host or switch device with an SC-type connector, you must have a cable which has an LC-type connector plug at one end and an SC-type connector plug at the other end.
Phone cable with RJ11 connector	Connects phone line to 9900V SVP for Hi-Track®.
10/100 BaseT (Cat 5) cable with RJ45 connector	Connects Remote Console PC to 9900V subsystem. Can also be used for connecting multiple 9900Vs together (daisy-chain).
10Base2 cable (RG58) with BNC connector	Connects Remote Console PC to 9900V subsystem, and allows connection to multiple 9900Vs (up to 8) without using a hub. Requires a transceiver.

5.7.1 Device Interface Cable

Figure 5.29 shows the relationship between the 9980V subsystem layout and the device interface cable options.

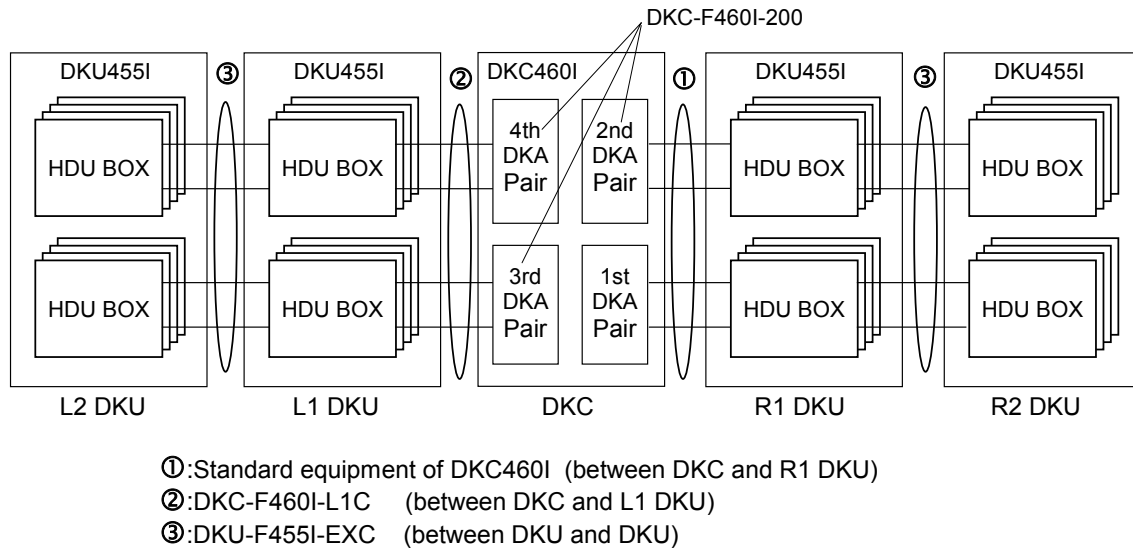


Figure 5.29 9980V Subsystem Layout and Device Interface Cable Options

5.8 Channel Specifications and Requirements

Table 5.17 lists the specifications for each 9900V open-systems channel option. Table 5.18 lists the specifications for each 9900V mainframe channel option. Each 9980V subsystem supports up to eight channel adapters and 64 interface ports. Further, the number of ports connected to the 9980V subsystem can be increased to 80 by adding the -8SE (serial CHA) to the DKA locations. Each 9970V subsystem supports up to six channel adapters and 48 interface ports. Each channel adapter feature consists of a pair of cards.

Note: The 8HSE channel option is applicable for Hitachi TrueCopy - S/390®.

Note: Additional power supply is needed on the 9980V if the total number of channel adapter options and disk adapter options is four or more.

DB Validator: The -8HSF, -16HSF, and -8HLF channel options are equipped with the DB Validator function (see section 3.7.6). When data for an Oracle® database is written from the host to the array, the array checks the integrity of the data. If an error is detected with this function, the array does not write the erroneous data to the data volume in order to keep data integrity of the database.

Table 5.17 Open-Systems Channel Specifications

Item	Fibre Short Wave		Fibre Long Wave
	2 Gbps 8-port	2 Gbps 16-port	2 Gbps 8-port
Option name *1	8HSE / 8HSF	16HSF	8HLE / 8HLF
Host interface	FCP	FCP	FCP
Data transfer rate (MB/s)	100 / 200	100 / 200	100 / 200
Number of options installed, 9980V	1 / 2 / 3 / 4	1 / 2 / 3 / 4	1 / 2 / 3 / 4
Number of options installed, 9970V	1 / 2 / 3 (1 / 2) *3	1 / 2 / 3 (1 / 2) *3	1 / 2 / 3 (1 / 2) *3
Number of PCBs installed, 9980V	2 / 4 / 6 / 8	2 / 4 / 6 / 8	2 / 4 / 6 / 8
Number of PCBs installed, 9970V	2 / 4 / 6 (2 / 4) *3	2 / 4 / 6 (2 / 4) *3	2 / 4 / 6 (2 / 4) *3
Number of ports / subsystem, 9980V	8 / 16 / 24 / 32	16 / 32 / 48 / 64	8 / 16 / 24 / 32
Number of ports / subsystem, 9970V	8 / 16 / 24 (8 / 16) *3	16 / 32 / 48 (16 / 32) *3	8 / 16 / 24 (8 / 16) *3
Maximum cable length	500 m / 300 m *2	500 m / 300 m *2	10 km

*1 The 9900V fibre-channel adapters require an LC-type connector for multimode/single-mode fiber-optical cable. When an FC adapter is connected to a host or switch device with an SC-type connector, you must have a cable which has an LC-type connector plug at one end and an SC-type connector plug at the other end.

*2 Indicates when 50 / 125-mm multimode fiber cable is used. If 62.5 / 125-mm multimode fiber cable is used, 500 m (100 MB/s) and 300 m (200 MB/s) are decreased to 300 m and 150 m respectively.

*3 Indicates when the 9970V subsystem is the full-specification model (2 DKA pairs).

Table 5.18 Mainframe Channel Specifications

Item	Mainframe Serial		Mainframe Fibre	
	Serial 8-port	Enhanced Serial 8-port	Short-Wave 8-Port	Long-Wave 8-Port
Option name	8S ^{*4}	8SE ^{*5}	8MS ^{*1}	8ML ^{*1}
Host interface	ESCON®	ESCON®	FICON™	FICON™
Data transfer rate (MB/s)	17	17	100 or 200	100 or 200
Number of options installed, 9980V	1 / 2 / 3 / 4	1 / 2 / 3 / 4 / 5 ^{*5} / 6 ^{*5}	1 / 2 / 3 / 4	1 / 2 / 3 / 4
Number of options installed, 9970V	1 / 2 / 3 (1 / 2) ^{*3}	1 / 2 / 3 (1 / 2) ^{*3}	1 / 2 / 3 (1 / 2) ^{*3}	1 / 2 / 3 (1 / 2) ^{*3}
Number of PCBs installed, 9980V	2 / 4 / 6 / 8	2 / 4 / 6 / 8 / 10 ^{*5} / 12 ^{*5}	2 / 4 / 6 / 8	2 / 4 / 6 / 8
Number of PCBs installed, 9970V	2 / 4 / 6 (2 / 4) ^{*3}	2 / 4 / 6 (2 / 4) ^{*3}	2 / 4 / 6 (2 / 4) ^{*3}	2 / 4 / 6 (2 / 4) ^{*3}
Number of ports per subsystem, 9980V	8 / 16 / 24 / 32	8 / 16 / 24 / 32 / 40 ^{*5} / 48 ^{*5}	8 / 16 / 24 / 32	8 / 16 / 24 / 32
Number of ports per subsystem, 9970V	8 / 16 / 24 (8 / 16) ^{*3}	8 / 16 / 24 (8 / 16) ^{*3}	8 / 16 / 24 (8 / 16) ^{*3}	8 / 16 / 24 (8 / 16) ^{*3}
Maximum cable length	3 km	3 km	500 m ^{*2}	10 km

^{*1} The mainframe fibre adapters require an LC-type connector for multimode/single-mode fiber-optical cable. When connected to a host or switch device with an SC-type connector, you must have a cable which has an LC-type connector plug at one end and an SC-type connector plug at the other end.

^{*2} Indicates when 50 / 125-mm multimode fiber cable is used. If 62.5 / 125-mm multimode fiber cable is used, maximum length is decreased to 300 m.

^{*3} Indicates when the 9970V subsystem is the full-specification model (2 DKA pairs).

^{*4} The -8S model cannot be installed in the DKA location of DKC460I.

^{*5} A maximum of two sets of DKC-F460I-8SE are installable in the DKA locations. In this case, the number of installations of the DKA pair is restricted to two or three sets.

5.9 Environmental Specifications and Requirements

5.9.1 Temperature and Humidity Requirements

Table 5.19 lists the temperature and humidity requirements for the 9900V subsystem. The recommended operational room temperature is 70-75°F (21-24°C). The recommended operational relative humidity is 50% to 55%.

Table 5.19 Temperature and Humidity Requirements

Parameter	Operating ^{*1}		Non-Operating ^{*2}		Shipping & Storage ^{*3}	
	Low	High	Low	High	Low	High
Temperature °F (°C)	60 (16)	90 (32)	14 (-10)	109 (43)	5 (-25)	140 (60)
Relative Humidity (%) ^{*4}	20 - 80		8 - 90		5 - 95	
Max. Wet Bulb °F (°C)	79 (26)		81 (27)		84 (29)	
Temperature Deviation °F (°C) / hour	18 (10)		18 (10)		36 (20)	

^{*1} Environmental specification for operating condition should be satisfied before the disk subsystem is powered on. The maximum temperature of 90°F (32°C) should be strictly satisfied at the air inlet portion of the subsystem. The recommended temperature range is 70-75°F (21-24°C).

^{*2} Non-operating condition includes both packing and unpacking conditions unless otherwise specified.

^{*3} During shipping or storage, the product should be packed with factory packing.

^{*4} No condensation in or around the drive should be observed under any conditions.

5.9.2 Power Consumption and Heat Output Specifications

Table 5.20 lists the power consumption and heat output parameters for the 9980V DKC components. Table 5.22 lists the power consumption and heat output parameters for the 9980V DKU components. Table 5.22 lists the power consumption and heat output parameters for the 9970V components. These data generally apply to both 60-Hz and 50-Hz subsystems.

Table 5.20 9980V DKC Component Power and Heat Output Specifications

Model Number	Weight (kg)	Heat Output (kW)	Power Consumption (kVA)	Dimensions (mm)			Air Flow (m ³ /min.)
				Width	Depth	Height	
DKC460I-5	466.0	0.73	0.77	782 *1	800	1860	18
DKC460I-5F (without doors)	395.0	0.73	0.77	782 *1	800	1860	18
DKC-F460I-1PS	10.0	—	—	—	—	—	—
DKC-F460I-1EC	7.5	—	—	—	—	—	—
DKC-F460I-1UC	10.5	—	—	—	—	—	—
DKC-F460I-3PS	7.0	—	—	—	—	—	—
DKC-F460I-200	3.6	0.21	0.22	—	—	—	—
DKC-F460I-2048	0.2	0.007	0.008	—	—	—	—
DKC-F460I-4096	0.2	0.007	0.008	—	—	—	—
DKC-F460I-S512	0.05	0.004	0.004	—	—	—	—
DKC-F460I-S1024	0.05	0.004	0.004	—	—	—	—
DKC-F460I-8S/8SE	4.2	0.28	0.29	—	—	—	—
DKC-F460I-8MS	4.2	0.31	0.33	—	—	—	—
DKC-F460I-8ML	4.2	0.31	0.33	—	—	—	—
DKC-F460I-8HSE DKC-F460I-8HSF	4.2	0.21	0.22	—	—	—	—
DKC-F460I-16HSF	4.3	0.23	0.24	—	—	—	—
DKC-F460I-8HLE DKC-F460I-8HLF	4.2	0.21	0.22	—	—	—	—
DKC-F460I-SVP	5.5	0.07	0.07	—	—	—	—
DKC-F460I-UPS (for single-phase model only)	1.2	0.01	0.01	—	—	—	—
DKC-F460I-80	8.8	—	—	—	—	—	—
DKC-F460I-41	5.6	0.06	0.06	—	—	—	—
DKC-F460I-42 *2	42.2	0.09	0.10	—	—	—	—
DKC-F460I-L1C	3.5	—	—	—	—	—	—
DKC-F460I-U405R	10.0	0.06	0.07	—	—	—	—
DKC-F460I-U405L	10.0	0.06	0.07	—	—	—	—

Table 5.20 9980V DKC Component Power and Heat Output Specifications (continued)

Model Number	Weight (kg)	Heat Output (kW)	Power Consumption (kVA)	Dimensions (mm)			Air Flow (m ³ /min.)
				Width	Depth	Height	
DKC-F460I-18	0.6	0.002	0.003	—	—	—	—
DKC-F460I-DH	71.0	—	—	—	—	—	—
DKC-F460I-DS	71.0	—	—	—	—	—	—
DKC-F460I-3PSD	12.0	—	—	—	—	—	—
DKC-F460I-3ECD	8.0	—	—	—	—	—	—
DKC-F460I-3UCD	11.0	—	—	—	—	—	—

*1 This includes the thickness of side covers (16 mm × 2).

*2 Additional Battery for Cache Memory (DKC-F460I-42) is required when 17 or more sets of the Additional Cache Memory Module (DKC-F460I-2048 or DKC-F460I-4096) are installed.

Table 5.21 9980V DKU Component Power and Heat Output Specifications

Model Number	Weight (kg)	Heat Output (kW)	Power Consumption (kVA)	Dimensions (mm)			Air Flow (m ³ /min.)
				Width	Depth	Height	
DKU455I-18	460.0	0.51	0.54	750	800	1860	32
DKU455I-18F (without doors)	419.0	0.51	0.54	750	800	1860	32
DKU-F455I-1PS	20.0	—	—	—	—	—	—
DKU-F455I-1EC	7.0	—	—	—	—	—	—
DKU-F455I-1UC	10.0	—	—	—	—	—	—
DKU-F455I-3PS	20.0	—	—	—	—	—	—
DKU-F455I-3EC	11.0	—	—	—	—	—	—
DKU-F455I-3UC	16.0	—	—	—	—	—	—
DKU-F455I-EXC	3.0	—	—	—	—	—	—
DKU-F455I-36K1	1.0	0.022	0.024	—	—	—	—
DKU-F455I-36K4	4.0	0.088	0.096	—	—	—	—
DKU-F455I-72J1	1.0	0.023	0.025	—	—	—	—
DKU-F455I-72J4	4.0	0.092	0.100	—	—	—	—
DKU-F455I-146J1	1.0	0.023	0.025	—	—	—	—
DKU-F455I-146J4	4.0	0.092	0.100	—	—	—	—
DKU-F455I-DH (door-HDS)	41.0	—	—	—	—	—	—
DKU-F455I-DS (door-Sun™)	41.0	—	—	—	—	—	—
DKU-F455I-3PSD	20.0	—	—	—	—	—	—

Table 5.22 9970V Component Power and Heat Output Specifications

Model number	Weight (kg)	Heat Output (kW)	Power Consumption (kVA)	Dimensions (mm)			Air Flow (m³/min.)
				Width	Depth	Height	
DKC465I-5	586.0	0.52	0.55	782 *3	800	1860	25
DKC465I-5F (without doors)	515.0	0.52	0.55	782 *3	800	1860	25
DKC-F465I-1PS	15.0	—	—	—	—	—	—
DKC-F465I-1EC	7.5	—	—	—	—	—	—
DKC-F465I-1UC	10.5	—	—	—	—	—	—
DKC-F465I-3PS	12.0	—	—	—	—	—	—
DKC-F465I-3EC	6.0	—	—	—	—	—	—
DKC-F465I-3UC	10.0	—	—	—	—	—	—
DKC-F465I-FSW	2.0	0.20	0.21	—	—	—	—
DKC-F465I-FSW2	2.0	0.22	0.23	—	—	—	—
DKC-F465I-100	3.4	0.13	0.13	—	—	—	—
DKC-F460I-200 *1	3.6	0.21	0.22	—	—	—	—
DKC-F460I-2048 *1	0.2	0.007	0.008	—	—	—	—
DKC-F460I-4096 *1	0.2	0.007	0.008	—	—	—	—
DKC-F460I-S512 *1	0.05	0.004	0.004	—	—	—	—
DKC-F460I-S1024 *1	0.05	0.004	0.004	—	—	—	—
DKC-F460I-SVP *1	5.5	0.07	0.07	—	—	—	—
DKC-F460I-UPS *1 (for single-phase model only)	1.2	0.01	0.01	—	—	—	—
DKC-F460I-8S/8SE *1	4.2	0.28	0.29	—	—	—	—
DKC-F460I-8MS *1	4.2	0.31	0.33	—	—	—	—
DKC-F460I-8ML *1	4.2	0.31	0.33	—	—	—	—
DKC-F460I-8HSE *1 DKC-F460I-8HSF	4.2	0.21	0.22	—	—	—	—
DKC-F460I-16HSF *1	4.3	0.23	0.24	—	—	—	—
DKC-F460I-8HLE *1 DKC-F460I-8HLF	4.2	0.21	0.22	—	—	—	—
DKC-F460I-18 *1	0.6	0.002	0.003	—	—	—	—
DKU-F455I-36K1 *2	1.0	0.022	0.024	—	—	—	—
DKU-F455I-36K4 *2	4.0	0.088	0.096	—	—	—	—
DKU-F455I-72J1 *2	1.0	0.023	0.025	—	—	—	—
DKU-F455I-72J4 *2	4.0	0.092	0.100	—	—	—	—

Table 5.22 9970V Component Power and Heat Output Specifications (continued)

Model number	Weight (kg)	Heat Output (kW)	Power Consumption (kVA)	Dimensions (mm)			Air Flow (m³/min.)
				Width	Depth	Height	
DKU-F455I-146J1 *2	1.0	0.023	0.025	—	—	—	—
DKU-F455I-146J4 *2	4.0	0.092	0.100	—	—	—	—
DKU-F465I-DH (door-HDS)	71.0	—	—	—	—	—	—
DKU-F465I-DS (door-Sun™)	71.0	—	—	—	—	—	—

*1 These options are common to the options installed in DKC460I-5.

*2 These options are common to the options installed in DKU455I-18.

*3 This includes the thickness of side covers (16 mm × 2).

5.9.3 Loudness

The acoustic emission values [loudness in dB(A)] for a maximum 9980V subsystem configuration (one DKC, four DKUs) are:

Front/rear = 65 dB(A)

Both sides = 65 dB(A)

Note: These values were extrapolated from the values for one DKC and one DKU.

Note: Measurement point: 1 m above floor and 1 m from surface of the product.

5.9.4 Air Flow Requirements

The 9900V subsystem is air cooled. Air must enter the subsystem through the air flow intakes at the sides and bottoms of the frames and must be exhausted out of the top, so it is very important that the air intakes and outlets remain clear. Hitachi Data Systems recommends that under-floor air cooling has a positive pressure and meets the specifications listed in Table 5.23. For subsystems located at elevations from 3000 to 7000 feet (900 to 2100 meters) above sea level, decrease the maximum air temperature by two degrees for each 1000 feet (300 meters) above 3000 feet (900 meters).

Note: The air flow requirements for 9900V are greater than those for the 9900 subsystem.

Table 5.23 Internal Air Flow

Subsystem Type	Subsystem Configuration	Air Flow (m³/min)	Air Flow (ft³/min)
9980V	Controller Frame (all configurations)	18	636
	Array Frame (all configurations)	32	1131
9970V	All configurations	25	883

5.9.5 Vibration and Shock Tolerances

Table 5.24 lists the vibration and shock tolerance data for the 9900V subsystem. The 9900V can be subjected to vibration and shock up to these limits and still perform normally. The user should consider these requirements if installing the 9900V near large generators located on the floor above or below the 9900V subsystem. Generators or any other source of vibration, if not insulated or shock-mounted, can cause excessive vibration that may affect the subsystem.

Table 5.24 Vibration and Shock Tolerances

Condition	Operating	Nonoperating	Shipping or Storage
Vibration *1	0.01" (0.25 mm), 5~10 Hz 0.05 g, 10~300 Hz	0.1" (2.5 mm), 5~10 Hz 0.5 g, 10 to 70 Hz 0.002" (0.05 mm), 70~99 Hz 1.0 g, 99 to 300 Hz	0.5 g, 15 min. *2 At four most severe resonance frequencies between 5 and 200 Hz
Shock	—	8 g, 15 ms	Horizontal: Incline Impact 4 ft (1.22 m) *3 Vertical: Rotational Edge 0.3 ft (0.1 m) *4

*1 The vibration specifications apply to all three axes.

*2 See ASTM D999-91 Standard Methods for Vibration Testing of Shipping Containers.

*3 See ASTM D5277-92 Standard Test Methods for Performing Programmed Horizontal Impacts Using an Inclined Impact Tester.

*4 See ASTM D1083-91 Standard Test Methods for Mechanical Handling of Unitized Loads and Large Shipping Cases and Crates.

g = acceleration equivalent to gravity (9.8 m/sec²)

Chapter 6 Troubleshooting

6.1 Troubleshooting

The Hitachi Lightning 9900™ V Series subsystem provides continuous data availability and is not expected to fail in any way that would prevent access to user data. The READY and ENABLE LEDs on the 9900V control panel must be **ON** when the subsystem is operating online.

Table 6.1 lists potential error conditions and provides recommended actions for resolving each condition. If you are unable to resolve an error condition, contact your Hitachi Data Systems representative, or call the Hitachi Data Systems Support Center for assistance (see section 6.2).

Table 6.1 Troubleshooting

Error Condition	Recommended Action
Error message displayed.	Determine the type of error (refer to the SIM codes in section 6.2). If possible, remove the cause of the error. If you cannot correct the error condition, call the Hitachi Data Systems Support Center for assistance.
General power failure.	Call the Hitachi Data Systems Support Center for assistance. WARNING: Do not open the 9900V control frame or touch any of the controls.
Fence message is displayed on the console.	Determine if there is a failed storage path. If so, toggle the RESTART switch, and retry the operation. If the fence message is displayed again, call the Hitachi Data Systems Support Center for assistance.
READY LED does not go on, or there is no power supplied.	Call the Hitachi Data Systems Support Center for assistance. WARNING: Do not open the 9900V control frame or touch any of the controls.
ENABLE LEDs for a cluster do not go on.	Determine if channel I/O operations to that cluster are possible. If so, call the Hitachi Data Systems Support Center to have the LEDs checked. If not, disconnect the channel(s) and/or call the Hitachi Data Systems Support Center.
Emergency (fire, earthquake, flood, etc.)	Pull the emergency power-off (EPO) switch (see section 4.6.1). You must call the Hitachi Data Systems Support Center to have the EPO switch reset.
ALARM LED is on.	If there is an obvious temperature problem in the area, power down the subsystem (call the Hitachi Data Systems Support Center for assistance), lower the room temperature to the specified operating range, and power on the subsystem (call the Hitachi Data Systems Support Center for assistance). If the area temperature is not the obvious cause of the alarm, call the Hitachi Data Systems Support Center for assistance.

6.2 Calling the Hitachi Data Systems Support Center

If you need to call the Hitachi Data Systems Support Center, make sure to provide as much information about the problem as possible, including:

- The 9900V Remote Console configuration information saved on diskette using the FD Dump tool (see the *Hitachi Lightning 9900™ V Series Remote Console - Storage Navigator User's Guide*)
- The circumstances surrounding the error or failure
- The exact content of any error messages displayed on the host system(s)
- The error code(s) displayed on the Remote Console
- The service information messages (SIMs) displayed on the Remote Console and the reference codes and severity levels of the recent SIMs

The worldwide Hitachi Data Systems Support Centers are:

- Hitachi Data Systems North America/Latin America
San Diego, California, USA
1-800-348-4357
- Hitachi Data Systems Europe
Buckinghamshire, United Kingdom
011-44-175-361-8000
- Hitachi Data Systems Asia Pacific
North Ryde, Australia
61-2-9325-3300

6.3 Service Information Messages (SIMs)

The 9900V subsystem generates service information messages (SIMs) to identify normal operations (e.g., TrueCopy pair status change) as well as service requirements and errors or failures. **Note:** For assistance with SIMs, please call the Hitachi Data Systems Support Center.

SIMs can be generated by the CHIP and ACP microprocessors and by the SVP. All SIMs generated by the 9900V are stored on the SVP for use by Hitachi Data Systems personnel, logged in the SYS1.LOGREC dataset of the mainframe host system, displayed by the Remote Console software, and reported via SNMP to the open-system host. The SIM display on the 9900V Remote Console PC enables users to remotely view the SIMs reported by the attached 9900V subsystems. Each time a SIM is generated, the amber Message LED on the 9900V control panel turns on. The Hi-Track[®] remote maintenance tool also reports all SIMs to the Hitachi Data Systems Support Center.

SIMs are classified according to severity: service, moderate, serious, or acute. The service and moderate SIMs (lowest severity) do not require immediate attention and are addressed during routine maintenance. The serious and acute SIMs (highest severity) are reported to the mainframe host(s) once every eight hours. **Note:** If a serious or acute-level SIM is reported, the user should call the Hitachi Data Systems Support Center immediately to ensure that the problem is being addressed (see section 6.2).

Figure 6.1 illustrates a typical 32-byte SIM from the 9900V subsystem. SIMs are displayed by reference code (RC) and severity. The six-digit RC, which is composed of bytes 22, 23, and 13, identifies the possible error and determines the severity. The SIM type, located in byte 28, indicates which component experienced the error.

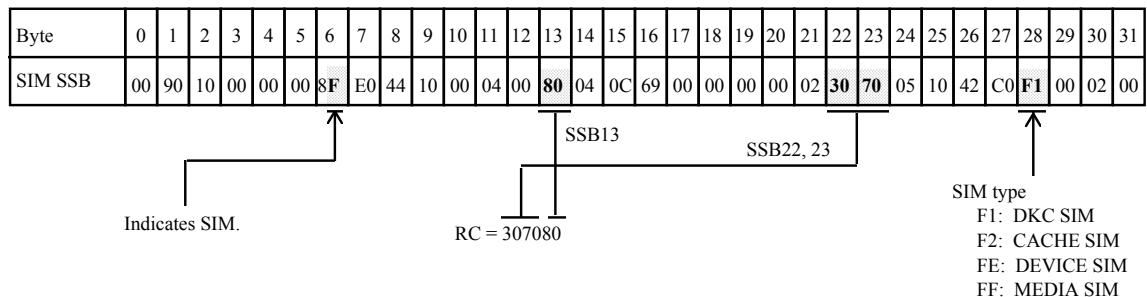


Figure 6.1 Typical 9900V SIM Showing Reference Code and SIM Type

Appendix A Acronyms and Abbreviations

A	ampere
ACP	array control processor
ASTM	American Society for Testing and Materials
BS	basic (power) supply
BSA	bus adapter
BTU	British thermal unit
°C	degrees centigrade/Celsius
ca	cache
CFW	cache fast write
CH	channel
CHA	channel adapter
CHP	channel processor or channel path
CHIP	client-host interface processor
CHPID	channel path identifier
CKD	count key data
CL	cluster
CPU	central processing unit
CSA	Canadian Standards Association
CSW	cache switch
CU	control unit
CVS	custom volume size
DASD	direct access storage device
DB	database
dB(A)	decibel (A-weighted)
DFDSS	Data Facility Dataset Services
DFSMS	Data Facility System Managed Storage
DFW	DASD fast write
DKA	disk adapter
DKC	disk controller, disk controller frame
DKU	disk unit, disk array frame
dr	drive
DSF	Device Support Facilities
DTDS+	Disaster Tolerant Disk System Plus
ECKD	Extended Count Key Data
EOF	end of field
EPO	emergency power-off
EREP	Error Reporting
ESA	Enterprise Systems Architecture
ESCON [®]	Enterprise System Connection (IBM [®] trademark for optical channels)
ESS	Enterprise Storage Server [®]
ExSA [™]	Extended Serial Adapter [™]
FAL	File Access Library (part of the HRX software)
FBA	fixed-block architecture

FC	fibre-channel
FC-AL	fibre-channel arbitrated loop
FCC	Federal Communications Commission
FCP	fibre-channel protocol
FCU	File Conversion Utility (part of the HRX software)
FDN	Freedom Data Networks
FDR	Fast Dump/Restore
FICON™	Fiber Connection (IBM® trademark for fiber connection technology)
F/M	format/message
FWD	fast wide differential
g	acceleration of gravity (9.8 m/s ²) (unit used for vibration and shock)
Gb	gigabit
GB	gigabyte (1,024 MB)
Gbps, Gb/s	gigabit per second
GLM	gigabyte link module
GUI	graphical user interface
HACMP	High Availability Cluster Multi-Processing
HBA	host bus adapter
HCD	hardware configuration definition
HCPF	Hitachi Concurrent Processing Facility
HDLM	Hitachi Dynamic Link Manager™
HMBR	Hitachi Multiplatform Backup/Restore
HPAV	Hitachi Parallel Access Volume
HRX	Hitachi RapidXchange
HSN	Hierarchical Star Network
HXRC	Hitachi Extended Remote Copy
Hz	Hertz
ICKDSF	A DSF command used to perform media maintenance
IDCAMS	access method services (a component of Data Facility Product)
IML	initial microprogram load
in.	inch(es)
IO, I/O	input/output (operation or device)
IOCP	input/output configuration program
JCL	job control language
kB	kilobyte (1,024 bytes)
kcal	kilocalorie
kg	kilogram
km	kilometer
kVA	kilovolt-ampere
kW	kilowatt
LAN	local area network
lb	pound
LD	logical device
LDEV	logical device
LED	light-emitting diode

LPAR	logical partition
LCP	link control processor, local control port
LRU	least recently used
LU	logical unit
LUN	logical unit number, logical unit
LVI	logical volume image (also called device emulation)
LW	long wavelength
m	meter
MB	megabyte (1,024 kB)
MIH	missing interrupt handler
mm	millimeter
MP	microprocessor
MPLF	Multi-Path Locking Facility
MR	magnetoresistive
ms, msec	millisecond
MVS	Multiple Virtual Storage (including MVS/370, MVS/ESA, MVS/XA)
NAS	network-attached storage
NBU	NetBackup (a VERITAS™ software product)
NVS	nonvolatile storage
OEM	original equipment manufacturer
OFC	open fibre control
ORM	online read margin
OS	operating system
P/DAS	PPRC/dynamic address switching (an IBM® mainframe host software function)
PC	personal computer system
PCI	power control interface
PPRC	Peer-to-Peer Remote Copy (an IBM® mainframe host software function)
PS	power supply
RAB	RAID Advisory Board
RAID	redundant array of independent disks
RAM	random-access memory
RC	reference code
RISC	reduced instruction-set computer
R/W	read/write
S/390®	IBM® System/390® architecture
SAN	storage-area network
SCSI	small computer system interface
sec.	second
seq.	sequential
SGI®	Silicon Graphics, Inc.
SIM	service information message
SLES	SuSE Linux Enterprise Server
SMS	System Managed Storage
SNMP	simple network management protocol
SSID	storage subsystem identification

SVP	service processor
SW	short wavelength
TB	terabyte (1,024 GB)
T&B	Thomas & Betts
TC390	TrueCopy - S/390®
TC390A	TrueCopy - S/390® Asynchronous
TID	target ID
TPF	Transaction Processing Facility
TSO	Time Sharing Option (an IBM® System/370 operating system option)
UCB	unit control block
UIM	unit information module
UL	Underwriters' Laboratories
µm	micron, micrometer
UPS	uninterruptible power supply
VA	volt-ampere
VAC	volts AC
VCS	VERITAS Cluster Server™
VDE	Verband Deutscher Elektrotechniker
VM	Virtual Machine (an IBM® mainframe system control program)
VOLID	volume ID
volser	volume serial number
VSE	Virtual Storage Extension (an IBM® mainframe operating system)
VTOC	volume table of contents
W	watt
WLM	Workload Manager (an IBM® mainframe host software function)
XA	System/370 Extended Architecture
XDF	Extended Distance Feature (for ExSA™ channels)
XRC	Extended Remote Copy (an IBM® mainframe host software function)

Appendix B Units and Unit Conversions

Storage capacities on the 9900V are calculated based on the following values:
1 kB = 1,024 bytes, 1 MB = 1,024 kB, 1 GB = 1,024 MB, and 1 TB = 1,024 GB

Table B.1 provides unit conversions for the standard (U.S.) and metric measurement systems.

Table B.1 Unit Conversions for Standard (U.S.) and Metric Measures

From	Multiply By:	To Get:
British thermal units (BTU)	0.251996	Kilocalories (kcal)
British thermal units (BTU)	0.000293018	Kilowatts (kW)
Inches (in)	2.54000508	Centimeters (cm)
Feet (ft)	0.3048006096	Meters (m)
Square feet (ft ²)	0.09290341	Square meters (m ²)
Cubic feet per minute (ft ³ /min)	0.028317016	Cubic meters per minute (m ³ /min)
Pound (lb)	0.4535924277	Kilogram (kg)
Kilocalories (kcal)	3.96832	British thermal units (BTU)
Kilocalories (kcal)	1.16279×10^{-3}	Kilowatts (kW)
Kilowatts (kW)	3412.08	British thermal units (BTU)
Kilowatts (kW)	859.828	Kilocalories (kcal)
Millimeters (mm)	0.03937	Inches (in)
Centimeters (cm)	0.3937	Inches (in)
Meters (m)	39.369996	Inches (in)
Meters (m)	3.280833	Feet (ft)
Square meters (m ²)	10.76387	Square feet (ft ²)
Cubic meters per minute (m ³ /min)	35.314445	Cubic feet per minute (ft ³ /min)
Kilograms (kg)	2.2046	Pounds (lb)
Ton (refrigerated)	12,000	BTUs per hour (BTU/hr)
Degrees Fahrenheit (°F)	subtract 32, then multiply result by 0.555556	Degrees centigrade (°C) $^{\circ}\text{C} = (^{\circ}\text{F} - 32) \times 0.555556$
Degrees centigrade (°C)	multiply by 1.8, then add 32 to result	Degrees Fahrenheit (°F) $^{\circ}\text{F} = (^{\circ}\text{C} \times 1.8) + 32$
Degrees Fahrenheit per hour (°F/hour)	0.555555	Degrees centigrade per hour (°C/hour)
Degrees centigrade per hour (°C/hour)	1.8	Degrees Fahrenheit per hour (°F/hour)

