


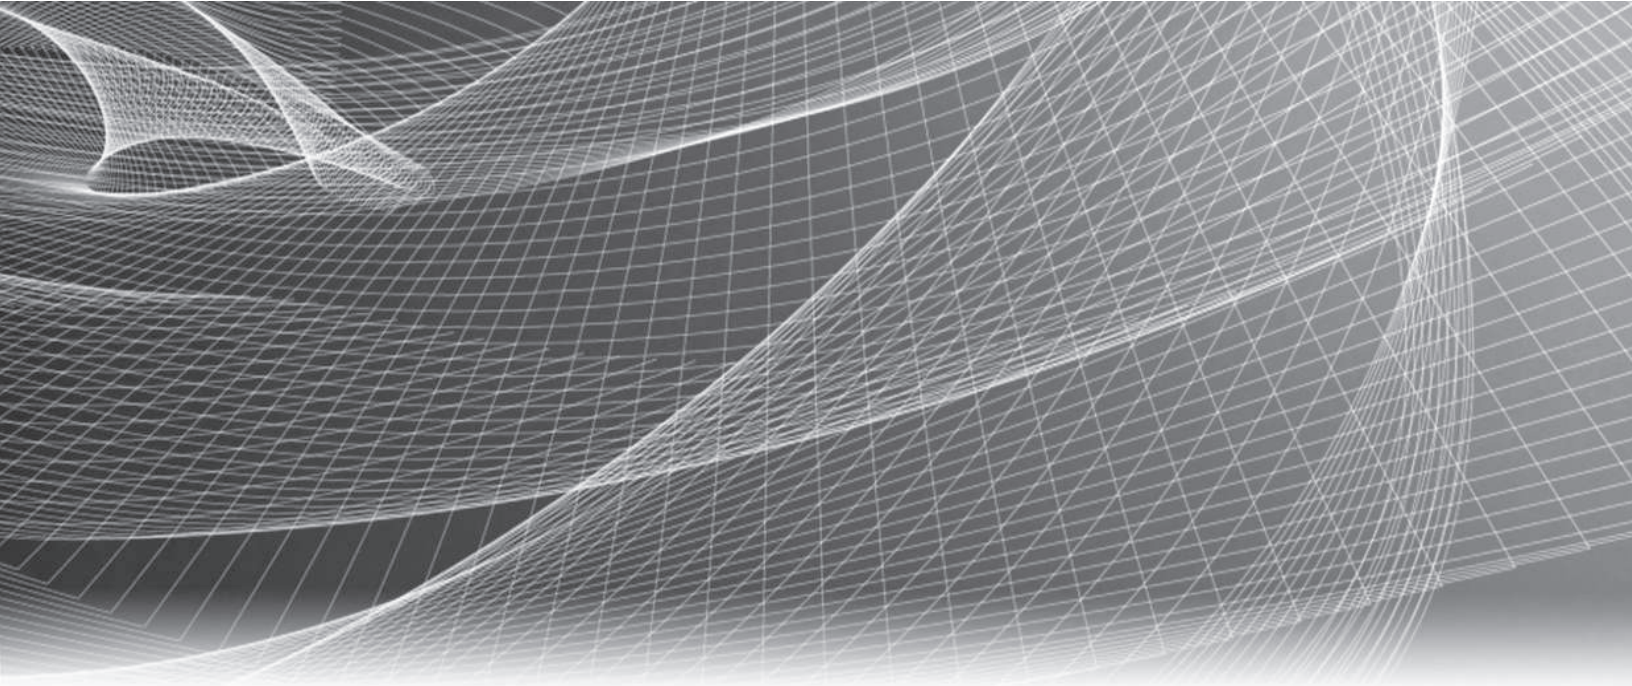

EMC® Unisphere™ for VMAX™

VERSION 8.0.3

Installation Guide

REV 03

Copyright © 2012 - 2015 EMC Corporation. All rights reserved. Published in the USA.

Published June, 2015

EMC believes the information in this publication is accurate as of its publication date. The information is subject to change without notice.

The information in this publication is provided as is. EMC Corporation makes no representations or warranties of any kind with respect to the information in this publication, and specifically disclaims implied warranties of merchantability or fitness for a particular purpose. Use, copying, and distribution of any EMC software described in this publication requires an applicable software license.

EMC², EMC, and the EMC logo are registered trademarks or trademarks of EMC Corporation in the United States and other countries. All other trademarks used herein are the property of their respective owners.

For the most up-to-date regulatory document for your product line, go to EMC Online Support (<https://support.emc.com>).

CONTENTS

Preface	11
Chapter 1: Pre-installation considerations	15
Before you begin	16
Unisphere Initial Setup User	16
Local and remote installation options	16
Unisphere for VMAX licensing	17
Unisphere for VMAX Virtual Appliance	17
Unisphere Lockbox Password	17
X.509 certificate-based user authentication	18
Environment and system requirements	19
Network requirements	19
Solutions Enabler	19
Supported HYPERMAX OS/Enginuity versions	19
Host systems and storage operating environment	19
Concurrent users	19
Symmetrix Management Console	19
VMware and Hyper-V guests	20
Database Storage Analyzer requirements	20
EMC ControlCenter	20
Client screen requirements	20
Client browser requirements	21
Server requirements	21
Server requirements	21
Other requirements	22
Chapter 2: Installing Unisphere for VMAX	23
Pre-installation configuration	24
Setting the event and statistics daemons to autostart on Linux	24
Setting up the PostgreSQL user on Linux	24
Configuring for eNAS link and launch	25
Installing Unisphere for VMAX	26
Step 1: Accessing the software	26
Step 2: Installing the software	26

Step 2A: Installing Unisphere for VMAX using the wizard	27
Step 2B: Installing Unisphere for VMAX from the command line	28
Completing the installation	31
Configuring language and regional settings	31
Installing a Unisphere for VMAX license	31
Configuring third-party utilities	31
Importing CA certificates	32
Starting and stopping the performance database	33
Starting and stopping the SMAS service	34
Launching Unisphere for VMAX	35
Launching Database Storage Analyzer	36
 Chapter 3: Upgrading Unisphere for VMAX	37
Upgrade paths	38
Before upgrading Unisphere for VMAX	39
Running the Unisphere for VMAX upgrade	40
Upgrading Unisphere for VMAX on Windows	40
Upgrading Unisphere for VMAX on Linux	40
After upgrading Unisphere for VMAX	41
Renewing link and launch client registrations	41
Restoring and verifying system and performance data	41
 Chapter 4: Uninstalling Unisphere for VMAX	43
Before you begin	44
Uninstalling from Windows	45
Using Windows Add/Remove Programs	45
Using the command line	45
Using Windows Explorer	45
Uninstalling from Linux	46
Using the wizard	46
Using the command line	46
 Chapter 5: Installing the Unisphere for VMAX virtual appliance	47
Introduction	48
Before you begin	50
Installing the virtual appliance directly on the ESX Server	51
Installing the virtual appliance through a vCenter Server	56

Installing the virtual appliance using OVFTOOL	58
Using OVFTOOL	58
Launching Unisphere or the vApp Manager	61
Launching Unisphere	61
Launching the vApp Manager	61
Connecting to the API server	62
Setting the storevntd daemon to start automatically	62
Registering the VASA Provider with vSphere	63
Upgrading the Unisphere for VMAX Virtual Appliance using an ISO image	64
Re-configuring the virtual appliance IP address	66
Deleting the Unisphere for VMAX Virtual Appliance	68
Backing up and restoring the performance database	69
Backing up performance database files to another host	69
Restoring performance database files from another host	69
Installing licenses	71
Installing VMAX-based licenses	71
Installing host-based licenses	71
Appendix A: Technical notes	73
Technical notes	74
Managing thin pools	74
SYMAPI server	74
Local replication management	74
Advanced configuration settings	74
Resetting the host system stable values	74
Configuring idle user timeout	75
Alerts	75
Protecting against POODLE SSLv3 vulnerability	75
Virtual Appliance Technical notes	76
Setting the LDAP user	76
Gatekeeper volumes	76
Host ESX Server configuration	76
Unisphere daemon service	76
Server hostname requirement	76
SSL certificate generation	76
Changing the IP address	76
SYMCLI commands executed/submitted as root	76

Least privileged permission requirements	77
Adding gatekeeper volumes	77
Appendix B: Security features	79
Authentication	80
Authorization	81
Appendix C: Replacing the Unisphere for VMAX and CA server certificates	85
Step 1: Obtaining the keystore password	85
Step 2: Generating a certificate request	85
Step 3: Importing the CA-signed certificate into the keystore	86
Step 4: Start the SMAS server	87
Appendix D: Configuring SMAS to work in z/OS	89
Configuring SMAS to work in z/OS	90

FIGURES

Figure	Page
Figure 1: Local installation: Unisphere for VMAX	16
Figure 2: Remote installation: Unisphere for VMAX on a server connected to a remote SYMAPI server	17

TABLES

Table	Page
Table 1: Unisphere for VMAX client requirements	21
Table 2: Server requirements and limitations	21
Table 3: Unisphere for VMAX Virtual Appliance VMware ESX Server requirements	50

Preface

As part of an effort to improve its product lines, EMC periodically releases revisions of its software and hardware. Therefore, some functions described in this document might not be supported by all versions of the software or hardware currently in use. The product release notes provide the most up-to-date information on product features.

Contact your EMC representative if a product does not function properly or does not function as described in this document.

This document was accurate at publication time. New versions of this document might be released on the EMC Online Support website. Check the EMC Online Support site <https://support.EMC.com> to ensure that you are using the latest version of this document.

Purpose

This document describes how to configure and use Unisphere for VMAX.

Audience

This document is intended for the host system administrator, storage administrator, system programmer, or operator involved in managing VMAX systems.

Related documentation

The following related documents are available on the EMC Online Support Site at <https://support.EMC.com>

- ◆ *EMC Unisphere for VMAX Release Notes*
- ◆ *EMC Unisphere for VMAX Online Help*
- ◆ *EMC Unisphere for VMAX - vApp Manager Online Help*
- ◆ *EMC Solutions Enabler Installation Guide*
- ◆ *EMC Solutions Enabler Release Notes*
- ◆ *EMC Solutions Enabler SRM CLI Product Guide*
- ◆ *EMC Solutions Enabler CLI Command Reference*
- ◆ *EMC VMAX Family Security Configuration Guide*

Conventions used in this document

EMC uses the following conventions for special notices:

Caution, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Notice is used to address practices not related to personal injury.

A Note presents information that is important, but not hazard-related.

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

Style	Where used
Normal	Used in running (nonprocedural) text for: ◆ Names of interface elements, such as names of windows, dialog boxes, buttons, fields, and menus ◆ Names of resources, attributes, pools, Boolean expressions, buttons, DQL statements, keywords, clauses, environment variables, functions, and utilities ◆ URLs, pathnames, filenames, directory names, computer names, links, groups, service keys, file systems, and notifications
Bold	Used in running (nonprocedural) text for names of commands, daemons, options, programs, processes, services, applications, utilities, kernels, notifications, system calls, and man pages Used in procedures for: ◆ Names of interface elements, such as names of windows, dialog boxes, buttons, fields, and menus ◆ What the user specifically selects, clicks, presses, or types
<i>Italic</i>	Used in all text (including procedures) for: ◆ Full titles of publications referenced in text ◆ Emphasis, for example, a new term ◆ Variables
<code>Courier</code>	Used for: ◆ System output, such as an error message or script ◆ URLs, complete paths, filenames, prompts, and syntax when shown outside of running text
Courier bold	Used for specific user input, such as commands
<i>Courier italic</i>	Used in procedures for: Variables on the command line User input variables
< >	Angle brackets enclose parameter or variable values supplied by the user
[]	Square brackets enclose optional values
	Vertical bar indicates alternate selections — the bar means “or”
{ }	Braces enclose content that the user must specify, such as x or y or z
...	Ellipses indicate nonessential information omitted from the example

Where to get help

EMC support, product, and licensing information can be obtained on the EMC Online Support site as described next.

To open a service request through the EMC Online Support site, you must have a valid support agreement. Contact your EMC sales representative for details about obtaining a valid support agreement or to answer any questions about your account.

Product information

For documentation, release notes, software updates, or for information about EMC products, licensing, and service, refer to EMC online support at: <https://support.EMC.com>.

Technical support

EMC offers a variety of support options.

Support by Product — EMC offers consolidated, product-specific information on the Web at: <https://support.EMC.com/products>.

The Support by Product web pages offer quick links to Documentation, White Papers, Advisories (such as frequently used Knowledgebase articles), and Downloads, as well as more dynamic content, such as presentations, discussion, relevant Customer Support Forum entries, and a link to EMC Live Chat.

EMC Live Chat — Open a Chat or instant message session with an EMC Support Engineer.

eLicensing support

To activate your entitlements and obtain your VMAX license files, visit the Service Center on <https://support.EMC.com>, as directed on your License Authorization Code (LAC) letter emailed to you.

For help with missing or incorrect entitlements after activation (that is, expected functionality remains unavailable because it is not licensed), contact your EMC Account Representative or Authorized Reseller.

For help with any errors applying license files through Solutions Enabler, contact the EMC Customer Support Center.

If you are missing a LAC letter, or require further instructions on activating your licenses through the Online Support site, contact EMC's worldwide Licensing team at licensing@emc.com or call:

- ◆ North America, Latin America, APJK, Australia, New Zealand: SVC4EMC (800-782-4362) and follow the voice prompts.
- ◆ EMEA: +353 (0) 21 4879862 and follow the voice prompts.

Your comments

Your suggestions will help us to improve the accuracy, organization, and overall quality of the user publications. Send your opinions of this document to:

VMAXContentFeedback@emc.com

CHAPTER 1

Pre-installation considerations

This section contains steps and information you need to take and consider before the actual installation happens.

Before you begin	16
Environment and system requirements	19

Before you begin

The following sections contain steps and information you need to take and consider before the actual installation happens.

Unisphere Initial Setup User

While installing the software, you are prompted to specify a Unisphere Initial Setup User. You can either specify the user ID you currently use to access the storage system (if User Authorization is enabled), or you can use the default user ID `smc`. If you plan on using the default ID, there must be no user IDs listed in the User Authorization database. If there are user IDs in the database (regardless of whether user authorization is enabled), then you must use SYMCLI to add the default user ID (`smc`) to the database.

For more information about users and roles, see [Security features](#) on page 79.

The role of the Unisphere Initial Setup User is to install and set up the Unisphere environment (create users and add roles). It is intended to be a temporary role as it allows you only to perform administrative tasks on storage systems that do not have defined user roles (authorization rules). After an Administrator or a SecurityAdmin is assigned to a storage system, the Unisphere Initial Setup User can no longer access or even see the system from the Unisphere console. Therefore, it is recommended that users do not operate in this role for any longer than necessary.

Local and remote installation options

Unisphere for VMAX can be installed in local or remote configurations. In a local configuration, install the Unisphere for VMAX software on a server running Solutions Enabler attached to storage systems (see the Unisphere server in [Figure 1](#)). In a remote configuration, install the Unisphere software on a server connected to the SYMAPI server (see the Unisphere server in [Figure 2](#)).

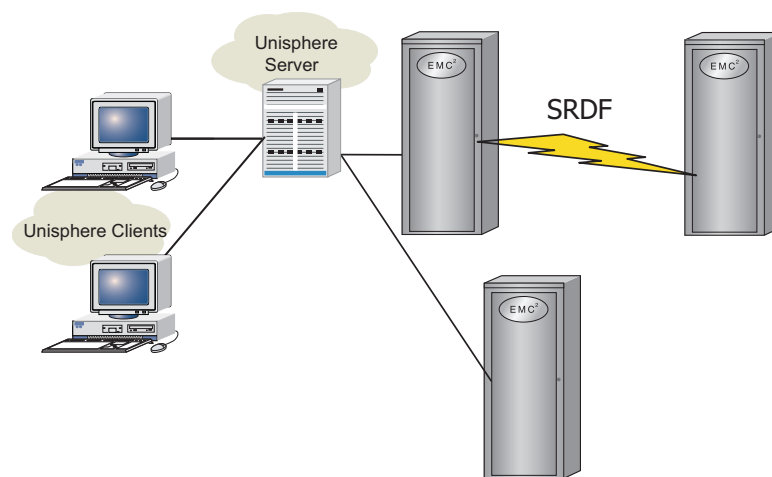


Figure 1: Local installation: Unisphere for VMAX

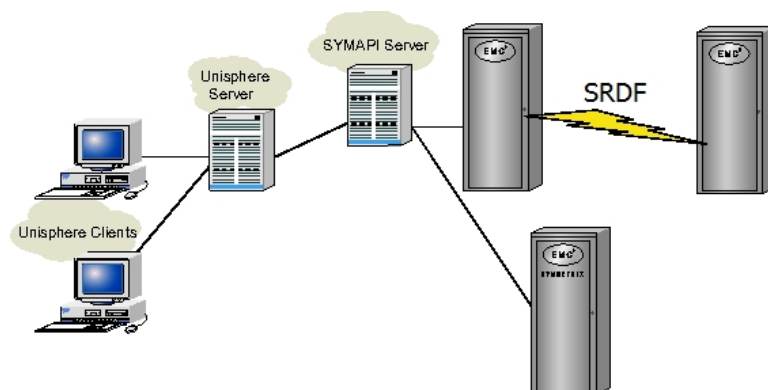


Figure 2: Remote installation: Unisphere for VMAX on a server connected to a remote SYMAPI server

Unisphere for VMAX licensing

Unisphere for VMAX uses VMAX-based eLicensing.

As a result, you can only manage a storage system from a Unisphere host, if the storage array contains a Unisphere for VMAX (SMC) eLicense. However, you can use Unisphere for VMAX to obtain and install the proper eLicense on the storage system.

Storage systems running Enginuity 5875.198.148 or lower do not require a license key.

After a storage system that has been managed by SMC is upgraded to Enginuity 5876 or higher, Unisphere will operate with the storage array even if the proper eLicense is not present. The Unisphere for VMAX (SMC) eLicense is noted as *In Use* in the Unisphere eLicensing report. This designation means that the required eLicense is missing, but access to the system is still allowed to avoid service disruption. To clear this designation, you must obtain and apply the proper eLicense.

With the incorporation of Performance Analyzer into Unisphere for VMAX, the former Symmetrix Performance Analyzer host-based eLicense is no longer required.

For more information on eLicensing, refer to the *EMC Solutions Enabler Installation Guide*.

Unisphere for VMAX Virtual Appliance

The Unisphere for VMAX virtual appliance (vApp) is available for ESX V4.0 (and higher) servers in a VMware environment.

For more information and instructions on installing the appliance, refer to the Installing the Unisphere for VMAX Virtual Appliance chapter.

Unisphere Lockbox Password

In previous releases, a lockbox was created at installation time. The lockbox is a vault containing user and password information, secured with a key. As a security improvement, you can now configure a password, known as the Unisphere Lockbox Password, for the lockbox.

As part of the installation, you can accept the default password (`host_name@Smas-1`) or you can configure a custom one. If you configure a password other than the default one, you will need that password to perform any subsequent upgrades or support operations that require access to the lockbox.

X.509 certificate-based user authentication

Certificate-based user authentication using X.509 certificates is supported on fresh installations on Windows and Linux servers. You can use a certificate issued by a trusted public third-party certificate authority (CA) to authenticate your identity when using the Unisphere for VMAX web client or REST API interfaces. The use of digital identity smartcards such as Common Access Card (CAC) and Personal Identity Verification (PIV) as part of a multi-factor authentication process is also supported.

You can enable certificate-based user authentication as part of the installation and after you have confirmed your intentions, the choice becomes irreversible. You must import the CA certificates before certificate-based user authentication can be used.

The *EMC VMAX Family Security Configuration Guide* provides additional details about certificate management.

Environment and system requirements

The Unisphere web server is supported on the platforms listed in [Table 2](#) on page 21. Unisphere for VMAX can be used in remote client/server mode to communicate with SYMAPI servers on other systems, including supported versions of AIX, Linux, Solaris, HP-UX, z/OS, and Windows.

Network requirements

Prior to installing Unisphere for VMAX, verify that the host is in a properly configured IP network and that it can resolve IP addresses and hostnames.

When installing, the use of IPv6 addresses is supported.

Solutions Enabler

Solutions Enabler 64-bit V8.0.3 is required in local and client/server modes. In client/server mode, the `storsrvd` daemon must be running on the server.

In V8.0.2, and higher, the Solutions Enabler STP daemon collects data using a new format. Therefore, features that rely on the earlier STP data format (for example, the Performance Analyzer) will not support the Solutions Enabler V8.0.2, or higher, STP daemon.

Supported HYPERMAX OS/Enginuity versions

Unisphere for VMAX V8.0.3 supports:

- ◆ VMAX Family systems running HYPERMAX OS 5977 or higher
EMC recommends running 5977.497.471 or higher.
- ◆ Symmetrix VMAX 10K/20K/40K Series systems running Enginuity 5876
- ◆ Symmetrix DMX systems running Enginuity 5671 and 5773

Host systems and storage operating environment

Unisphere for VMAX runs on a wide range of operating systems and works with certain Enginuity and HYPERMAX OS versions. For detailed interoperability information, refer to E-Lab Interoperability Navigator at <https://support.EMC.com>.

Concurrent users

Unisphere for VMAX supports up to 10 concurrent users, with performance degradation occurring with more than three users.

Symmetrix Management Console

Unisphere cannot be installed on the same host as SMC because Unisphere for VMAX and SMC/SPA are not qualified to run on the same machine together due to system resource requirements. However, they can run on separate virtual machines (VMs) on the same server, provided that each VM meets the system and memory requirements.

VMware and Hyper-V guests

Unisphere for VMAX is supported on a guest operating system on the following platforms, provided the guest is listed in the EMC Support Matrix and in VMware/Hyper-V support documentation, and Unisphere for VMAX supports the platform. Note that the guest must provide the same CPU, memory, disk, gatekeeper, and other requirements as if Unisphere for VMAX were installed on a physical machine:

- ◆ VMware ESX/ESXi Server versions 4.0, 4.1, 5.0, 5.1 and 5.5 (and all updates of each version).
- ◆ Windows Server versions 2008 R2 (Standard and Enterprise), 2012, and 2012 R2.

Virtual machines must not be running on shared memory/resources.

Database Storage Analyzer requirements

Database Storage Analyzer monitors the performance of Oracle databases (version 10g or higher).

The following operating systems are supported:

- ◆ AIX, version 5.2 and above (64-bit)
- ◆ Sun Solaris 10 and above (64-bit, SPARC only)
- ◆ Red Hat Enterprise Linux 5 and above (64-bit)
- ◆ Linux SUSE 10 and higher
- ◆ Oracle Linux Server release 5 and higher
- ◆ HP UX Itanium, version 11.23 and higher

You can use VMware VMDK virtual disks and RDM virtual environments. Other virtual environments (Solaris containers, AIX VIO, VPLEX, and so on) are not supported.

The monitored database must have an Oracle diagnostic pack license.

EMC ControlCenter

Unisphere cannot be installed on the same host as EMC ControlCenter agents because Unisphere requires a 64-bit version of Solutions Enabler and ControlCenter agents require a 32-bit version of Solutions Enabler.

Client screen requirements

The minimum client screen resolution required is 1080 x 1024.

Client browser requirements

The Unisphere for VMAX client is browser based and does not use dynamic ports, so it works with most VPN solutions.

Table 1 defines the client requirements for Unisphere for VMAX.

Table 1: Unisphere for VMAX client requirements

Browser	Version	Memory ^a	Platform
Internet Explorer	9.0 through 11.0 (Desktop only)	600 MB	Windows
Firefox	30 or higher		
Chrome ^b	21.0.1180 or higher		

a . Required for the browser as it runs on the machine from which the console is launched .

b . Not supported in embedded NAS (eNAS) environments.

For the installed browser, the following additional software is required:

- ◆ Flash Player 11.2.
- ◆ An appropriate version of Java SE Runtime Environment 7 (JRE), that is, a 32-bit JRE for a 32-bit browser, and a 64-bit JRE for a 64-bit browser.

Server requirements

Table 2 defines the server requirements and limitations.

Table 2: Server requirements and limitations

Operating system ^a	Maximum volume count	Minimum processor specification	Minimum available memory ^b	Minimum available disk space	Maximum managed storage system count
Windows	0 - 64,000	Minimum of a 2-core, 1.8 GHz processor	12 GB	120 GB	10
Linux					
Windows	64,001 - 128,000	Minimum of a 2-core, 1.8 GHz processor	16 GB	140 GB	20
Linux					
Windows	128,001 - 256,000	Minimum of a 4-core, 1.8 GHz processor	20 GB	180 GB	20
Linux					
a. For specific operating system information, refer to E-Lab™ Interoperability Navigator at: https://support.EMC.com b. This is the minimum amount of memory required to successfully run Unisphere for VMAX on the server; it is not the total amount of memory on the server. If a server has a total of 12 GB of physical memory installed but there is only 6 GB available before Unisphere for VMAX, you may experience performance issues with the application. If running on a Virtual Machine, this amount must be dedicated memory, not shared memory.					

Other requirements

- ◆ Ensure that DNS is configured correctly on the host.
- ◆ The host system must have connectivity to one or more storage systems to add users and set permissions in Unisphere.
- ◆ Unisphere for VMAX can be installed on the same system as the SYMAPI server, or on a system connected to the SYMAPI server. Refer to [Figure 1](#) on page 16 and [Figure 2](#) on page 17, respectively.
- ◆ Before you attempt to install Unisphere for VMAX on Red Hat Linux 6.0 or a later release, verify that the following packages are installed. Not all installer packages include these libraries by default, so it is important to verify their presence before running the installation program. Do not attempt to run the installation process without them. Without these items, the product fails to install and does not function properly.
The packages are:
 - `libstdc++-devel-4.4.4-13.el6.x86_64.rpm`
 - `libstdc++-4.4.4-13.el6.x86_64.rpm`
 - `libaio-0.3.107-10.el6.x86_64.rpm`
 - `ncurses-libs-5.7-3.20090208.el6.x86_64.rpm`
- ◆ To install PostgreSQL on Linux, a minimum of 2 GB of shared memory must be available.
For more information about how to configure the size of a shared memory segment, using the `shmmax` kernel parameter, see the documentation for your operating system.
- ◆ If you are changing your SYMAPI connection type, such as changing from a local connection to a client/server configuration, you must perform a fresh installation.
- ◆ Before installing Unisphere for VMAX on a host running Linux, ensure that the maximum number of open file descriptors allowed is at least 4096. To do this, complete the following steps:
 - a. Check the current limit for the number of open file descriptors. At the command line, enter the following command:


```
ulimit -n
```
 - b. If the value returned is less than 4096, set it to the correct limit:


```
ulimit -n 4096
```

CHAPTER 2

Installing Unisphere for VMAX

This section describes how to access, install, and run the Unisphere for VMAX software.

- Pre-installation configuration 24
- Installing Unisphere for VMAX 26
- Completing the installation 31
- Launching Unisphere for VMAX 35
- Launching Database Storage Analyzer 36

Pre-installation configuration

Before you install Unisphere for VMAX, complete the following tasks if they are appropriate for your installation environment:

- ◆ [Setting the event and statistics daemons to autostart on Linux](#) below
- ◆ [Setting up the PostgreSQL user on Linux](#) below
- ◆ [Configuring for eNAS link and launch](#) on the facing page

Setting the event and statistics daemons to autostart on Linux

To install Unisphere for VMAX on a local Linux 64-bit host, complete this task.

To set the event and statistics daemons to autostart:

1. Set the event and statistics daemons to autostart using the following commands:

```
stordaeomon install storevntd -autostart
stordaeomon install storstopd -autostart
```

2. Start the same daemons using the following commands:

```
stordaeomon start storstopd
stordaeomon start storevntd
```

Setting up the PostgreSQL user on Linux

Before starting a new installation of Unisphere for VMAX on Linux, the PostgreSQL user (`postgres`) and group (`postgres`), must be present. In addition, the user must be a member of the `postgres` group.

Use the following commands to create the `postgres` group and add the `postgres` user to the `postgres` group:

```
groupadd postgres
useradd -g postgres postgres
```

Configuring for eNAS link and launch

If you plan to use the embedded NAS (eNAS) link and launch functionality, you must perform some manual configuration before you install Unisphere for VMAX.

To configure for eNAS link and launch:

1. Open the following configuration file for editing:
 - On Linux systems: `/etc/hosts`
 - On Windows systems: `C:\Windows\System32\drivers\etc\hosts`
2. Add a mapping for the IP address (in either IPv4 or IPv6 format) and the host name, following the format used by the examples in the file.
3. Save the file and exit.

Further configuration must be performed after Unisphere for VMAX has been installed. For more information, refer to the Unisphere for VMAX online help.

Installing Unisphere for VMAX

To install Unisphere for VMAX:

- ◆ [Step 1: Accessing the software](#) below
- ◆ [Step 2: Installing the software](#) below
- ◆ [Step 2A: Installing Unisphere for VMAX using the wizard](#) on the facing page
- ◆ [Step 2B: Installing Unisphere for VMAX from the command line](#) on page 28

Step 1: Accessing the software

The Unisphere for VMAX V8.0.3 software and documentation is available on EMC Online Support at:

<https://support.EMC.com>

It consists of the following:

- ◆ For Windows 64-bit:
`UNIVMAX_V8.0.3.x_WINDOWS_X86_64.exe`
- ◆ For Linux 64-bit:
`UNIVMAX_V8.0.3.x_LINUX_X86_64.bin`
- ◆ For Virtual Appliance:
`univmaxpa803_x_suse11__x86_64_vapp_OVF10.ova`

In the file names above, x represents the software build number. That number varies, based on when the software was built.

- ◆ *Unisphere for VMAX Online Help*
- ◆ *Unisphere for VMAX Release Notes*
- ◆ This installation guide.

To access the software from online support:

1. On the EMC Online Support site:
 - a. Click **Support By Product** in the main navigation bar.
 - b. In the **Find a Product** box, type Unisphere for VMAX and click the arrow.
 - c. Locate the appropriate kit and download it to a directory on the host drive.
2. Continue with [Step 2: Installing the software](#).

Step 2: Installing the software

You can install Unisphere for VMAX using an installation wizard, as described in [Step 2A: Installing Unisphere for VMAX using the wizard](#), or from the command line, as described in [Step 2B: Installing Unisphere for VMAX from the command line](#).

Step 2A: Installing Unisphere for VMAX using the wizard

To install Unisphere for VMAX using the wizard:

1. Save all files and exit all applications.
2. Change the directory to the location of the kit and run the appropriate executable for your operating system.

To install Unisphere for VMAX using the wizard in Linux, the display manager must be enabled and the `-i swing` switch used, for example:

```
./UNIVMAX_V8.0.3.x_LINUX_X86_64.bin -i swing
```

If the display manager is not enabled or the `-i swing` is not used, the installer defaults to console mode.

3. On the **Introduction** page, review the recommendations and click **Next**.
4. On the **Choose Install Folder** page, click **Next** to accept the default directory, or click **Choose** to select another directory.
5. On the **Initial Setup User and SymAPI Configuration** page:
 - a. Specify a **Unisphere Initial Setup User** name (default is `smc`). You can either accept the default or use your Windows username if you have authorization enabled on the Unisphere server host. For more information about the role of the Unisphere Initial Setup User, see [Unisphere Initial Setup User](#) on page 16.
 - b. Specify a **SymAPI Connection Type** for the initial login based on the following:

Local — On a host with Solutions Enabler installed and attached to VMAX systems.

Remote — On a remote server connected to a SYMAPI server, specify the SYMAPI server **Node Name** and **Net Port**. The default net port for SYMAPI is 2707.

For more information about each of the connection types, see [Local and remote installation options](#) on page 16.
 - c. Click **Next**.
6. On the **Ports Configuration** page, specify the ports to use or enable when connecting to the Unisphere server.

The default ports of the Unisphere server (**HTTPS Port No**) and performance database (**DB Port No**) are shown. To use the default ports, verify that they are available, and click **Next** to accept and enable them. Or you can specify and enable different ports, and click **Next**.
7. On the **Unisphere Lockbox Password** page, configure the lockbox password.

Note: If you configure a Unisphere Lockbox Password other than the default one, ensure that you take note of the new password. You will need it for subsequent upgrade and support operations.

To accept the default lockbox password, click **Next**.

To change the lockbox password, complete the following steps:

 - a. Select **Overwrite default Unisphere lockbox password?**
 - b. In the **Lockbox Password** field, type the new lockbox password.
 - c. In the **Confirm Lockbox Password** field, type the new lockbox password again.
 - d. Click **Next**

- e. In the **Default Lockbox Password** dialog box, click **OK**.
8. (Optional) On the **X.509 Certificate-based Client Authentication** page, configure certificate-based user authentication options. The default behavior is for X.509 certificate-based authentication to remain disabled.

To enable X.509 certificate-based authentication, complete the following steps:

- a. Select **Enable certificate based client authentication?**.
- b. Specify whether to use the CN or UPN of the client certificate as the certificate alias.
Note that instances of the following special characters are stripped from the alias:
`@ : ? ; | < > [ ] += , * / \`
- c. Click **Next**.
- d. On the **Confirm Client Authentication** dialog box, click **OK**.

If you enable X.509 certificate-based authentication, after installation completes, import the certificate and start SMAS manually. For more information, refer to [Importing CA certificates](#) on page 32 and [Starting and stopping the SMAS service](#) on page 34.

9. If the disk space and/or memory requirements are not met, a warning is displayed. If you want to continue with the installation regardless of the consequences described in the message, click **OK**.
10. On the **Pre-Installation Summary** page, verify the summary information, and click **Install** to continue the installation.
11. To install Unisphere for VMAX on a host with more than one network interface configured, you are prompted to choose the IP address to which Unisphere for VMAX will bind. On the **Listening (bind) Address Selection** page, select the server protocol (IPv4 or IPv6), select the IP address, and then click **Next**.
12. On the **Install Complete** page, click **Done**.
13. Refer to [Completing the installation](#) for instructions on completing the installation.

Step 2B: Installing Unisphere for VMAX from the command line

Online help is available when installing from the command line by entering `-?`.

To install Unisphere for VMAX from the command line:

1. Save all files and exit all applications.
2. Change the directory to the location of the kit.
3. Run the following command to install Unisphere for VMAX on Windows:

```
KitName -i console
```

Run the following commands to install Unisphere for VMAX on Linux:

```
chmod +x KitName
./KitName -i console
```

Where `KitName` is one of the following operating system-specific kit names:

- For Windows 64-bit:
`UNIVMAX_V8.0.3.x_WINDOWS_X86_64.exe`
- For Linux 64-bit:
`UNIVMAX_V8.0.3.x_LINUX_X86_64.bin`

In the file names above, the **x** represents the software build number. That number varies based on when the software was built.

4. On the **Introduction** panel, review the recommendations and press **Enter**.
5. On the **Choose Install Folder** panel, press **Enter** to accept the default directory, or specify a different directory and press **Enter**.
6. On the **postgres User and Group** panel, you are instructed to create the `postgres` group and `postgres` user before continuing. When complete, press **Enter**.
7. On the **Initial Setup User and SymAPI Configuration** panel, complete the following steps:
 - a. Specify a **Unisphere Initial Setup User** name (default is `smc`).
You can either accept the default username or use your Windows username if you have authorization enabled on the Unisphere server host. For more information about the role of the Unisphere Initial Setup User, see [Unisphere Initial Setup User](#) on page 16.
 - b. Specify a **SymAPI Connection Type** for the initial login based on the following:

Local — On a host with Solutions Enabler installed and attached to VMAX systems.

Remote — On a remote server connected to a SYMAPI server, specify the SYMAPI server **Node Name** and **Net Port**. The default net port for SYMAPI is 2707.

For more information about each of the connection types, see [Local and remote installation options](#) on page 16.
8. On the **Ports Configuration** panel, specify the ports to use or enable when connecting to the Unisphere server.

The default ports of the Unisphere server (**HTTPS Port Number**) and performance database (**DB Port Number**) are shown. To use the default ports, verify that they are available and press **Enter** to accept and enable them. Or you can specify and enable different ports, and press **Enter**.
9. On the **Unisphere Lockbox Password** panel, click **Enter** to accept the default lockbox password, or configure a new one and then press **Enter**.

Note: If you configure a Unisphere Lockbox Password other than the default one, ensure that you take note of the new password. You will need it for subsequent upgrade and support operations.
10. On the **X.509 Certificate-based Client Authentication** panel, configure certificate-based user authentication options. The default behavior is for it not to be enabled.

To enable X.509 certificate-based authentication, complete the following steps:
 - a. At the **Enable certificate based client authentication?** prompt, type 2 for Yes.
 - b. Specify whether to use the CN or UPN of the client certificate as the certificate alias.
Note that instances of the following special characters are stripped from the alias:
`@ : ? ; | < > [ ] + = , * / \`
 - c. Press **Enter** to continue.
 - d. On the **Confirm Client Authentication** panel, confirm your selection.

If you enable X.509 certificate-based authentication, after installation completes, import the certificate and start SMAS manually. For more information, refer to [Importing CA certificates](#) on page 32 and [Starting and stopping the SMAS service](#) on page 34.
11. If the disk space and/or memory requirements are not met, a warning is displayed. If you want to continue with the installation regardless of the consequences described in the message, type 1.

12. On the **Pre-Installation Summary** panel, verify the summary information, and then press **Enter** to continue the installation.
13. On the **Listening(bind) Address Selection** panel, to install Unisphere for VMAX on a host with more than one network interface configured, you are prompted to choose the IP address to which Unisphere for VMAX will bind and specify if it is an IPv4 or an IPv6 address.
14. On the **Installation Complete** panel, press **Enter**.
15. Refer to [Completing the installation](#) for instructions on completing the installation.

Completing the installation

This section describes the tasks to perform after the installation has been completed:

- ◆ [Configuring language and regional settings](#) below
- ◆ [Installing a Unisphere for VMAX license](#) below
- ◆ [Configuring third-party utilities](#) below
- ◆ [Importing CA certificates](#) on the next page
- ◆ [Starting and stopping the performance database](#) on page 33
- ◆ [Starting and stopping the SMAS service](#) on page 34

Configuring language and regional settings

Ensure that your system is configured to use an appropriate operating system, language, and keyboard.

English operating systems have been officially qualified by EMC and are supported; the use of other non-English operating systems have not been qualified by EMC at this time.

The exact steps you need to follow might vary from those listed here, depending on the version of Windows you are using.

To configure the language and regional settings:

1. Stop the EMC SMAS service (if it is running). See [Starting and stopping the SMAS service](#) on page 34.
2. In the Windows **Control Panel**, double-click **Regional and Language Options**.
3. On the **Regional Options** tab, set the **Standards and formats** to **English (United States)**.
4. On the **Advanced** tab, set the **Language for non-Unicode programs** to **English (United States)** and select **Apply all setting to the current user account and to the default user profile**.
5. Restart the service.

Installing a Unisphere for VMAX license

Before you can manage a VMAX array running Enginuity 5876 or higher, you must install a Unisphere for VMAX (SMC) eLicense on the VMAX array. For instructions on installing licenses, refer to [Installing Licenses](#) in the Unisphere for VMAX online help.

Configuring third-party utilities

To ensure that third-party software utilities (including virus scanning and backup tools) do not affect the operation of the Unisphere for VMAX software installed on the host, you might need to carry out some additional configuration.

Exclude the `install_dir\SYMAPI\stp\spa` directory and all subdirectories from any virus scan.

Exclude the performance database directory, *install_dir\SMAS\jboss\standalone\data\pgsql\data*, and all subdirectories, from the actions performed by any third-party software utility.

Note Not following this advice may lead to data corruption in the performance database or problems with data collection.

Importing CA certificates

If you chose to use certificate-based user authentication at installation time, import the CA certificates before you login.

You must have root/administrator permissions to complete this task.

When certificate-based user authentication is chosen at install time, the SMAS service does not start automatically after installation completes. After you have imported the CA certificates, manually start the SMAS service.

For more information about starting the SMAS service see [Starting and stopping the SMAS service](#) on page 34.

To import a CA certificate:

1. Open the `domain.xml.init` file.

For Linux:

```
install_dir/jboss/domain/configuration/domain.xml.init
```

For Windows:

```
install_dir\jboss\domain\configuration\domain.xml.init
```

2. Search for the instance of `"ssl key-alias="tomcat" password=password"`
3. Take note of the value of the `password` attribute.
4. For each root CA and intermediate CA certificate, run the appropriate commands.

For Windows:

```
cd install_dir\SMAS\jboss\bin
```

```
service.bat importcacert password CA_cert_alias CA_file_path
```

For Linux:

```
cd install_dir/SMAS/jboss/bin
```

```
initcst.sh importcacert password CA_cert_alias CA_file_path
```

Where:

- *password* is the password of the keystore, discovered in step 3.
- *CA_cert_alias* is the alias of the CA cert chosen at installation time.
Note that when either the CN or UPN is chosen as the alias for the CA cert, instances of the following special characters are stripped from the alias:
`@:~;|<>[]+=,*/\`
- *CA_file_path* is the path to the CA certificate file.

Starting and stopping the performance database

If required to do so, you can start and stop the performance database manually.

Windows

To start or stop the **EMC_smasdb** service in Windows, use the Control Panel (**Administrative Tools > Services**).

Alternatively, you can use the following commands to start or stop the Windows services using the CLI:

```
net start "EMC_smasdb"  
net stop "EMC_smasdb"
```

Linux

Start the performance database before starting the SMAS service. In the same way, stop the SMAS service before stopping the performance database.

To start or stop the performance database (PostgreSQL) in Linux, navigate to this directory:

```
install_dir/SMAS/jboss/standalone/data/pgsql
```

and use the following commands:

Action	Command
Start	<code>./smasdb_unix_helper.sh -S</code>
Stop	<code>./smasdb_unix_helper.sh -k</code>

Starting and stopping the SMAS service

If required to do so, you can start and stop the SMAS service manually.

Windows

To start or stop the EMC Symmetrix Management Application Server in Windows, use the **Services** panel. Click **Control Panel > Administrative Tools > Services** to open the **Services** panel.

Alternatively, you can use the following commands to start or stop the Windows services using the CLI:

```
net start "EMC Symmetrix Management Application Server"
net stop "EMC Symmetrix Management Application Server"
```

Linux

Start the performance database before starting the SMAS service. In the same way, stop the SMAS service before stopping the performance database.

To start or stop the SMAS service in Linux, change to this directory:

```
/etc/init.d
```

and use the following commands:

Action	Command
Start server	<code>./smas start</code>
Stop server	<code>./smas stop</code>

Launching Unisphere for VMAX

To launch Unisphere for VMAX:

1. Type the following URL in a browser:

```
https://host_IP:port_number
```

The port number is configured during installation. The default HTTPS port number is 8443.

Note The use of `localhost` is not supported.

If the host IP address is an IPv6 address, surround the IP address with square brackets, for example:

```
https://[2001:db8:ffff:ffff:ffff:ffff:ffff:ffff]:8443
```

If the host IP address is an IPv4 address, type the IP address as normal, for example:

```
https://198.51.100.255:8443
```

For your browser to access the Unisphere for VMAX console, Flash Player 11.2 or a later release is required. Flash Player is available from the Adobe website.

2. Do one of the following:
 - At the login window, type the Unisphere Initial Setup User username and password, and click **Login**.
The default username for the Unisphere Initial Setup User is `smc` and the default password is `smc`.
 - If you are using certificate-based user authentication, click **Options** to display more options, and select **Use Client Certificate**. If the Unisphere for VMAX login window does not display correctly, ensure that the CA certificates have been imported correctly.
3. Click **Login**.

Launching Database Storage Analyzer

Database Storage Analyser is an application included with Unisphere for VMAX. It provides a database performance troubleshooting solution for Oracle databases (version 10g and above) running on EMC storage systems.

When logging into Database Storage Analyzer, you can use the default Unisphere Initial Setup User. If you have removed the smc user or defined another admin user on the system, create a Database Storage Analyzer admin user in Unisphere for VMAX (Home > Administration > Security > Authorized Users & Groups).

Note To use Database Storage Analyzer with certificate-based user authentication, you must launch Database Storage Analyzer in a standalone fashion, rather than from within Unisphere for VMAX.

To launch Database Storage Analyzer:

1. Type the following URL in a browser:
`https://host_IP:port_number/univmax/dsa`
 The port number is configured during installation. The default HTTPS port number is 8443.
2. At the login window, type the Unisphere Initial Setup User username and password.
 If certificate-based user authentication was enabled when Unisphere for VMAX was installed, the Database Storage Analyzer login window displays with **Use Client's X.509 Certificate** selected and the **User** and **Password** fields dimmed.
3. Click **Login**.

To launch Database Storage Analyzer from within Unisphere for VMAX:

1. In Unisphere for VMAX, select a storage system.
2. Select Databases > Databases to open the Database list view.
3. Click Database Storage Analyzer.
4. At the login window, type the Unisphere Initial Setup User username and password, and click **Login**.

CHAPTER 3

Upgrading Unisphere for VMAX

This chapter explains how to upgrade Unisphere for VMAX:

Upgrade paths	38
Before upgrading Unisphere for VMAX	39
Running the Unisphere for VMAX upgrade	40
After upgrading Unisphere for VMAX	41

Upgrade paths

You can upgrade to Unisphere for VMAX V8.0.3 from Unisphere for VMAX V1.6.2 or Unisphere for VMAX V8.0.x.

The installation program automatically upgrades your installation according to the settings used in the previous installation, including port and connection type.

The following Unisphere for VMAX settings from your previous installation are maintained through the upgrade process:

- ◆ Users
- ◆ Alert policies and threshold settings
- ◆ Email Settings: Mailing list and SMTP configuration
- ◆ Performance dashboard settings
- ◆ Queries

When upgrading from V1.6.2, LDAP/AD configuration information is not retained.

When upgrading from V8.0.x, LDAP/AD configuration information is retained.

Before upgrading Unisphere for VMAX

Before upgrading Unisphere for VMAX, check the size of the performance database folder. For Unisphere for VMAX V1.6.1, the performance database folder is *install_dir\EMC\SMAS\jboss\standalone\data\msq* and for Unisphere for VMAX V8.0.1, and higher, it is *install_dir\EMC\SMAS\jboss\standalone\data\pgsql*.

Ensure that the minimum RAM and disk space requirements for Unisphere for VMAX V8.0.3 are met. For more information about server requirements, see [Pre-installation considerations](#) on page 15.

Before commencing any upgrade process, ensure that backups of all data have been made.

As a safeguard, follow these steps:

1. For each registered storage system, backup the performance database. You must restore each database backup after the upgrade.
2. Take note of the systems registered for collecting performance data. Record the settings for data collection and diagnostic interval for each one.
3. Export the Performance settings (metric and alert definitions and user templates). This operation requires setting a password to use when you import the saved settings to the new system.

Refer to the Unisphere for VMAX online help to perform these tasks.

Running the Unisphere for VMAX upgrade

This section describes how to upgrade the Unisphere for VMAX software.

Upgrading Unisphere for VMAX on Windows

To upgrade Unisphere for VMAX using the wizard on Windows:

1. Access the software, as described in [Step 1: Accessing the software](#) on page 26.
2. Navigate to the location of the kit and run the appropriate executable for your operating system.
3. In the instance detected message window, click **Upgrade Installed Features**.
4. A database backup warning displays. Click **OK** to continue with the upgrade. To preserve performance data, ensure that a backup has been performed.
5. In the **Introduction - Upgrade Unisphere for VMAX** page, click **Next**.
6. If the disk space and/or memory requirements are not met, a warning is displayed. If you want to continue with the upgrade regardless of the consequences described in the message, click **OK**.
7. In the **Pre-Installation Summary** page, click **Install**.
8. When the upgrade process completes, click **Done**.

Upgrading Unisphere for VMAX on Linux

To upgrade Unisphere for VMAX using the command line on Linux:

1. Stop the SMAS service, as described in [Starting and stopping the SMAS service](#) on page 34.
2. Access the software, as described in [Step 1: Accessing the software](#) on page 26.
3. Navigate to the location of the kit and run the appropriate executable for your operating system.
4. When prompted to do so, confirm that you want to upgrade the installed features.
5. The installation script displays the current Unisphere version and the version to which you will upgrade. Press **Enter**.
6. A database backup warning displays. Click **OK** to continue with the upgrade. To preserve performance data, ensure that a backup has been performed.
7. In the **Introduction - Upgrade Unisphere for VMAX** page, click **Next**.
8. In the **Pre-Installation Summary** page, click **Install**. InstallAnywhere guides you through the upgrade installation of Unisphere for VMAX.
9. If the disk space and/or memory requirements are not met, a warning is displayed. If you want to continue with the upgrade regardless of the consequences described in the message, type **1**.
10. Press **Enter** through each option in the upgrade process.
The upgrade process completes.
11. Complete the tasks described in [After upgrading Unisphere for VMAX](#) on the facing page.

After upgrading Unisphere for VMAX

This section describes the tasks to perform after the installation has been completed.

Renewing link and launch client registrations

If you were using link and launch client registrations to launch Unisphere from ProSphere, or vSphere VSI clients, re-register your host with Unisphere for VMAX. The Unisphere help information shows how to do this.

Restoring and verifying system and performance data

To restore and verify system and performance data:

1. Re-register the systems that were collecting performance data before the upgrade.
2. Verify your data collection and diagnostic intervals against the values recorded before the upgrade.
3. Restore your performance database backups using the Unisphere for VMAX console and verify each database.
4. Verify the Performance settings (metric and alert definitions and user templates). If you need to import the Performance settings, use the password you set when you exported the settings.

The Unisphere for VMAX Online Help contains instructions on performing these tasks.

CHAPTER 4

Uninstalling Unisphere for VMAX

This chapter explains how to uninstall Unisphere for VMAX:

Before you begin	44
Uninstalling from Windows	45
Uninstalling from Linux	46

Before you begin

Before uninstalling Unisphere for VMAX, note the following:

- ◆ Uninstalling Unisphere removes the performance database. The Unisphere online help provides instructions on backing up/restoring the performance database should you want to reuse it at a later time.
- ◆ During an uninstallation, the installation program prompts you to export your customized performance settings (metrics and threshold settings only) to a file that can be imported to another Unisphere environment. The Unisphere online help provides instructions on exporting/importing your customized performance settings.

Uninstalling Unisphere terminates all client sessions to the SMAS server and any SYMAPI operations in progress.

Uninstalling from Windows

You can uninstall Unisphere for VMAX from a Windows host using either the Windows **Add/Remove Programs** window, the command line, or Windows Explorer.

Using Windows Add/Remove Programs

The exact steps you need to follow might vary from those listed here, depending on the version of Windows you are using.

To uninstall Unisphere for VMAX from the Windows Add/Remove Programs window:

1. From the Windows **Start** menu, select **Settings, Control Panel, Add/Remove Programs**.
2. In the **Add/Remove Programs** dialog, select **EMC Unisphere for VMAX** and click **Change/Remove**.
3. Complete the remaining steps in the wizard.

Using the command line

To uninstall Unisphere for VMAX using the command line:

1. Change directory location to:
`install_dir\SMAS\_EMC_SMAS_installation`
2. Type the following to launch the uninstallation wizard:
`Uninstall_EMC_SMAS_Installation.exe -i console`
3. Complete the steps in the wizard.

A few files remain after the uninstallation operation. To remove them you can delete the SMAS folder.

Using Windows Explorer

To uninstall Unisphere for VMAX using Windows Explorer:

1. Double-click the following to launch the uninstallation wizard:
`install_dir\SMAS\_EMC_SMAS_installation\Uninstall_EMC_SMAS_Installation.exe`
2. Complete the steps in the wizard.

A few files remain after the uninstallation operation. To remove them you can delete the SMAS folder.

Uninstalling from Linux

You can uninstall Unisphere for VMAX from a Linux host using either the wizard or the command line.

Using the wizard

Using the wizard to uninstall Unisphere for VMAX is not supported on virtual machines.

To uninstall Unisphere for VMAX from a Linux host using the wizard:

1. Navigate to the following directory:

```
install_dir/SMAS/_EMC_SMAS_installation
```

2. Type the following to launch the uninstallation wizard:

```
./Uninstall_EMC_SMAS_Installation -i swing
```

3. Complete the steps in the wizard.

A few files remain after the uninstallation operation. To remove them you can delete the SMAS folder.

Using the command line

To uninstall Unisphere for VMAX from a Linux host using the command line:

1. Navigate to the following directory:

```
install_dir/SMAS/_EMC_SMAS_installation
```

2. Type the following to launch the uninstallation wizard:

```
./Uninstall_EMC_SMAS_Installation -i console
```

3. Complete the steps in the wizard.

A few files remain after the uninstallation operation. To remove them you can delete the SMAS folder.

CHAPTER 5

Installing the Unisphere for VMAX virtual appliance

This chapter shows how to install the Unisphere for VMAX Virtual Appliance in a VMware infrastructure environment:

- Introduction 48
- Before you begin 50
- Installing the virtual appliance directly on the ESX Server 51
- Installing the virtual appliance through a vCenter Server 56
- Installing the virtual appliance using OVFTOOL 58
- Launching Unisphere or the vApp Manager 61
- Registering the VASA Provider with vSphere 63
- Upgrading the Unisphere for VMAX Virtual Appliance using an ISO image 64
- Re-configuring the virtual appliance IP address 66
- Deleting the Unisphere for VMAX Virtual Appliance 68
- Backing up and restoring the performance database 69
- Installing licenses 71

Introduction

The Unisphere for VMAX Virtual Appliance is a VMware ESX Server virtual appliance that provides all of the components you need to manage your VMAX environment using the `storsrvd` daemon and Solutions Enabler network client access. These include:

- ◆ EMC Unisphere for VMAX V8.0.3.
- ◆ EMC Solutions Enabler V8.0.3 (solely intended as a SYMAPI server for Solutions Enabler client access).
- ◆ Linux OS (SUSE 11 SP3).

Root login is not supported on SUSE 11 SP3 virtual machines.

- ◆ SMI-S Provider V8.0.3.

In addition, the appliances include a browser-based console to configure your storage environment. The Unisphere for VMAX vApp Manager enables you to perform configuration tasks not available in the appliances directly.

Using this console, you can perform the following tasks:

- ◆ Launch Unisphere
- ◆ Monitor the application status
- ◆ Start and stop selected daemons
- ◆ Download persistent data
- ◆ Configure the nethost file (required for client access)
- ◆ Discover storage systems
- ◆ Modify options and daemon options
- ◆ Add host-based license keys
- ◆ Run a limited set of Solutions Enabler CLI commands
- ◆ Configure ESX host and gatekeeper volumes
- ◆ Load VMAX-based eLicenses
- ◆ Configure LDAP
- ◆ Configure iSCSI initiator and map iSCSI gatekeeper volumes
- ◆ Configure additional NIC card (optional)
- ◆ Download SYMAPI debug logs
- ◆ Import CA signed certificate for web browser
- ◆ Import custom certificate for `storsrvd` daemon
- ◆ Check disk usage

- ◆ Clear temporary files
- ◆ Restart appliance
- ◆ Configure symavoid entries
- ◆ Enable SSH
- ◆ Manage users
- ◆ Reset hostname
- ◆ Update `/etc/hosts` file

For information on using the Unisphere for VMAX vApp Manager, refer to its online help.

Before you begin

Before you begin to install Unisphere for VMAX Virtual Appliance, carry out the tasks in this section.

- ◆ Verify that you are installing the latest version of the appliance by checking EMC Online Support for updates.
- ◆ Verify that the client is running:
 - VMware vSphere client
 - One of the following browsers with cookies and Javascript enabled:
 - Internet Explorer 9.0 through 11.0 (Desktop only)
 - Firefox 30 or higher
 - Chrome 21.0.1180 or higher

Browsers should have Flash Player 11.2 or a later release installed. If your browser has an outdated version of Flash Player, you are prompted to download the latest version when you start the web console.

- ◆ Verify that the virtual machine is not running shared memory/resources.
- ◆ Verify that the VMware ESX Server meets the following minimum requirements:

Table 3: Unisphere for VMAX Virtual Appliance VMware ESX Server requirements

ESX Server component	Requirement
Processor	Dual-core or two CPUs
ESX Server version	4.0 or higher
Disk space	120 GB
Memory	16 GB for exclusive use by Unisphere for VMAX

Note If you are upgrading to V8.0.3, the available memory is checked as part of the upgrade operation. If the requirement is not met, the upgrade is canceled.

Installing the virtual appliance directly on the ESX Server

This section describes how to install the Unisphere for VMAX Virtual Appliance directly on the ESX Server.

Step 2 has three configuration options, depending on the virtual appliance network connection:

- ◆ IPv4 only — [Step 2A: Powering on and configuring the virtual appliance \(IPv4 only\)](#) on the next page
Use this option if the DNS server does not support IPv6 hostnames or the DNS/ESX server is configured on an IPv4-only network.
- ◆ IPv6 only — [Step 2B: Powering on and configuring the virtual appliance \(IPv6 only\)](#) on page 53
Use this configuration if the network configuration for the virtual appliance is IPv6 only. The virtual appliance is not able to communicate with an IPv4 host unless IPv6 packets are encapsulated inside IPv6 packets using tunneling.
- ◆ Dual stack — [Step 2C: Powering on and configuring the virtual appliance \(Dual stack\)](#) on page 54
Use this configuration if the system is configured for both IPv4 and IPv6. The system supports both formats but IPv6 addresses are used for configuring the vApp Manager, SMAS and storsrvd. An IPv4 address is used only for reaching IPv4 DNS and ESX servers.

Step 1: Installing the virtual appliance

To install the virtual appliance:

1. On the EMC Online Support site:
 - a. Click **Support By Product** in the main navigation bar.
 - b. In the Find a Product box, type **Unisphere for VMAX** and click the arrow.
 - c. Locate the appropriate kit and download the OVF archive file (*.ova) containing the installation program to a temporary directory:

Unisphere for VMAX Virtual Appliance file name:
univmaxpa803_x_suse11_x86_64_vapp_OVF10.ova

Where **x** in **803_x** represents the build number. That number varies depending on when the software was built.
2. Start the vSphere Client and log in to the ESX Server on which you want to install the appliance.
3. Click **Ignore** in the security warning message.
4. From the **File** menu, select **Deploy OVF Template**.
5. Browse to the OVF archive file, located in the temporary directory you created earlier. Select the OVF archive file with the suffix ***vapp_OVF10.ova**.
6. Click **Next**.
7. On the OVF Template Details page, verify the details about the appliance and click **Next**.
8. On the End User License Agreement page, select **Accept** and click **Next**.
9. On the Name and Location page, specify a name for the appliance and click **Next**.
10. On the Disk Format page, select the format in which to store the virtual machine's virtual disks and click **Next**.

11. On the Network Mapping page, select the network you want the virtual appliance to use and click **Next**.
12. On the Ready to Complete page, verify the information and click **Finish**.
13. In the Completed Successfully message, click **Close**.

Step 2A: Powering on and configuring the virtual appliance (IPv4 only)

When configuring a virtual appliance, for each prompt, type the information requested, press **Enter**, and then confirm that the information you entered is correct.

To power on and configure the IPv4-only virtual appliance:

1. On the Summary page of the Virtual Infrastructure Client, click **Power On**.
2. Click the **Console** tab and watch as the appliance starts up.
3. When prompted to do so, specify whether you want to configure an IPv4 or an IPv6 IP address:


```
Please select your static network configuration [1]/2:
For IPv4: Enter 1
For IPv6: Enter 2
Enter your choice [1]/2:
Select IPv4. The following information is requested:
```

 - IP Address []:

Type the address assigned to the appliance.

The virtual appliance uses this IP address to query the DNS server and get its hostname. Therefore, you must ensure that the IP address has a hostname mapping in the DNS server.
 - Netmask []:

Type the mask of the network on which the appliance is located.
 - Gateway []:

Type the gateway address to the network on which the appliance is located.
 - DNS1 []:

Type the IP address of the first DNS server and press **Enter**.
 - DNS2 []:

Type the IP address of the second DNS server and press **Enter**.
 - Is a proxy server necessary to reach the internet? y/n [n]:

Type **y** to configure a proxy server. For each of the following prompts, type the information requested, press **Enter**:

 - ProxyServer []:

Type the IP address of the proxy server and press **Enter**.
 - ProxyPort []:

Type the proxy port and press **Enter**.

Type **n** to continue the configuration without configuring a proxy server.

You have now finished installing the Unisphere Virtual Appliance.

4. Continue with [Step 3: Adding gatekeepers](#).

Step 2B: Powering on and configuring the virtual appliance (IPv6 only)

When configuring a virtual appliance, for each prompt, type the information requested, press **Enter**, and then confirm that the information you entered is correct.

In an IPv6-only configuration, any DNS configured have IPv6 addresses. If you want to use one or more DNS servers with IPv4 addresses, see [Step 2C: Powering on and configuring the virtual appliance \(Dual stack\)](#) on the next page.

To power on and configure the IPv6-only virtual appliance:

1. On the Summary page of the Virtual Infrastructure Client, click **Power On**.
2. Click the **Console** tab and watch as the appliance starts up.
3. When prompted to do so, specify whether you want to configure an IPv4 or an IPv6 IP address:

```
Please select your static network configuration [1]/2:
```

```
For IPv4: Enter 1
```

```
For IPv6: Enter 2
```

```
Enter your choice [1]/2:
```

Select IPv6. The following information is requested:

- Does your DNS server configured supports IPv6 hostnames? y/[n]
:

To continue, type **y**. If you type **n**, configuration cancels.

- IP Address []:

Type the IPv6 address assigned to the appliance.

The virtual appliance uses this IP address to query the DNS server and get its hostname. Therefore, you must ensure that the IP address has a hostname mapping in the DNS server.

- Prefix []:

Type the prefix length of the network on which the appliance is located.

- Gateway []:

Type the gateway address to the network on which the appliance is located.

- DNS1 []:

Type the IPv6 address of the first DNS server of the network on which the appliance is located.

- DNS2 []:

Optional: Type the IPv6 address of the second DNS server of the network on which the appliance is located.

You have now finished installing the Unisphere Virtual Appliance.

4. Continue with [Step 3: Adding gatekeepers](#).

Step 2C: Powering on and configuring the virtual appliance (Dual stack)

When configuring a virtual appliance, for each prompt, type the information requested, press **Enter**, and then confirm that the information you entered is correct.

In a dual stack configuration, one or more of the DNS servers configured has an IPv4 address. If you want to use only DNS servers with IPv6 addresses, see [Step 2B: Powering on and configuring the virtual appliance \(IPv6 only\)](#) on the previous page.

To power on and configure the dual stack virtual appliance:

1. On the Summary page of the Virtual Infrastructure Client, click **Power On**.
2. Click the **Console** tab and watch as the appliance starts up.
3. When prompted to do so, specify whether you want to configure an IPv4 or an IPv6 IP address:

```
Please select your static network configuration [1]/2:
```

```
For IPv4: Enter 1
```

```
For IPv6: Enter 2
```

```
Enter your choice [1]/2:
```

Select IPv6. The following information is requested:

- Does your DNS server configured supports IPv6 hostnames? y/[n]
:

To continue, type **y**. If you type **n**, configuration cancels.

- IP Address []:

Type the IPv6 address assigned to the appliance.

The virtual appliance uses this IP address to query the DNS server and get its hostname. Therefore, you must ensure that the IP address has a hostname mapping in the DNS server.

- Prefix []:

Type the prefix length of the network on which the appliance is located.

- Gateway []:

Type the gateway address to the network on which the appliance is located.

- DNS1 []:

Type the IP address (IPv4 or IPv6) of the first DNS server of the network on which the appliance is located.

- DNS2 []:

Optional: Type the IP address (IPv4 or IPv6) of the second DNS server of the network on which the appliance is located.

4. If you entered an IPv4 IP address for one or more DNS servers, you are prompted to specify additional IPv4 configuration information for those DNS servers:

- IPv4 Address []:

Type the IPv4 address assigned to the appliance.

- Netmask []:

Type the mask of the network on which the appliance is located.

- Gateway []:
Type the gateway address to the network on which the appliance is located.
- Is a proxy server necessary to reach the internet? y/n [n]:
Type **y** to specify the IP address of the proxy server and the port.
Type **n** to continue the configuration without configuring a proxy server.

You have now finished installing the Unisphere Virtual Appliance.

5. Continue with [Step 3: Adding gatekeepers](#).

Step 3: Adding gatekeepers

Solution Enabler manages VMAX arrays through gatekeeper volumes mapped to the virtual appliance as RDM pass-through volumes. The management is done through EMC proprietary commands using SCSI 3B/3C WRITE/READ commands. For every call, a WRITE command is issued to send the request, and then a READ command to get the results.

Unisphere for VMAX requires gatekeepers. For specific recommendations on the number of gatekeepers required for all VMAX configurations, refer to EMC Knowledgebase solution emc255976 available on the EMC Online Support site.

1. Use either of the following methods to add gatekeeper volumes:
 - Add them through the vApp Manager. For instructions, refer to the vApp Manager online help.

Note After adding gatekeepers through the vApp Manager, restart the SMC daemon through the vApp Manager.

- Present them as raw device mapping (RDM) volumes through the vSphere client. For instructions, refer to the appropriate VMware documentation.
2. Continue with [Launching Unisphere or the vApp Manager](#) on page 61.

Installing the virtual appliance through a vCenter Server

This section describes how to install the virtual appliance through a vCenter Server 4.0 and higher.

Step 1: Configuring the virtual appliance

To configure the virtual appliance:

1. On the EMC Online Support site:
 - a. Click **Support By Product** in the main navigation bar.
 - b. In the **Find a Product** field, type **Unisphere for VMAX** and click the arrow.
 - c. Locate the appropriate kit and download the OVF archive file (*.ova) containing the installation program to a temporary directory:

Unisphere for VMAX Virtual Appliance file name:
`univmaxpa803_x_suse11_x86_64_vapp_OVF10.ova`
- Note** In the file name above, the **x** in **803_x** represents the build number. That number varies based on when the software was built.
2. Start the vSphere Client and log in to the vCenter Infrastructure Server through which you want to install the virtual appliance.
3. Click **Ignore** in the security warning message.
4. From the navigation tree, select the ESX Server on which you want to install the virtual appliance.
5. From the File menu, select **Deploy OVF Template**.
6. Browse to the OVF archive file, located in the temporary directory you created earlier. Select the OVF archive file with the suffix `*vapp_OVF10.ova`.
7. Click **Next**.
8. On the OVF Template Details page, verify the details about the appliance and click **Next**.
9. On the End User License Agreement page, select **Accept** and click **Next**.
10. On the Name and Location page, specify a name for the appliance and click **Next**.
11. Select the host/cluster on which to run the virtual appliance.
12. If the resource pool is available, select it; otherwise, continue with this procedure.
13. If more than one datastore is attached to the ESX Server, select the datastore for your appliance; otherwise, continue with this procedure.
14. On the Network Mapping page, select the network you want the virtual appliance to use and click **Next**.
15. On the Properties page, provide valid values for and confirm the following OVF properties:
 - IP Address
Type the IPv4 or IPv6 address to be assigned to eth0.
 - Netmask or Prefix
Type the netmask (IPv4 only) or prefix (IPv6 only) of the network on which the virtual appliance is located.
 - Gateway
Type the gateway address to the network on which the appliance is located.

- IPv4 Address for dual stack [Optional]
IPv4 address for dual stack.
- IPv4 Netmask for dual stack [Optional]
IPv4 netmask address for dual stack.
- IPv4 Gateway for dual stack [Optional]
IPv4 gateway for address for dual stack.
- DNS Server 1
Type the DNS address of the network on which the appliance is located.
- DNS Server 2
Optional: Type the DNS address of the network on which the appliance is located
- Timezone
Optional: Select the appropriate time zone.
- Proxy Server
Optional: Enter the IP address of the proxy server and port. For example:
proxy_server_IP:port_number
- *Optional:* ESX Server Name
Enter the fully qualified ESX Server hostname.
- *Optional:* ESX Server Password
Enter the ESX Server password in base64 encryption format.

Ignore the “Network Properties” section that appears in vSphere V5.0 and higher.
Click **Next**.

16. On the Ready to Complete page, verify the information and click **Finish**.
17. In the Completed Successfully message, click **Close**.

Step 2: Powering on the virtual appliance

To power on the virtual appliance

1. On the Summary page of the Virtual Infrastructure Client, click **Power On**.
2. Click the **Console** tab and watch as the appliance starts up.
A Welcome screen opens. You have now finished installing the Virtual Appliance.
3. Continue with [Step 3: Selecting gatekeepers](#).

Step 3: Selecting gatekeepers

Select gatekeepers as described in [Step 3: Adding gatekeepers](#) on page 55.

Installing the virtual appliance using OVFTOOL

You can install the virtual appliance through the command line from any Windows or Linux host. This section explains how to install the virtual appliance using OVFTOOL.

To install the virtual appliance using OVFTOOL, the following are required:

- ◆ vCenter Server 4.0 or a later release.
- ◆ ESX Server 4.0 or a later release managed by vCenter Server 4.x.
- ◆ VMware OVFTOOL 1.0 or a later release.

Refer to the appropriate documentation for installing vCenter Server and VMware OVFTOOL.

Here is a brief description of the steps on how to install the virtual appliance using OVFTOOL:

1. Install and set up the vCenter Server.
2. Add the ESX Server to the vCenter Server datacenter.
3. Install VMware OVFTOOL on a Windows or Linux host.
4. Move the Unisphere for VMAX Virtual Appliance kit to the same Linux host.
5. Run the ovftool command with necessary command line switches. For more information on using the command, refer to [Using OVFTOOL](#) below.

Unisphere for VMAX Virtual Appliance is installed and powered on automatically.

6. Add Gatekeepers.
7. Continue with [Launching Unisphere or the vApp Manager](#) on page 61.

Using OVFTOOL

When deploying an IPv4-only or IPv6-only network configuration, OVFTOOL has the following syntax:

```
ovftool --acceptAllEulas --overwrite --powerOffTarget --powerOn
--prop:ipAddress=<IP-ADDRESS>
--prop:netmask_or_prefix=<NETMASK-OR-PREFIX>
--prop:gateway=<GATEWAY> --prop:dns1=<DNS1> --prop:dns2=<DNS2>
--prop:timezone=<TIMEZONE> --prop:esxServer=<ESX-SERVER-NAME>
--prop:encryRootPasswd=<ROOT-PASSWORD> --name=<VAPP-NAME>
--datastore=<DATASTORE> --net:Network\ 1=VM\ Network
--net:Network\ 2=VM\ Network --network=VM\ Network <OVA-FILE>
vi://<VCENTER ADMIN ACCOUNT>:<VCENTER-ADMIN-PASSWORD>@
<VCENTER-HOST>/host/<ESX-SERVER-NAME>
```

When deploying a dual-stack network configuration, OVFTOOL has the following syntax:

```
ovftool --acceptAllEulas --overwrite --powerOffTarget --powerOn
--prop:ipAddress=<IP-ADDRESS>
--prop:netmask_or_prefix=<NETMASK-OR-PREFIX>
--prop:gateway=<GATEWAY> --prop:ipv4_address=<IPV4-ADDRESS>
--prop:ipv4_gateway=<IPV4-GATEWAY>
--prop:ipv4_netmask=<IPV4-NETMASK> --prop:dns1=<DNS1>
--prop:dns2=<DNS2> --prop:timezone=<TIMEZONE>
--prop:esxServer=<ESX-SERVER-NAME>
--prop:encryRootPasswd=<ROOT-PASSWORD> --name=<VAPP-NAME>
--datastore=<DATASTORE> --net:Network\ 1=VM\ Network
--net:Network\ 2=VM\ Network --network=VM\ Network <OVA-FILE>
vi://<VCENTER ADMIN ACCOUNT>:<VCENTER-ADMIN-PASSWORD>@
<VCENTER-HOST>/host/<ESX-SERVER-NAME>
```

Parameter	Description
IP-ADDRESS	IP address of the virtual appliance
NETMASK-OR-PREFIX	Netmask or prefix of the virtual appliance
GATEWAY	Gateway
IPV4-ADDRESS	IPv4 address (Dual stack only)
IPV4-GATEWAY	IPv4 address of the gateway (Dual stack only)
IPV4-NETMASK	IPv4 netmask (Dual stack only)
DNS1	IP address of DNS server 1
DNS2	IP address of DNS server 2
TIMEZONE	Time zone setting. (Optional)
ESX-SERVER	Fully qualified hostname of ESX Server. (Optional)
ROOT-PASSWORD	Root password of ESX Server in base64 encrypted format. (Optional)
VAPP-NAME	VM Displayname To automatically add gatekeeper volumes during virtual appliance boot, VM Displayname must be the same as the fully qualified hostname of the virtual appliance.
DATASTORE	Name of the datastore attached to ESX Server Required only if more than one datastore is attached to ESX Server
OVA-FILE	Absolute path of ova file
VCENTER-HOST	Name of the vCenter
VCENTER-ADMIN-PASSWORD	vCenter Server's Administrator password
ESX-SERVER-NAME	ESX Server name as displayed in the vCenter Server

Examples

The following command is an example for an IPv4 configuration:

```
/usr/bin/ovftool --acceptAllEulas --overwrite --powerOffTarget
--powerOn --prop:ipAddress=192.0.2.1
--prop:netmask_or_prefix=255.255.252.0
--prop:gateway=198.51.100.1 --prop:dns1=203.0.113.1
--prop:dns2=203.0.113.2 --prop:timezone=America/New_York
--prop:esxServer=api4194.example.com
--prop:encryRootPasswd=XXXXXXXXXX --name=SE_ipv4_99.example.com
--datastore=api4134_local --net:Network\ 1=VM\ Network
--net:Network\ 2=VM\ Network --network=VM\
Network univmaxpa803_108_suse11_x86_64_vapp_OVF10.ova
vi://XXXX: XXXXXXXXXXXX @API4195/"vApp Build"/host/api4134.example.com
```

The following command is an example for an IPv6 configuration:

```
/usr/bin/ovftool --acceptAllEulas --overwrite --powerOffTarget
--powerOn --prop:ipAddress=2001:DB8:0:0:0:0:1:1
--prop:netmask_or_prefix=64 --prop:gateway=2001:DB8:1:0:0:0:0:1
--prop:dns1=2001:DB8:1:1:0:0:0:1 --prop:dns2=2001:DB8:1:1:0:0:0:2
--prop:timezone=America/New_York
--prop:esxServer=api4194.example.com
--prop:encryRootPasswd= XXXXXXXXXXXX --name=SE_ipv6_1001.example.com
--datastore=api4134_local --net:Network\ 1=VM\ Network
--net:Network\ 2=VM\ Network --network=VM\
Network univmaxpa803_108_suse11_x86_64_vapp_OVF10.ova
vi://XXXX: XXXXXXXXXXXX @API4195/"vApp Build"/host/api4134.example.com
```

The following command is an example for a dual stack configuration:

```
/usr/bin/ovftool --acceptAllEulas --overwrite --powerOffTarget
--powerOn --prop:ipAddress=2001:DB8:0:0:0:0:1:2
--prop:netmask_or_prefix=64 --prop:gateway=2001:DB8:1:0:0:0:0:2
--prop:dns1=2001:DB8:1:1:0:0:0:1 --prop:ipv4_address=192.0.2.2
--prop:ipv4gateway=198.51.100.2 --prop:ipv4_netmask=255.255.252.0
--prop:dns2=2001:DB8:1:1:0:0:0:2 --prop:timezone=America/New_York
--prop:esxServer=api4194.example.com
--prop:encryRootPasswd= XXXXXXXXXXXX
--name=SE_ipv6_1001.example.com --datastore=api4134_local
--net:Network\ 1=VM\ Network --net:Network\ 2=VM\ Network
--network=VM\ Network
```

Launching Unisphere or the vApp Manager

After you have installed the appliance, you can either launch Unisphere for VMAX or the vApp Manager, and/or connect to the API server through the Solutions Enabler client.

Launching Unisphere

To launch Unisphere:

1. Type one of the following URLs in a browser:

`https://appliance_IP:unisphere_port_number`

or

`https://appliance_host_name:unisphere_port_number`

The Unisphere port number is configured during installation. The default HTTPS port number is 8443.

If the host IP address is an IPv6 address, surround the IP address with square brackets, for example:

`https://[2001:db8:ffff:ffff:ffff:ffff:ffff:ffff]:8443`

If the host IP address is an IPv4 address, type the IP address as normal, for example:

`https://198.51.100.255:8443`

For your browser to access the Unisphere for VMAX console, Flash Player 11.2 or a later release is required. Flash Player is available from the Adobe website.

2. At the login window, type the Unisphere Initial Setup User username and password, and click **Login**.

The default username for the Unisphere Initial Setup User is `smc` and the default password is `smc`.

Launching the vApp Manager

To launch the vApp Manager:

1. Type one of the following URLs in a browser:

`https://appliance_IP:5480`

or

`https://appliance_host_name:5480`

If the host IP address is an IPv6 address, surround the IP address with square brackets, for example:

`https://[2001:db8:ffff:ffff:ffff:ffff:ffff:ffff]:8443`

If the host IP address is an IPv4 address, type the IP address as normal, for example:

`https://198.51.100.255:8443`

For either of the URLs above, the browser is redirected as shown in the next table.

Original URL	Redirected URL
<code>https://appliance_IP:5480</code>	<code>https://appliance_IP:unisphere_port_number/SE</code>
<code>https://appliance_host_name:5480</code>	<code>https://appliance_IP:unisphere_port_number/SE</code>

- On the log in panel, type **seconfig** for both the User and Password, and then click **Login**.

The first time you login, you must change your password. The vApp Manager can also be configured to use LDAP for user authentication. For more information, refer to the vApp Manager online help.

The vApp Manager appears. For information on using the vApp Manager, refer to its online help.

Connecting to the API server

For instructions on connecting to the API server, refer to the *EMC Solutions Enabler Installation Guide*.

Setting the storevntd daemon to start automatically

Ensure that the storevntd daemon is configured to start automatically.

To set the storevntd daemon to start automatically:

- On the vApp Manager dashboard, select the **Manage Daemons** tab.
- In the **Daemon** column, locate the storevntd daemon.
- Ensure that the button displayed in the **AutoStart** column has the text **Unset**. That is, the daemon is configured to start automatically and the only option available is to unset the auto-start property for that daemon. If necessary, set the auto-start property.

Registering the VASA Provider with vSphere

VMware APIs for Storage Awareness (VASA) Provider improves VMware vSphere's ability to monitor and automate storage-related operations. VASA Provider reports information about storage topology, capabilities, and status, as well as storage events and alerts to VMware. It is a standard vSphere management plug-in that is installed on each vCenter Server, and it interacts with VMware APIs for Storage Awareness.

To register the VASA Provider with vSphere

1. Connect to the VMware vCenter Server 5.0 or a later release using vSphere Client.
2. In the Virtual Data Center, navigate to **Home > Administration > Storage Providers**, and click **Storage Providers** in the navigator bar.
3. In the Vendor Providers pane, select **Add**.
4. Add the vendor provider properties (name, URL, and login information).
For ECOM login credentials, refer to SMI-S Provider documentation.
For the URL, use `https://vapp_ip:5989/vasa/services/vasaService`
When the VASA Provider is connected, the VI Client displays the SSL certificate.
5. Click **Yes** to complete the registration.
6. Verify registration with vSphere:
 - a. Navigate to **Home > Administration > Storage Providers > Vendor Providers**.
 - b. Verify that the VASA Provider is listed and displays the list of managed storage systems.

Upgrading the Unisphere for VMAX Virtual Appliance using an ISO image

Periodically, EMC releases virtual appliances with security patches and hotfixes for the virtual appliance. These are available on the EMC online support website as ISO files. If you are running Unisphere for VMAX 1.6.x, or higher, you can download and use an ISO upgrade file.

From:	To:	Complete:
Unisphere V1.6.x or a later release	Unisphere for VMAX V8.0.3	Step 1: Downloading the ISO upgrade file below. Step 2: Uploading the ISO upgrade file to the datastore below Step 3: Mounting the ISO image on the facing page. Step 4: Completing the upgrade on the facing page.

Before you begin

Ensure that the ESX Server minimum hardware requirements for the version to which you are upgrading are met before commencing the upgrade procedure. The available memory is checked as part of the upgrade operation and if the requirements are not met, the upgrade is canceled.

For more information about the ESX Server hardware requirements for Unisphere for VMAX Virtual Appliance, see [Unisphere for VMAX Virtual Appliance VMware ESX Server requirements](#) on page 50.

Step 1: Downloading the ISO upgrade file

1. In a browser, navigate to the EMC Online Support site at:

<https://support.EMC.com>

2. Locate and download the following file:

UNIVMAX803_x_se803_x_vapp_upgrade_x86_64.iso

In the file name above, **x** in **803_x** and the **x** in **803_x** represent software build numbers. Those numbers vary based on when the software was built.

Step 2: Uploading the ISO upgrade file to the datastore

After the download is completed, upload the ISO file to the ESC server using the VI client.

1. Using the VI client, log in to the ESX Server.
2. In the left pane, select the ESX Server.
3. In the right pane, select the **Configuration** tab.
4. To list the datastores connected to the ESX Server, select **Hardware > Storage**.
5. Right-click the datastore and select **Browse Datastore**.
6. In the **Datastore Browser** window that displays, click **Upload files**. The **Upload Items** dialog box opens.
7. Navigate to where you saved the ISO upgrade file, select the file, and click **Open**.

8. In the **Upload/Download Operation** dialog box that displays, click **Yes** to accept the warning.

Step 3: Mounting the ISO image

1. Right-click the virtual appliance and select **Edit Settings**.
2. On the Hardware tab, select **CD/DVD Drive 1**.
3. In the right pane, select **Datastore ISO File** and click **Browse**.
4. Browse to the location of the ISO file on the datastore and select the file.
5. Verify that under Device Status, the **Connect at power on** box is selected and click **OK**.

Step 4: Completing the upgrade

1. Restart the Guest by selecting **Power On Guest**.
2. On the Console tab, go to the virtual appliance console.
3. In the lower section of the screen, select **Appliance Update** from the list of options.
4. Press the **Enter** key to start the upgrade. After the upgrade has been completed, the console screen displays.

Re-configuring the virtual appliance IP address

You can reconfigure only the network configuration selected when the virtual appliance was first installed.

For example, if you initially set up an IPv6-only configuration, you can reconfigure the IPv6 network parameters but you cannot change it to a dual-stack configuration.

To re-configure a virtual appliance with an IPv4 address configuration:

1. Log in to the vSphere client and navigate to the virtual appliance console.
2. Use the **Move Up/Move Down** keys to select **Configure IP** and press **Enter**.
3. At the following prompt, type **y** and press **Enter** to configure the static IP address:

Do you want to configure static IP address?

The following series of prompts enable you to reconfigure your network:

- IP Address []:
Type a valid IP address and press the **Enter** key.
The virtual appliance uses this IP address to query the DNS server and get its hostname. Therefore, you must ensure that the IP address has hostname mapping on the DNS server.
- Netmask []:
Type the mask of the network on which the appliance is located and press the **Enter** key.
- Gateway []:
Type the gateway address to the network on which the appliance is located and press the **Enter** key.
- DNS1 []:
Type the first DNS server address and press the **Enter** key.
- DNS2 []:
Type the second DNS server address and press the **Enter** key.
- Is a proxy server necessary to reach the internet? y/[n]:
Type **y** to specify the IP address of the proxy server and the port.
Type **n** to continue the configuration without specifying a proxy server.
- Are the above mentioned parameters correct? [y]/n:
Type **y** to re-configure the virtual appliance IP address and return to the console.
Type **n** to go back and change your responses.

To re-configure a virtual appliance on an IPv6-only address configured vApp:

1. Log in to the vSphere client and navigate to the virtual appliance console.
2. Use the **Move Up/Move Down** keys to select **Configure IP** and press **Enter**.
3. The following series of prompts enable you to reconfigure your network:
 - IP Address [*current_ip_address*]:
Type a valid IPv6 address and press the **Enter** key.
 - Prefix [*current_prefix*]:

Type the prefix of the network on which the appliance is located and press the **Enter** key.

- Gateway [*current_gateway*]:

Type the gateway address to the network on which the appliance is located and press the **Enter** key.

- DNS1 [*current_dns_1*]:

Type the first DNS server address and press the **Enter** key.

- DNS2 [*current_dns_2*]:

Type the second DNS server address and press the **Enter** key.

To re-configure a virtual appliance on a dual-stack configured vApp:

1. Log in to the vSphere client and navigate to the virtual appliance console.
2. Use the **Move Up/Move Down** keys to select **Configure IP** and press **Enter**.
3. The following series of prompts enable you to reconfigure your network:
 - IP Address [*current_ip_address*]:
Type a valid IPv6 address and press the **Enter** key.
 - Prefix [*current_prefix*]:
Type the prefix of the network on which the appliance is located and press the **Enter** key.
 - Gateway [*current_gateway*]:
Type the gateway address to the network on which the appliance is located and press the **Enter** key.
 - DNS1 [*current_dns_1*]:
Type the first DNS server address and press the **Enter** key.
 - DNS2 [*current_dns_2*]:
Type the second DNS server address and press the **Enter** key.
 - IPv4 Address [*current_ipv4_address*]:
Type the IPv4 address and press the **Enter** key.
 - Netmask [*current_netmask*]:
Type the netmask of the network on which the appliance is located and press the **Enter** key.
 - Gateway for IPv4 [*current_ipv4_gateway*]:
Type the IPv4 gateway address and press the **Enter** key.

Deleting the Unisphere for VMAX Virtual Appliance

To delete the Unisphere for VMAX Virtual Appliance:

1. *Optional:* If you plan to restore Unisphere and Solutions Enabler persistent data, back up the persistent data in the Unisphere for VMAX Virtual Appliance console.
Optional: If you plan to restore the performance database, backup the database according to [Backing up and restoring the performance database](#) on the facing page.
2. In the VMware management interface, power off the appliance.
3. Right-click on the appliance and select **Delete From Disk**.
4. Click **Yes** in the confirmation message.

Backing up and restoring the performance database

You can transfer performance database files between the appliance and another host for file backup and restoration. There is no facility in the appliance user interface to perform this process. However, when you are logged in to the system with the `vappadmin` user account, you can transfer these files.

The `vappadmin` user account is limited to performing the following commands for transferring database files:

`passwd` — Changes the login password.

`sftp` — Transfers database backup files into the appliance from another host, or out of the appliance to another host.

`df` — Checks disk usage.

`manage_spa_db_backup.sh` — Moves files between the backup location and staging location, and lists and cleans backup and staging locations.

Backing up performance database files to another host

From the system console, perform the following steps:

1. Log in to the vApp Manager (https://host_name:port_number) and start the database backup process as described in the Unisphere help.
2. Log in to the system using the `vappadmin` user account. The first time that you log in, use the default password **vappadmin**. After you are logged in, change the password by running the `passwd` command, which prompts for the old and new passwords.
3. View the backup files in the backup location:

```
manage_spa_db_backup.sh -list -backup
```

4. Move the backup files from the backup location to the staging location:

```
manage_spa_db_backup.sh -stage
```

This operation moves the files from the backup area to the staging area (the home directory for the `vappadmin` user account).

5. View the backup files in the staging location:

```
manage_spa_db_backup.sh -list -staging
```

6. Transfer the backup file copies out of the appliance to the backup host. Use the following `sftp` command to access the backup host and then transfer any files ending in `.dat`.

```
sftp user_name@fully_qualified_host_name
```

Restoring performance database files from another host

From the system console perform the following steps:

1. Log in to the system using the `vappadmin` user account. The first time that you log in, use the default password `vappadmin`. After you have logged in, change the password by running the `passwd` command which prompts for the old and new passwords.
2. Check for available disk space:

```
df -h
```

3. Transfer the backup file copies from the backup host to the appliance. Use the following `sftp` command to access the backup host and then transfer any files ending in `.dat`.

```
sftp user_name@fully_qualified_host_name
```

4. View the backup files in the staging location:

```
manage_spa_db_backup.sh -list -staging
```

5. Move the backup files from the staging location to the backup location:

```
manage_spa_db_backup.sh -restore
```

6. Log in to Unisphere (https://host_name:port_number) and start the database restore process as described in the Unisphere help.

7. After the restoration has been completed and backup files are no longer needed, clean the backup and staging locations:

```
manage_spa_db_backup.sh -clean -all
```

Installing licenses

This section shows how to install VMAX-based and host-based licenses, using the virtual appliance. For more information on licensing, refer to the *EMC Solutions Enabler Installation Guide*.

Installing VMAX-based licenses

VMAX-based licenses are used to license features on VMAX arrays running Enginuity 5875 or higher. These licenses are stored on the VMAX array.

Before starting this procedure, verify that the gatekeepers have been added and that the `symcfg discover` command has been run from the **Command Execution** tab.

To install VMAX-based licenses:

1. Open the vApp Manager.
2. Select **License Validation**.
3. In the eLicensing panel, click **Add License File** to open the Add eLicensing License box.
4. In the Upload License panel, click **Upload License File**.
5. In the file browser screen, navigate to the license file and click **Open**.
A copy of the license file is transferred to the appliance.
6. In the Add Symmetrix License panel, select the VMAX array on which to install the license file, and click **Install License**.

Installing host-based licenses

Host-based licenses are used mainly to license features on VMAX arrays running Enginuity versions lower than 5875. The one exception is the TimeFinder license, which is a host-based license, regardless of Enginuity level.

To install host-based licenses

1. Open the vApp Manager.
2. Select **License Validation**.
3. Type the license key (requires four characters per input box) and click **Validate**.

APPENDIX A

Technical notes

This appendix provides technical notes for advanced configuration of Unisphere for VMAX V8.0.3 and Unisphere for VMAX V8.0.3 Virtual Appliance (vApp) Manager.

Technical notes	74
Virtual Appliance Technical notes	76

Technical notes

The following technical notes apply to Unisphere for VMAX but not the Unisphere for VMAX Virtual Appliance (vApp) Manager.

Managing thin pools

It is recommended that thin pools contain DATA volumes of the roughly the same size.

SYMAPI server

If you want to change the SYMAPI server that Unisphere is pointing to, uninstall Unisphere, and then reinstall it.

During the install, you supply the new SYMAPI host name and network port number. The *Unisphere for VMAX Installation Guide* provides more information on these requirements.

Local replication management

Unisphere manages replication operations (TimeFinder family) through device groups. If the SMAS server does not have visibility to the device groups used to manage replication, you cannot perform any replication actions in Unisphere. Similarly, replication sessions managed exclusively by device files cannot be managed by Unisphere.

Advanced configuration settings

Unisphere provides a dialog box for setting storage system preferences, including debug settings. The debug settings are restricted to Unisphere administrators.

Use the debug settings only at the direction of EMC Customer Service.

Resetting the host system stable values

This section describes the steps to reset the host system SSVs using the CLI utility.

To reset the lockbox used by Unisphere for VMAX:

1. Start the SMAS service.

The steps to start and stop the server are described in EMC Unisphere for VMAX Installation Guide.

2. Find the *lockbox_password* used on install. For more information on the lockbox password, refer to *Unisphere for VMAX Installation Guide*.

3. Change directory location to:

Windows: `install_location\jboss\bin`

Linux: `install_location/jboss/bin`

4. Type the following command:

Windows: `service.bat updatessv lockbox_password`

Linux: `./initcst.sh updatessv lockbox_password`

5. Restart SMAS service.

Configuring idle user timeout

By default, the client's browser automatically logs out after 480 minutes (8 hours). To change this value, set the parameter value of the **sageIdleUserTimeoutInMinutes** context parameter (found in **install_dir\jboss\domain\deploy\smc.ear\smc.war\WEB-INF\web.xml** file) to any positive integer and reboot the server.

Alerts

By default, most Unisphere status alerts are disabled. *Managing alert policies* in the Unisphere for VMAX help includes instructions on enabling them.

Protecting against POODLE SSLv3 vulnerability

To protect your system from the Padding Oracle On Downgraded Legacy Encryption vulnerability, ensure that following is set in your browser:

- ◆ SSL v3 protocol is disabled
- ◆ TLS protocol is enabled

For instructions, refer to the documentation for your browser.

Virtual Appliance Technical notes

The following technical notes are specific to the Unisphere for VMAX Virtual Appliance (vApp) Manager.

Setting the LDAP user

When LDAP is already configured from Unisphere for VMAX, LDAP users need to be added to vApp Manager as an admin. This process requires logging into vApp Manager before disabling the local directory from Unisphere for VMAX.

Unisphere for VMAX local users will not be visible in vApp Manager.

Gatekeeper volumes

For ESX V4.0 and earlier, vApp Manager does not allow more than 14 gatekeeper volumes to be added to the Virtual Appliance. Attempting to add more than 14 gatekeepers returns an error message.

Host ESX Server configuration

Host ESX Server authentication is validated each time you select the **Gatekeeper Config** tab. If the authentication fails, the host ESX Server login credentials and hostname information is removed from the virtual appliance records and must be added again.

Unisphere daemon service

When you shutdown the SMAS daemon service from vApp Manager, you are prompted to terminate the browser session. After a few minutes, start a new web session.

Server hostname requirement

For the virtual appliance to resolve a hostname, only use the fully qualified hostname (as entered in DNS server) while configuring nethosts and ESX Servers (for adding gatekeeper volumes).

SSL certificate generation

The virtual appliance generates an SSL certificate (storsrvd - client/server setup) during the initial boot after the IP address is provided, and during every IP change or reboot.

Changing the IP address

Stop all daemons with vApp Manager before changing the IP address of the appliance.

SYMCLI commands executed/submitted as root

When using vApp Manager with the seconfig account, SYMCLI commands are executed/submitted as root.

Least privileged permission requirements

Consult the appropriate VMware documentation for guidance on the least privileged permissions required to deploy a virtual appliance.

Adding gatekeeper volumes

After adding gatekeeper volumes to the virtual appliance, restart the SMAS daemon from vApp Manager; otherwise, the Unisphere for VMAX GUI will not be able to see the attached volumes.

APPENDIX B

Security features

This appendix provides an overview of the features used to secure access to Unisphere for VMAX and VMAX arrays. The Unisphere for VMAX help system contains specific configuration procedures required to enable these features. References to those procedures are provided where appropriate.

Authentication	80
Authorization	81

Authentication

Unisphere for VMAX supports the following types of authentication:

- ◆ **Windows** (local and domain-based): Users log in by specifying the Windows domain, username and password (if they have a Windows account on the SMAS server).
- ◆ **LDAP**: Users login with their LDAP-SSL username and password (if they have a user account stored on a LDAP-SSL server).

To use this method, a Unisphere Administrator or SecurityAdmin sets up LDAP-SSL authentication in Unisphere for VMAX. The Unisphere for VMAX Online Help contains instructions on performing these tasks.

- ◆ **Local Unisphere users**: Users login with their Unisphere username and password (if they have a local Unisphere user account).

To use this method, a Unisphere Initial Setup User, Administrator, or SecurityAdmin creates a local Unisphere user account for the user. Local user accounts are stored locally on the SMAS server host and work in much the same way as the other methods to validate user credentials. The Unisphere for VMAX Online Help contains instructions on performing these tasks.

- ◆ **X.509 certificate-based user authentication**: Certificate-based user authentication using X.509 certificates is supported on fresh installations on Windows and Linux servers. You can use a certificate issued by a trusted public third-party certificate authority (CA) to authenticate your identity when using the Unisphere for VMAX web client or REST API interfaces. The use of digital identity smartcards such as Common Access Card (CAC) and Personal Identity Verification (PIV) as part of a multi-factor authentication process is also supported.

Authorization

User authorization is a tool for restricting the management operations that users can perform on a VMAX array. By default, authorization rules on a VMAX array are enabled for Unisphere users, regardless of whether authorization has been enabled on the VMAX array.

When configuring user authorization, an **Administrator** or **SecurityAdmin** maps individual users or groups of users to specific roles, which determine the operations the users can perform.

The state of authorizations on a VMAX array determines the privileges a Unisphere Initial Setup User has on the system. The following details the relationship between the Initial Setup User and VMAX authorizations:

- ◆ If VMAX authorization is enabled, authorization rules are always enforced (meaning, the Initial Setup User could theoretically be locked out if no authorization rule exists for the user).
- ◆ If VMAX authorization is disabled and there are no authorization rules on the storage system, the Initial Setup User is granted Admin privileges.
- ◆ If VMAX authorization is disabled and there are no Admin or Security authorization rules on the storage system, the Initial Setup User is granted Admin privileges – other rules are enforced as defined.
- ◆ If VMAX authorization is disabled and Admin or SecurityAdmin authorization rules are defined on the storage system, if the Initial Setup User does not have an authorization rule explicitly defined, the Initial Setup User has no permissions – all other rules are enforced as defined.

User roles

The following list summarizes the available roles. The Unisphere for VMAX Online Help contains more information on the permissions associated with each role.

- ◆ **None** — Provides no permissions.
- ◆ **Monitor** — Performs read-only (passive) operations on a VMAX array excluding the ability to read the audit log or Access Control definitions.
- ◆ **StorageAdmin** — Performs all management (active or control) operations on a VMAX array in addition to all Monitor operations. This role does not allow users to perform security operations.
- ◆ **Administrator** — Performs all operations on a VMAX array, including security operations in addition to all StorageAdmin and Monitor operations.
- ◆ **SecurityAdmin** — Performs security operations on a VMAX array in addition to all Monitor operations.
- ◆ **Auditor** — Grants the ability to view, but not modify, security settings for a VMAX array (including reading the audit log, symacl list, and symauth) in addition to all Monitor operations. This is the minimum role required to view the VMAX audit log.
- ◆ **Perf Monitor** — Performs the same operations as a monitor, with the addition of being able to set performance alerts and thresholds.

- ◆ **Initial Setup User** — Defined during installation, this temporary role provides administrator-like permissions for the purpose of adding local users and roles to Unisphere. For more information on the Initial Setup User, see [Unisphere Initial Setup User](#) or the online help.

Individual and group roles

Users gain access to a VMAX array or component either directly through a role assignment and/or indirectly through membership in a user group that has a role assignment.

User groups enable administrators to assign roles to multiple users simultaneously. User groups are created on the SMAS server according to its operating system and assigned roles with Unisphere.

If a user has two different role assignments (one as an individual and one as a member of a group), the permissions assigned to the user are combined. For example, if a user is assigned a **Monitor** role and a **StorageAdmin** role through a group, the user is granted **Monitor** and **StorageAdmin** rights.

User IDs

The following list summarizes the SYMAPI format for user and role creation. This format appears in the footer bar of the Unisphere GUI, but not in the user or role list views or creation wizard.

Users and user groups are mapped to their respective roles by IDs. These IDs consist of a three-part string in the form:

Type:Domain\Name

Where:

<i>Type</i>	Specifies the type of security authority used to authenticate the user or group. Possible types are:
L	Indicates a user or group authenticated by LDAP. In this case, Domain specifies the fully qualified name of the domain controller on the LDAP server. For example: <code>L:example.com\Legal</code> Indicates that user group Legal logs in through domain controller example.com. After they have been configured, individual LDAP users and groups can log in to Unisphere for VMAX using a simple username or simple group name respectively. An example is Legal.
C	Indicates a user or group is authenticated by the SMAS server. <code>C:Boston\Finance</code> Indicates that user group Finance logs in through Unisphere server Boston.
H	Indicates a user or group is authenticated by logging in to a local account on a Windows host. In this case, <i>Domain</i> specifies the hostname. For example, the following indicates that user mason logs in on host jupiter. <code>H:jupiter\mason</code>

D Indicates a user or group authenticated by a Windows domain. In this case, *Domain* specifies either the simple domain name (for individual users) or the fully qualified domain name (for groups). For example the following indicates user **putman** logs in through Windows domain **sales**.

`D:sales\putman`

After they have been configured individual Windows domain users can log in to Unisphere using a simple username. An example is **putman**. Group Windows domain users can log in to Unisphere using either a simple domain name and group name or a fully qualified domain name and group name.

V Indicates a user or group authenticated by a virtualization domain. In this case, *Domain* specifies the virtualization domain name.

Name Specifies the username relative to that authority. It cannot be longer than 32 characters and spaces are allowed if the username is delimited with quotes. Usernames can be for individual users or user groups.

Within role definitions, IDs can be either fully qualified (as above), partially qualified, or unqualified. When the *Domain* portion of the ID string is an asterisk (*), the asterisk is treated as a wildcard, meaning any host or domain.

When configuring group access, the Domain portion of the ID must be fully qualified.

Examples:

`D:ENG\jones` Fully qualified path with a domain and username (for individual domain users).

`D:ENG.example.com\Example Group` Fully qualified domain name and group name (for domain groups).

`D:*jones` Partially qualified that matches username jones with any domain.

`H:HOST\jones` Fully qualified path with a hostname and username.

`H:*jones` Partially qualified that matches username jones within any host.

`jones` Unqualified username that matches any jones in any domain on any host.

- ◆ If an exact match (for example, `D:sales\putman`) is found, that is used.
- ◆ If a partial match (for example, `D:*jones`) is found, that is used.
- ◆ If an unqualified match (for example, `putman`) is found, that is used.
- ◆ Otherwise, the user is assigned a role of None.

APPENDIX C

Replacing the Unisphere for VMAX and CA server certificates

At installation, the installer generates and installs the self-signed server certificate used for HTTPS transport-level security. This appendix describes the steps to replace this certificate with the one issued by a trusted third-party.

Step 1: Obtaining the keystore password

You need the keystore password to complete the following procedure. The keystore password is generated during installation and is stored in the following file:

```
install_dir/SMAS/jboss/domain/configuration/domain.xml.init
```

Open the file and search for "ssl key-alias="tomcat" password=".

Generate a new JKS key/trust store file with the server certificate alias "tomcat" and key/store password as described above. The key/trust store must contain all CA certificates needed for full certificate trust chain verification.

Step 2: Generating a certificate request

To generate a certificate request:

1. For **Windows**, enter the following commands:

```
cd install_dir\SMAS\jboss\standalone\configuration
install_dir\SMAS\jre\bin\keytool -certreq -alias tomcat^
-file tomcatcert.csr -keystore Keystore
```

For **Linux**, enter the following commands:

```
cd install_dir/SMAS/jboss/standalone/configuration
install_dir/SMAS/jre/bin/keytool -certreq -alias tomcat \
-file tomcatcert.csr - keystore Keystore
```

2. When prompted to do so, enter the keystore password.

A file named tomcatcert.csr is generated. This file is a certificate request.

If the Failed to establish chain from reply error message appears, your CA is not in the keystore's default trust chain (the keystore comes with a default set of trusted CAs).

To import a trusted certificate into your keystore:

- a. For **Windows**, enter the following commands:

```
cd install_dir\SMAS\jboss\standalone\configuration
install_dir\SMAS\jre\bin\keytool -import -alias root^
-file Trusted_CA_cert_file -keystore keystore -trustcacerts
```

For **Linux**, enter the following commands:

```
cd install_dir\SMAS\jboss\standalone\configuration
install_dir\SMAS\jre\bin\keytool -import -alias root /
-file Trusted_CA_cert_file -keystore keystore -trustcacerts
```

3. Send the generated certificate request file, `tomcatcert.csr`, to your CA for validation. After the request file has been validated, you should receive a signed certificate back from CA.

Step 3: Importing the CA-signed certificate into the keystore

Starting with HYPERMAX OS Q1 2015 SR, you can import CA-signed certificates using the CLI or scripts.

In the following instructions:

- ◆ `signed_certificate_file` is the signed certificate you received from your CA.
- ◆ `password` is the password obtained in [Step 1: Obtaining the keystore password](#) on the previous page
- ◆ `CA_certificate_alias` is `tomcat`.

Using the CLI to import the CA-signed certificate into the keystore

To import the CA-signed certificate into the keystore using the CLI:

1. Stop the SMAS server. For instructions, refer to [Starting and stopping the SMAS service](#) on page 34.
2. For **Windows**, enter the following commands:

```
cd install_dir\SMAS\jboss\standalone\configuration
install_dir\SMAS\jre\bin\keytool -import -alias tomcat^
-file signed_certificate_file keystore keystore -trustcacerts
```

For **Linux**, enter the following commands:

```
cd install_dir/SMAS/jboss/standalone/configuration
install_dir/SMAS/jre/bin/keytool -import -alias tomcat \
-file signed_certificate_file keystore keystore -trustcacerts
```

3. When prompted, enter the keystore password.

Using scripts to import the CA-signed certificate into the keystore

To import the CA-signed certificate into the keystore using scripts:

1. Stop the SMAS server. For instructions, refer to [Starting and stopping the SMAS service](#) on page 34.
2. For **Windows**, enter the following commands:

```
cd install_dir\SMAS\jboss\bin
service.bat importcert password CA_certificate_alias^
signed_certificate_file
```

3. For **Linux**, enter the following commands:

```
cd install_dir/SMAS/jboss/bin
```

```
initcst.sh importcacert password CA_certificate_alias \  
signed_certificate_file
```

Step 4: Start the SMAS server

Start the SMAS server. For instructions, refer to [Starting and stopping the SMAS service](#) on page 34.

APPENDIX D

Configuring SMAS to work in z/OS

This appendix describes how to configure the Symmetrix Management Application Server to work in a z/OS environment.

Configuring SMAS to work in z/OS	90
--	----

Configuring SMAS to work in z/OS

These instructions apply to systems running Enginuity 5876 or higher. Unisphere must be running on a qualified open system server that points to an API server that is running on a mainframe logical partition (LPAR).

To configure SMAS to work in a z/OS environment:

1. Shut down the services as described in [Starting and stopping the SMAS service](#) on page 34.
2. Do the following on the mainframe side:
 - a. Install Solutions Enabler 8.0 or a later release on your LPAR. Refer to the *EMC Solutions Enabler Installation Guide* for instructions.
 - b. Start the API server, API base daemon, GNS daemon, and event daemon on the LPAR.
3. Do the following on the qualified open system server:
 - a. Make the following changes in the file called `daemon_option`, which is located under `install_dir/symapi/config` on Linux, or `install_dir\symapi\config` on Windows:
 - Enable the `DMN_REMOTE_MODE` parameter.
 - Set the `DMN_REMOTE_ADDRESS` parameter to the mainframe IP address.
 - b. Start the STP daemon (`storstd`).
 - c. Open the `ejb-jar.xml` file, which is found in one of the following locations:

For Linux:

```
install_dir/SMAS/jboss/domain/deploy0/domain-symm0.ear/
domain-symm-ejb.jar/META-INF
```

For Windows:

```
install_dir\SMAS\jboss\domain\deploy0\domain-symm0.ear\
domain-symm-ejb.jar\META-INF
```
4. In the `ejb-jar.xml` file, make the following updates:
 - Set the value of the `StatsConnectionType` entry to `SYMAPI_CONN_TYPE_LOCAL`.
 - Set the value of the `StatsNodeName` entry to the IP address of the Unisphere/API server.

The following extract is from a sample `ejb-jar.xml` file:

```
<!--The following two entries are only of interest if -->
<!--we're obtaining stats from the SE STP daemon on an -->
<!--alternative host other than the localhost -->
<!--(which is the case in mainframe environments). Otherwise, -->
<!--we use the same settings as above so there's -->
<!--no need to configure.-->
<env-entry>
    <env-entry-name>StatsConnectionType</env-entry-name>
    <env-entry-type>java.lang.String</env-entry-type>
    <env-entry-value>SYMAPI_CONN_TYPE_LOCAL</env-entry-value>
</env-entry>
```

```
<env-entry>
  <env-entry-name>StatsNodeName</env-entry-name>
  <env-entry-type>java.lang.String</env-entry-type>
  <env-entry-value>198.51.100.90</env-entry-value>
</env-entry>
```

5. Restart the services as described in [Starting and stopping the SMAS service](#) on page 34.
6. Launch the Unisphere for VMAX console. For more information, see [Launching Unisphere for VMAX](#) on page 35.

